

huggy

“ Care for future ”

fun trike



www.huggybabies.com


ir huggy

" Care for future "


fun trike

In order to meet different functions,
the following 3 forms are available.


FEATURES

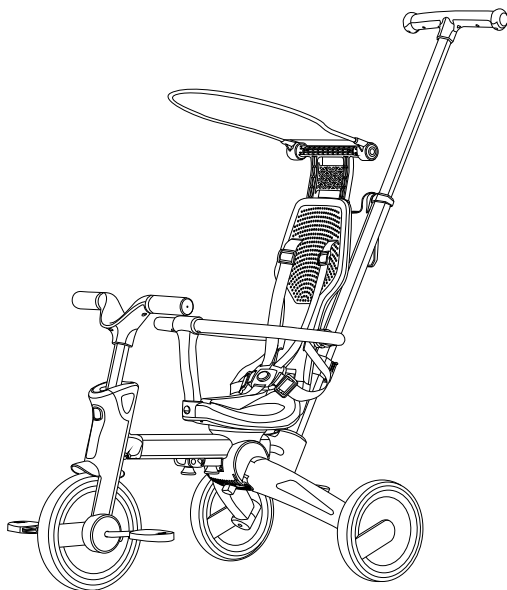

Tricycle with push handle mode

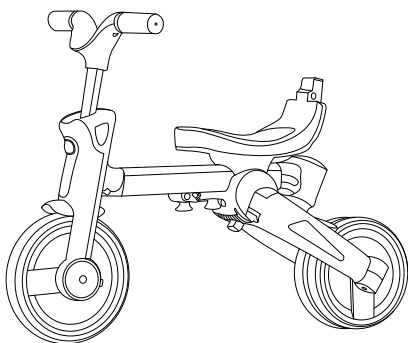

Balance bike modes

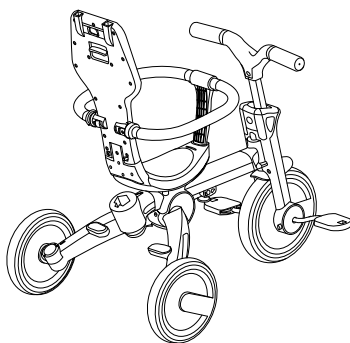


Tricycle modes



WARNING


- Users and guardians are advised to read the instruction manual carefully before use and to keep it for future reference, as it may affect the safety of the child if used in accordance with the instructions.
- Do not leave your child unattended while riding.
- The applicable age is 18-36 months.
- The maximum load capacity is 20kg.
- This tricycle may have potentially sharp edges, pointy points or small parts before assembly and must be assembled by the adults. Children must wear shoes and protective gear and helmets, and fasten safety belt properly while riding.
- It is forbidden to play in dangerous places such as rugged streets, street roads, slopes, pools, etc., as it may cause traffic accidents or drowning.
- Always check the tricycle status before use, pay attention to the locking system and make sure it work properly.
- Overloading or incorrect use, or the use of incorrect spare parts, may cause damage to the tricycle or make it unsafe
- Stop using immediately if it is damaged or unstable.
- Do not hang anything on the handlebar of as this may affect the stability of the tricycle.
- Keep away from fire.
- The applicable torque force of tighten parts is recommended $>8 \text{ kgf.cm}$, $<16 \text{ kgf.cm}$
- Executive Standard: GB 6675.1-2014; GB 6675.2-2014; GB 6675.3-2014; GB 6675.4-2014; GB 14747-2006
- The package contains important information to keep.
- Product Name: Multifunctional toy bike
- Model No.: S02-5

FUNCTIONAL PARTS

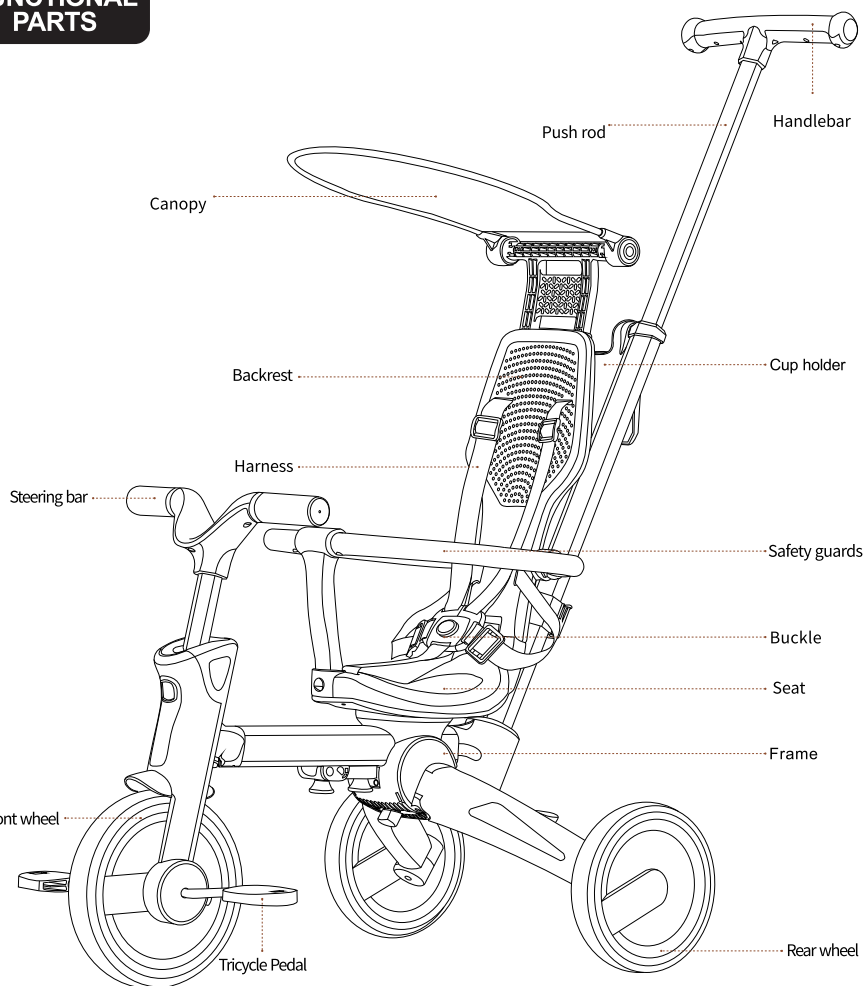


SPECIAL ANNOUNCEMENT

- The illustrations in this manual are used to illustrate the operation and structure of the product, when there is a small difference between the actual product and the illustration, please subject to the actual product.

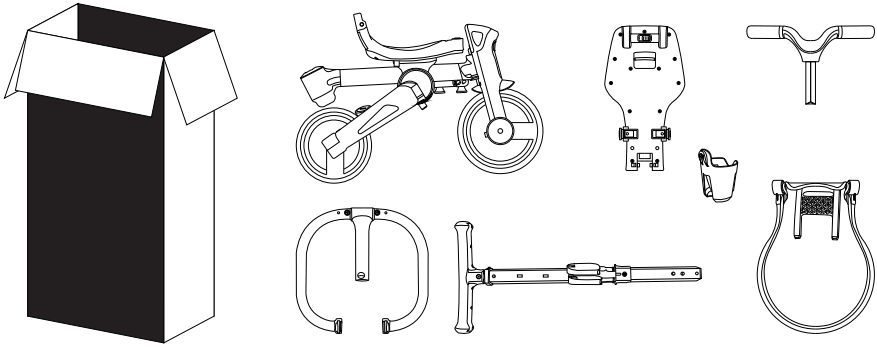


△ Open the carton, Take out the frame, backrest, Steering bar, Safety guards, Canopy, Push rod, Cup holder.

Unfold the frame

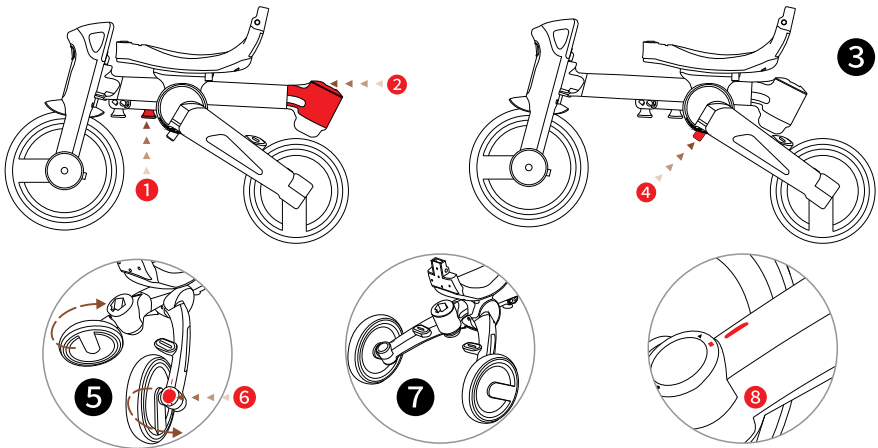


△ Facing the frame of the stroller, use your left/right thumb and index finger to grip the pull handle (as shown in Figure ①) and pull it downwards without releasing. While doing so, use your other hand to grasp (the position indicated in Figure ②) and pull it towards the right. Once completed, it should look like Figure ③. Next, use your left and right index fingers to press down on (the position indicated in Figure ④) without letting go. Then, spread your thumbs outwards (as shown in Figure ⑤) and press them downwards (on the position indicated in Figure ⑥) while still holding. With your free hand, pull the wheel outwards. Once completed, it should resemble Figure ⑦. Note!!! When snapping the wheel back into place, ensure it aligns with the red marker and square graphic ■ as shown in Figure ⑧.

Installation Steering bar -----

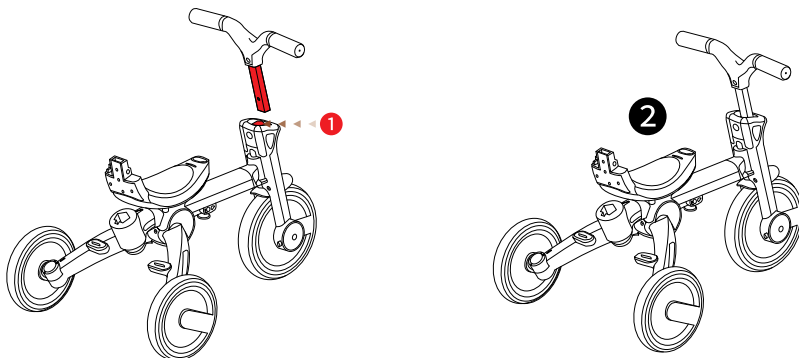


- △ Hold the steering bar and align them with the hole on head and insert them (Figure 1). Hear a sound "click" indicates that it is in place, after finished as shown in Figure 2.

Installation pedal -----

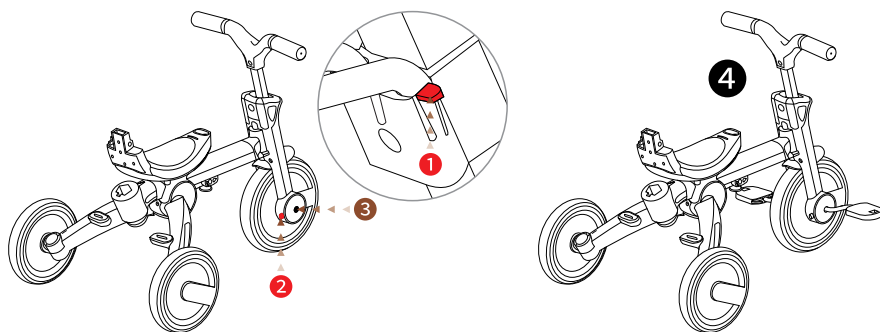


- △ Press the button on pushrod and pull out the pedal (Figure 1), press and hold the button (shown in figure 2), then align the axle of pedal with the hole (shown in figure 3), insert and rotate the axle into hole, until the pedal can't be rotated then loose hand from button (figure 2). After finished the tricycle should be like figure 4. **Tips:** This mode is suitable for older child who can bike independently.
- △ **Note!!!** The pedal axle is divided into two sections, one is idling position (suitable for younger children/or resting feet) and the other is clamping position (suitable for riding mode).

Installation push bar

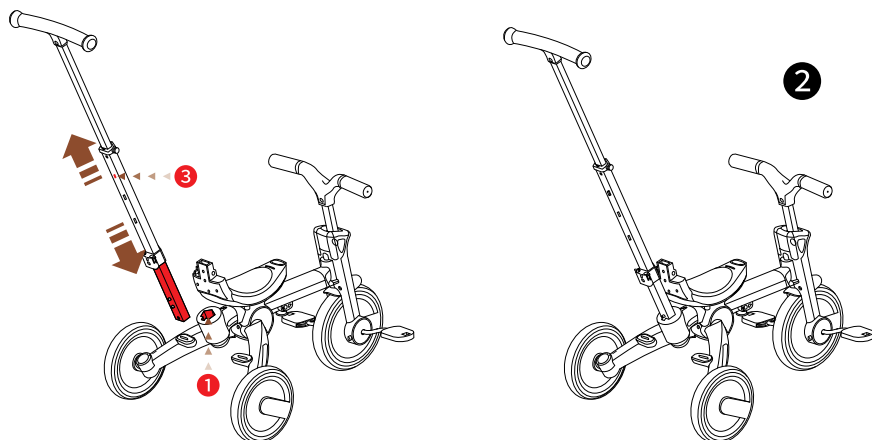


△ Hold the pushrod and align them with the hole on frame and insert them (Figure ①). Hear a sound "click" indicates that it is in place, after finished as shown in Figure. ②, Tips: This mode suitable for older child who can bike independent, The pushrod has 3 adjustment position, use the thumb/forefinger press the bottom to bottom (Figure ③) without loose hand, and then push the pushrod up or down. Tips! Repeat this step with your thumb/forefinger press the bottom to adjust the height position.

Installation backrest

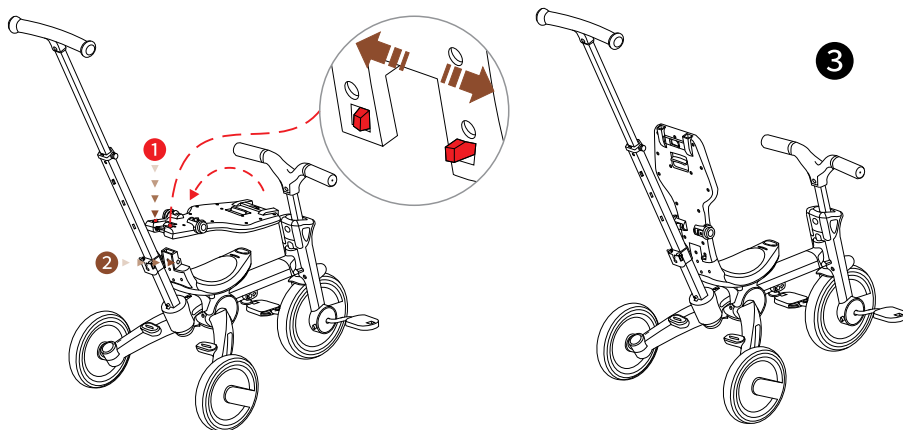


△ Move the circlip outwards with the left and right thumbs (Figure ①) and align it with the seat hole (Figure ②), Then turn the backrest towards the rear wheels and hear a "click" sound to indicate that the it is in place, as shown in Figure ③.

Installation Safety guards

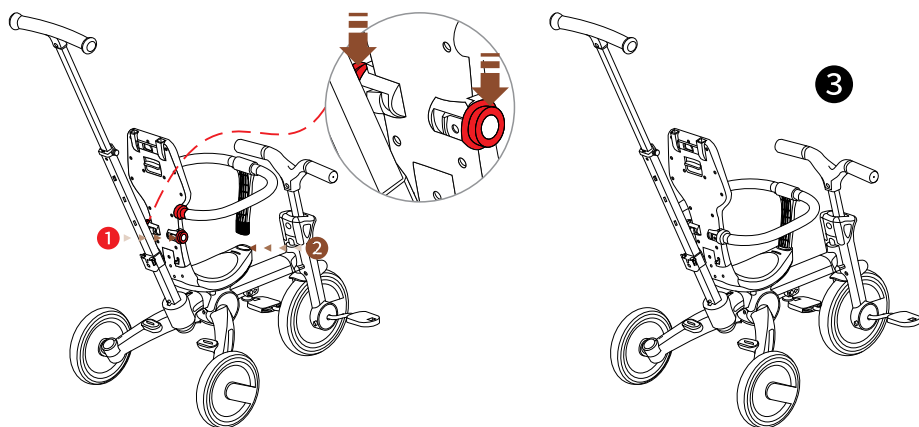


- △ Hold the safety guards and press it down ,according to the red mark figure ❶. Hear a sound "click" that indicate the safety guards is in place.
- △ Press down the crotch bar according to the number ❷ mark. Hear a sound "click" the indicate the crotch bar is in place, the completed product as shown in Figure ❸.

Installation Canopy

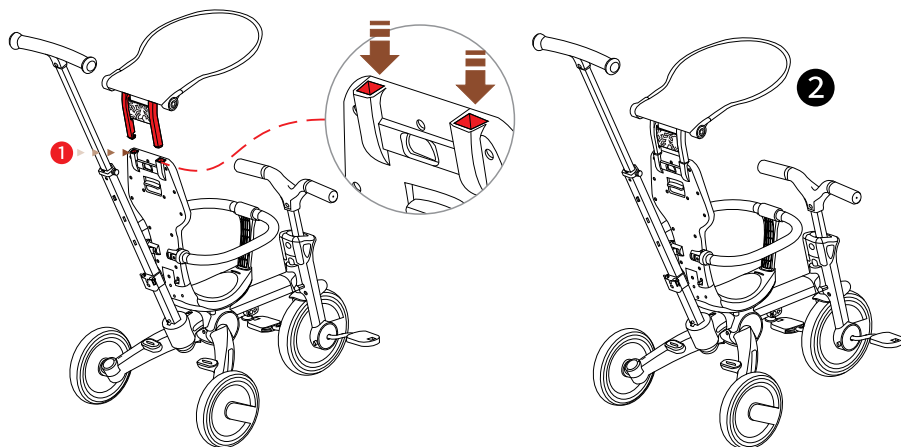


- △ Use hand hold the canopy then align the canopy stay with hole of backrest and insert the canopy stay into hole (figure ❶), hear a sound "click" that indicate it is in place, the completed status as shown in figure ❷. Tips! This mode suitable for younger child to assist bike.

Installation Cup Holder

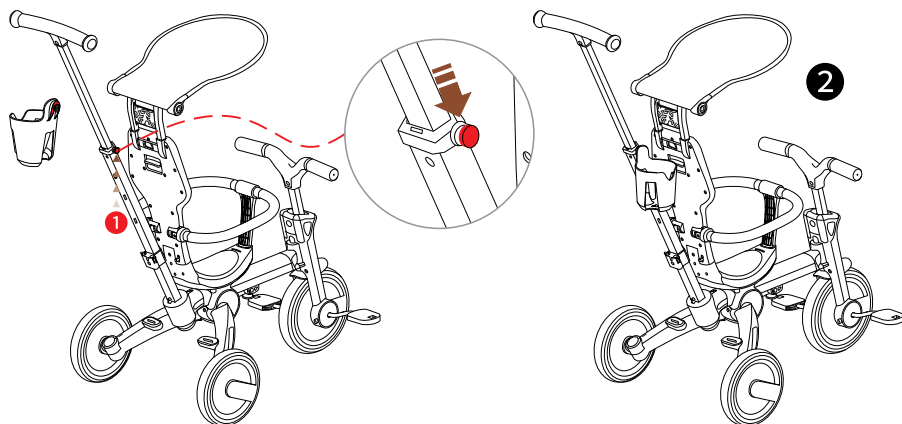

△ Use hand hold the cup holder then hang it on push rod (figure 1), hear a sound "click" that indicate it is in place, the completed status as shown in figure 2. Tips! This mode suitable for younger child to assist bike.

Seat Reversing

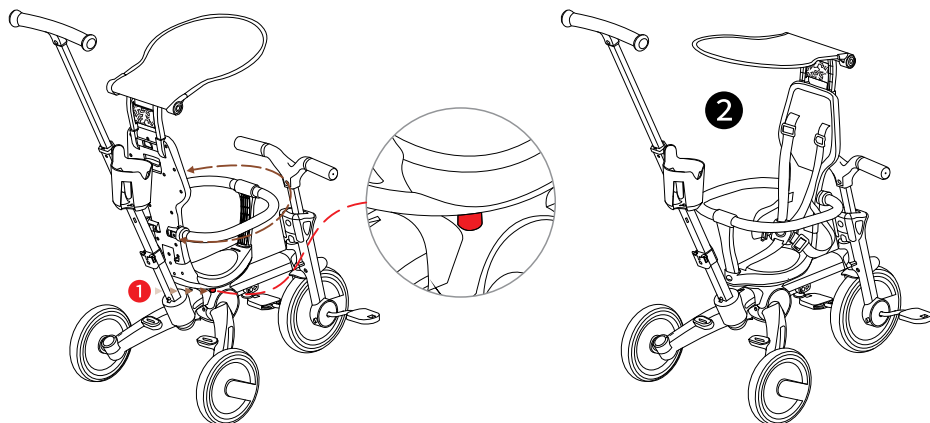


△ Hold the button figure 1 with index finger not loose hand (until it reaches an arbitrary angle then loose hand), the other hand turn the seat 180/-180 degree, the completed status as shown in figure 2. Warning!!! Remember that when using the seat reversal, do not turn the seat to a non-180 degree (The seat must align with the direction of the push rod and the steering bar), otherwise it is easy to happen tipover.




- ①Steering fold button
- ②⑨Safety guards detach button
- ③Pedal storage button
- ④Seat forward and backward adjustment button
- ⑤Rear wheels support holder folding and unfolding button
- ⑥Harness buckle
- ⑦Push rod detach button
- ⑧Backrest detach button
- ⑩Push rod position adjustment button
- ⑪Backrest adjustment button
- ⑫Canopy detach button
- ⑬Steering bar detach button
- ⑭Pedal detached/install button
- ⑮Rear wheels adjustment button
- ⑯Seat rotation adjustment button

Folding steps

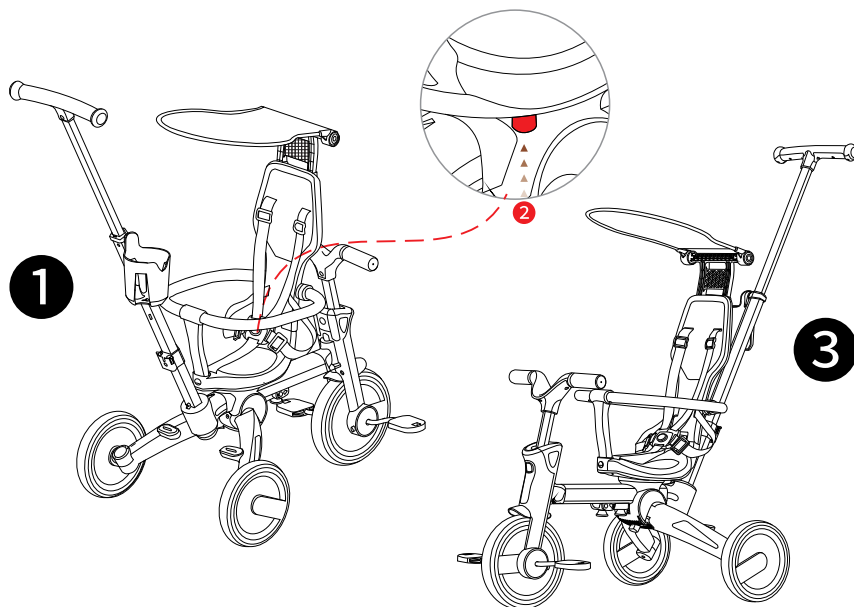


1. If the stroller is in the state shown in Figure ❶ before folding, first press and hold the seat rotation adjustment button (at the position shown in Figure ❷ or refer to item ❶ in the function button instructions on page 10) with your index finger until the end without releasing (you can release after rotating to any angle), and use your other hand to rotate the rail 180° to the left/right. The result is shown in Figure ❸.
2. If the stroller is already in the state shown in Figure ❸ before folding, ignore step 1 above.
3. Removing the cup holder: Refer to the instructions for installing the cup holder on page 9, and simply lift the cup holder to remove it.
4. Removing the canopy: Refer to the instructions for installing the canopy on page 8, pull the canopy removal button to the right (refer to item ❶ in the function button instructions on page 10), and then lift the canopy to remove it.
5. Removing the safety guard: Refer to the instructions for installing the rail on page 8, pull the rail removal button with your thumb all the way down without releasing, then use your other hand to lift the rail. Hold the rail removal button down with your index finger while lifting the rail with your other hand (refer to items ❶ and ❷ in the function button instructions on page 10) to remove it.
6. Removing the backrest: Refer to the instructions for installing the backrest on page 7, use your thumbs to push the retaining clips outwards (refer to item ❶ in the function button instructions on page 10) all the way and immediately lift the backrest to remove it.
7. Removing the push bar: Refer to the instructions for installing the push bar on page 7, press and hold the push bar removal button (refer to item ❷ in the function button instructions on page 10) all the way down with your thumb or index finger, and then use your other hand to lift the push bar to remove it.
8. Removing the footrest: Refer to the instructions for installing the footrest on page 6, press and hold the footrest button (refer to item ❶ in the function button instructions on page 10) all the way down with your thumb, and then use your other hand to pull out the footrest to remove it.
9. Removing the handlebar: Refer to the instructions for installing the handlebar on page 6, press and hold the handlebar removal button (refer to item ❷ in the function button instructions on page 10) all the way down with your thumb, and then use your other hand to lift the handlebar to remove it.
10. Folding the rear wheels: Refer to the instructions for unfolding the frame on page 5, press and hold the rear wheel adjustment button (refer to item ❶ in the function button instructions on page 10) all the way down with your thumb, and then use your other hand to rotate the wheels inward to the fullest extent.
11. Folding the frame: Refer to the instructions for unfolding the frame on page 5 (also refer to items ❶ and ❶ in the function button instructions on page 10).

Completed folding -----

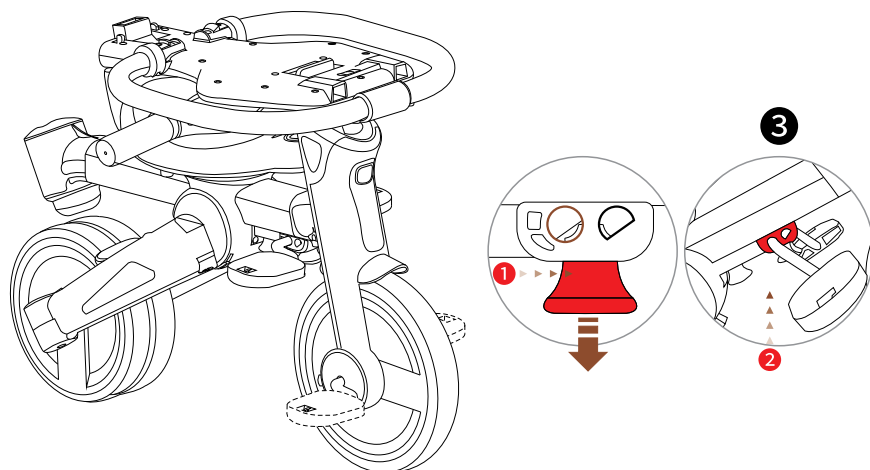


⚠ Warm Tips: When storage the pedal, pull-down the pedal storage button and do not loose hand(Figure ①),Then the other hand put the pedal insert to the hole(Figure ②).Tips!!!Please reconize the axle shape should be matched the position of hole(refer to brown hole with half cut),shown in figure ③.


Using Restraint System -----

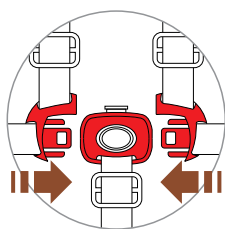

Locking

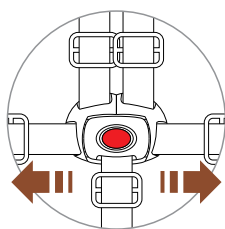

Release

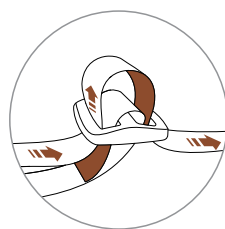

Adjusting Length

- ⚠ Locking: Insert the plug into the safety socket until you hear a "click" that indicating it is locked.
- ⚠ Release: Press the center button in the safety buckle to release harness system.
- ⚠ Adjusting Length: Pull the strap in the direction of the arrow to lengthen it, and pull the strap in the opposite direction of the arrow to tighten it.
- ⚠ Attention!!! Always use the restraint system when child is seat.




Front facing mode




Rear facing mode

- △ Front facing mode: As shown in the above figure (refer to pages 5-9 for installation instructions), simply remove the pedal is fine (refer to page 11 for removal instructions).
- △ Rear facing mode: As shown in the above figure (refer to pages 5-9 for installation instructions), simply remove the pedal is fine (refer to page 11 for removal instructions), then reversing the seat (refer to page 9 Installation Seat Reversing).

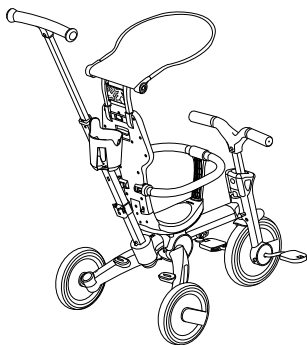


Assisted Riding Mode for Toddlers

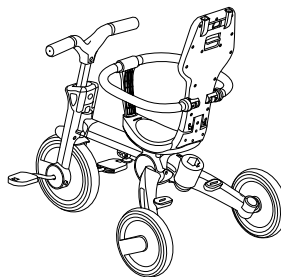


Riding Mode for Toddlers

- △ Assisted Riding Mode for Toddlers: As shown in the above figure (refer to pages 5-9 for installation instructions).
- △ Riding Mode for Toddlers: As shown in the above figure (refer to pages 5-8 for installation instructions), if the toddler's feet cannot reach the pedals, please refer to page 5 (instructions on fold and unfolding the support), and adjust the seat forward or backward using the lever (refer to page 10 for functional button descriptions ④).

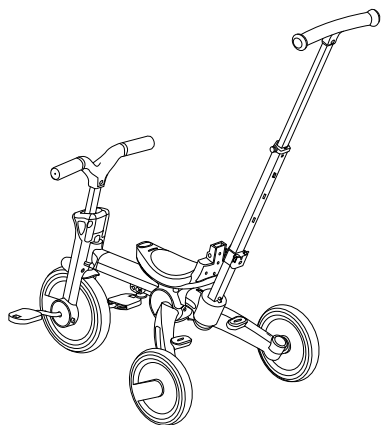


Assisted Riding Mode for Older Children

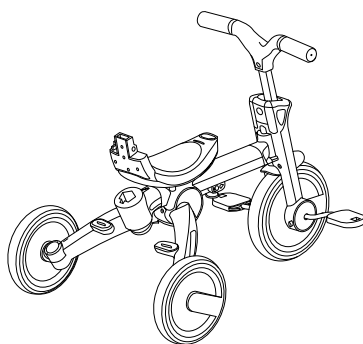

Riding Mode for Older Children

△ Assisted Riding Mode for Older Children: As shown in the above(refer to pages 6-7 for installation instructions).

△ Riding Mode for Older Children: As shown in the above(refer to page 6 for installation instruction).

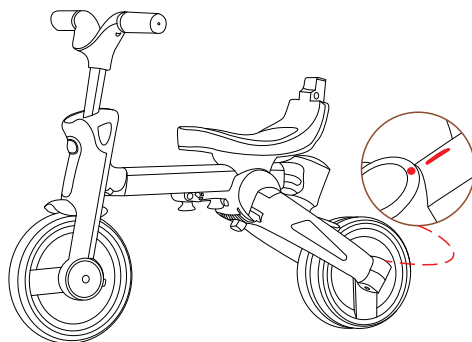

Balance Bike Mode

△ Balance Bike Mode: As shown in the above figure(refer to pages 5-6 for installation instructions),Special Note!It is necessary to align with the ● markings on the wheels.

MAINTENANCE

- Please check if the components (screws and rivets) are secure and in good condition before use, and please immediately stop use if any parts are damaged.
- Avoid using or storing for a long time in a humid, cold or high temperature environment, otherwise it may lead to rusting and aging of the parts, which may affect the lifespan of the product or cause danger.
- Do not use bleach when cleaning and avoid contact water to metal parts to avoid rusting, as it may affecting the lifespan of product.
- Please always check status of tricycle, and keep maintaining and fix if there is any problems.
- Each rotating part (wheel joints, etc.) can not be filled with viscous mechanical lubricant, a small amount of diluted lubricant can be added. As lubricating oil may cause adhesion of debris and affect the rotation.

BAKIM

- Lütfen kullanmadan önce bileşenlerin (vidalar ve perçinler) güvenli ve iyi durumda olup olmadığını kontrol edin ve herhangi bir parçanın hasar görmesi durumunda lütfen kullanımı derhal durdurun.
- Nemli, soğuk veya yüksek sıcaklıklı ortamlarda uzun süre kullanmaktan veya saklamaktan kaçınınız, aksi takdirde parçaların paslanmasına ve eskimesine yol açabilir, bu da ürünün kullanım ömrünü etkileyebilir veya tehlike yaratabilir.
- Temizlik sırasında çamaşır suyu kullanmayınız ve paslanmayı önlemek için metal kısımların suyla temas etmesinden kaçınınız, aksi takdirde ürünün kullanım ömrü etkilenebilir.
- Lütfen üç tekerlekli bisikletinizin durumunu her zaman kontrol edin ve herhangi bir sorun varsa bakımını yapıp düzeltin.
- Her dönen parça (tekerlek mafsalları, vb.) viskoz mekanik yağlayıcı ile doldurulamaz, az miktarda seyreltilmiş yağlayıcı eklenebilir. Yağlama yağı döküntülerin yapışmasına neden olabilir ve dönüşü etkileyebilir.

GARANTİ BELGESİ

Seri: 4A

MALIN
Cinsi : **3 TEKER BİSİKLET**
Markası : **HUGGY**
Modeli : **FUN TRIKE**

SATICI FİRMANIN
Ünvanı:
Adresi :

ALICININ
Adı Soyadı :
Adresi :
Tel :

Fatura No
Kaşe ve İmza

Malın Tüketicieye
Teslim Tarihi :
Teslim Yeri :

Azami Tamir Süresi : **20 İş Günü**
Garanti Süresi : **2 Yıl**

Üretici / İthalatçı Firma:

Ünvanı : Kurt Grup Dış Ticaret A.Ş.
Merkez Adres : 1. OSB 6. Cadde No:1 - SİVAS
Telefon : 0346 218 14 13
Faks : 0212 810 46 44

ÖNEMLİ NOTLAR:

Lütfen ürünü kullanmadan önce kullanım kılavuzunu dikkatli okuyunuz.
Garanti belgesi, sadece üründeki fabrikasyon üretim hatalarına kapsamaktadır.
Kararlanış, hasar görmüş yada üzerindeki bilgiler kapatılacak şekilde etiket yapıştırılmış garanti kartları geçersizdir.

huggy
"Care For Future"

GARANTİ ŞARTLARI

- Garanti süresi, malın teslim tarihinden itibaren başlar ve iki yıldır.
- Malın bütün parçaları dahil olmak üzere tamamı firmamızın garantisine kapsamındadır.
- Malın garanti süresi içerisinde arızalanması durumunda, tamirde geçen süre garanti süresine eklenir.
Malın tamir süresi en fazla 20 iş günüdür. Bu süre, mala ilişkin arızanın servis istasyonuna, servis istasyonunun olmaması durumunda, malın satıcısı, bayi, acentası, temsilciliği, ithalatçısı veya imalatçısından birisine bildirim tarihinde başlar.
Sanayi malının arızasının 10 iş günü içerisinde giderilmesi halinde, imalatçı veya ithalatçı; malın tamiri tamamlanıncaya kadar, benzer özelliklere sahip başka bir sanayi malını tüketicinin kullanımına tahsis etmek zorundadır.
- Malın garanti süresi içerisinde, gerek malzeme gerek işçilik, gerekse montaj hatalarından dolayı arızalanması halinde, işçilik masraflı, değiştirilen parça bedeli yada başka herhangi bir ad altında hiçbir ücret talep etmeksizin tamiri yapılacaktır.
- Tüketicinin, ücretsiz onarım hakkını kullanması halinde malın; a) Garanti süresi içinde tekrar arızalanması, b) Tamir için gereken azami sürenin aşılması, c) Tamirin mümkün olmadığının, yetkili servis istasyonu, satıcı, üretici veya ithalatçı tarafından bir raporla belirlenmesi durumlarında; tüketici malın bedel iadesini, ayp oranında bedel indirimini veya imkanı varsa malın ayıpsız misli ile değiştirilmesini satıcıdan talep edebilir. Satıcı, tüketicinin talebini reddetmez.
Bu talebin yerine getirilmesi durumunda satıcı, üretici ve ithalatçı müteselsilen sorumludur.
- Malın ayıpsız misli ile değiştirilmesinin satıcı için orantısız güçlüğü beraberinde getirecek olması halinde tüketici, sözleşmeden dönme veya ayp oranında bedelden indirim haklarından birini kullanabilir. Orantısızlığın tayininde malın ayıpsız değeri, ayıbın önemi ve diğer seçilmiş haklara başvurma tüketicisi açısından sorun teşkil edip etmeyeceği gibi hususlar dikkate alınır.
- Tüketicinin sözleşmeden dönme veya ayp oranında bedelden indirim hakkını seçtiği durumlarda, satıcı, malın bedelinin tümünü veya bedelden yapılan indirim tutarını derhal tüketiciye iade etmek zorundadır.
- Tüketicinin malın ayıpsız misli ile değiştirilmesi hakkını seçmesi durumunda satıcı, üretici veya ithalatçının, malın ayıpsız misli ile değiştirilmesini talebinin kendilerine bildirilmesinden itibaren azami otuz iş günü içerisinde, bu talebi yerine getirmesi zorludur.
- Birinci fıkranın (c) bendinde belirtilen raporun, arızanın bildirim tarihinden itibaren o mala ilişkin azami tamir süresi içerisinde düzenlenmesi zorludur.
- Malın kullanma kılavuzuna yer alan hususlara aykırı kullanılması kaynaklı arızalar ve kullanım hatasından kaynaklanan arızalar garanti kapsamı dışındadır.
- Garanti süresi içerisinde, servis istasyonları tarafından yapılmasının zorunlu olduğu, imalatçı veya ithalatçı tarafından şart koşulan periyodik bakımlarda; verilen hizmet karşılığında tüketiciden işçilik ücreti veya benzeri bir ücret talep edilemez.
- Fabrikasyon hatalarından doğan arızaların tamirinde garanti kapsamının geçerli olabilmesi için, ürünün satıcı mağaza tarafından kaselemiş orijinal fatura ve garanti kartı ile servise getirilmesi veya gönderilmesi şarttır.
- Tüketiciler şikayet ve itirazları konusunda Tüketici Mahkemelerine ve Tüketici Hakem Heyetlerine başvurabilirler.
- Malın ayıpsız olduğunun anlaşılması durumunda tüketici;
a) Satılan geri vermeye hazır olduğunu bildirerek sözleşmeden dönme, b) Satılanı alıkoymuş ayp oranında satış bedelinden indirim isteme, c) Ayp bir masraf gerektirmediği takdirde, bütün masrafları satıcıya ait olmak üzere satılanın ücretsiz onarılması isteme, d) İmkân varsa, satılanın ayıpsız bir misli ile değiştirilmesini isteme, seçilmiş haklarından birini kullanabilir.

huggy
"Care For Future"

Kurt Grup Dış Tic. Ltd. Sti 1. OSB 2. Kısım 6. Cadde No:1
Merkez / Sivas Tel. : 0346 221 46 60 WhatsApp: 0 532 138 99 31
www.kurtgrupltd.com



“ Care for future “

www.huggybabies.com

Kurt Grup Dis Tic. Ltd. Sti 1. OSB 2. Kısım 6. Cadde No:1
Merkez / Sivas Tel. : 0346 221 46 60 WhatsApp: 0 532 138 99 31
www.kurtgrupltd.com