


Huggy Pie Otomatik Sallanır Anakucağı Beşik

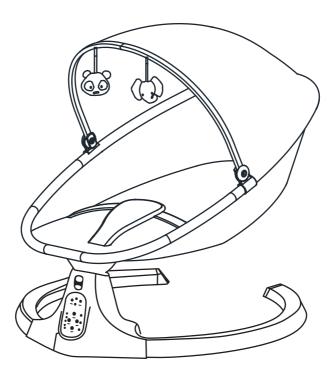

PD-B035

Please read this manual carefully before installation and use, otherwise it may affect the safety of your children





The index

Directory

Product specification

Know the product

Product specification

Product list

Assembly conditions

Safety instructions

Use the product

Function of remote control

Panel function

Matters needing attention

After-sales service



Product specification

Commodity	Multi-function electric swing
Product model	PD-B035
Input voltage	110-240V/50-60Hz 0.6A
Output voltage	5-6V ≤1000mA
Applicable age	0 to 24 months
Execution standard	EN16232
The date of production	Marked on package or product body
Warning	Do not use non-product adapters

\land \ttention

- 1) Non-rechargeable batteries cannot be charged.
- 2) Rechargeable batteries can only be charged under adult supervision.
- 3) Rechargeable battery should be taken out of the product before charging.
- 4) Different types of batteries or old and new batteries cannot be mixed.
- 5) The battery shall be placed in the correct polarity.
- 6) Depleted batteries should be removed from the product
- 7) The power terminal can not short circuit.

8). Do not use adapters not provided by the Product to power the product. The input voltage of the adapter is 110-240V/50-60Hz0.6A.Output store pressure is 5-6V ≤1000mA.

- 9) When using adapters, keep them away from children.
- 10) The adapter used by the swing shall be regularly checked for safety socket, accessories and other parts, and shall be stopped in case of any damage.




Component description

Please check the quantity of the contents before use. If there is any missing parts, please contact the purchasing store

Serial number	The name	The number	Serial number	The name	The number		
A	Awnings	1	В	The seat cloth	1		
С	The part behind the bed frame	1	D	The front part of the bed frame	1		
E	The foot tube	2	F	The mainframe	1		
Accessories package(optional)							

Product structure

* The picture of this manual may be different from the product, please refer to the actual contents.

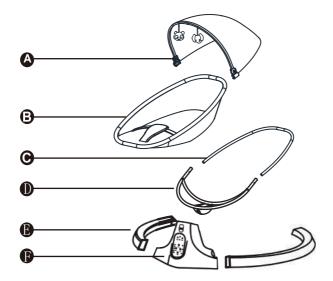



Warning!This product can only be assembled and cleaned by adults

Cleaning and washing

Seat cushion:Remove seat cushion; Well assembled; washed gently in cold water and in gear or by hand.


Toy rack, toy: Use wet cloth with soft soap to scrub and dry. Please don't soak it. Fabric: Flannelette

Inner filler: fireproof hard resin cotton. Warning! Do not bleach, dehydrate or dry.

Assembly conditions

Step 1: Put the two foot tubes into the main engine hole and lock them with screws. Step 2: Put the part behind the bed frame into the seat cloth, and then insert the front part of the bed frame into the behind's tube, and glue the Velcro on the cloth. Step 3: Mount the bedstead base on the main engine shaft, so that the bedstead and the main engine are firmly fixed.

Step 4:Clamp the two sides of the awning joints on the iron pipe of the bedstead. Step 5: Complete product installation;Then power supply or battery can be installed.

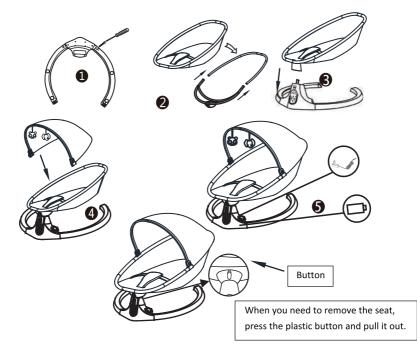



Safety instructions

Button the safety buckle on the seat and adjust the length required as shown in the illustration below.








The appearance of the safety clasp, which can be adjusted for tightness

Product supply

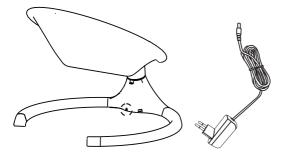

DC plug can be inserted into 100-240V50/60HZ 0.6A AC power supply, DC interface can be connected to the power supply of the charger; The output voltage of the adapter is 5-6V≤ 1000mA



Use of functions

(1) Power switch button.Press the power switch, the display light shows the number 00, which means to turn on the power;Press it again to cut off the power.

(2) Gear switch button. There are 5 kinds of swing options in the gear adjustment, from the stop to increase, cycle adjustment. The current gear corresponds to the light on and off of the gear indicator.

(3) Timing button.Timing There are three timing options.Press and the number of the display light is 8, indicating the timing of 8 minutes;Press the second time, the number shows 15, meaning 15 minutes timing;After you press the button for the third time, the number changes to 30.The timing display will carry out the countdown display according to the remaining time of the timing. When the timing time is up, all functions will stop and enter the standby state.

(4) Music player/volume button.Press once to play system music to start;Click to play the next music.Long press to hear the volume change, let go to adjust the volume cycle;A very long press for about 8 seconds can turn off the music;Plug in the USB port, and press the music switch to play the MUSIC of the USB disk;

(5) Induction swing button.Press the gear display light to flash the number 03 to turn on the intelligent induction system.The machine will stop swinging once the baby is asleep and enter detection mode.When the baby wakes up, the rocking chair automatically starts the 3 pendulum function, and the rocking chair enters the circulation state.(6) If another function is available, please operate as follows:

1. Connect Bluetooth after power on, and the English prompt means the connection is successful;2. Turn on the Bluetooth function of the mobile phone to search for signals for pairing;3. After the match is successful, turn on any music in the phone, and the swing will play the currently selected music. You can also control the volume of the swing through the phone volume button.




Basic maintenance

The serial number	Possible problems	The solution	
1	a sudden stop during playing the music and swing	The battery may be under loaded or low	
2	No function on startup	Check whether the battery positive and negative rear loading phenomenon	
3	When not used for a long time	Please unplug the battery	
4	Severe shaking	Please check that the closing joint is open in place	
5	The indicator light is fading	Probably low power	




Remote control instructions

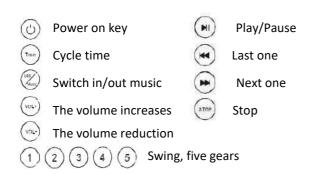



Indicator diagram

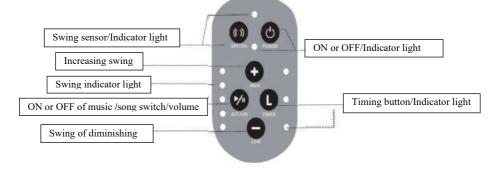

Battery Installation Instructions

1. Use a screwdriver to unscrew the battery cover and open the battery cover.

2. Put the battery into the battery box according to the positive and negative terminal instructions.

3. Close the cover of the battery case and tighten the screws.



" Care For Future "

Warning

- 1. You must use the seat belt when using this product!
- 2. Don't leave an unattended child in the product alone!
- 3. Age-appropriate stage: 0-6 months.
- 4. The weight of children using this product should not exceed 20kg!
- 5. Do not use a toy stick to lift or move the swing!
- 6. Do not lift or move the product while the child is in it!
- 7. Do not put anything on the toy stick except matching toys
- 8. This product is strictly prohibited to be placed on high places (such as countertops,
- tables, stairs, or other places higher than the ground) to prevent falling danger!
- 9. It is dangerous to place this product on a non-flat surface
- 10. Pay attention to the danger of suffocation: please do not use it on soft objects(e.g. bed, sofa, etc.) to prevent it from being knocked over and causing suffocation
- 11. Do not use on a baby who can stand up by itself .To prevent falling safety belt entanglement or strangulation and other hidden accidents.
- 12. Don't let children use this product as a toy!
- 13. Make sure children leave the product before opening or folding it!
- 14. This product should not be used for long-term sleep.

15. When this product is connected to a music player, make sure that the volume of the player is set to the bass position

16. Do not use this product if any parts are damaged or missing. Do not use replacement parts unless they have been approved by the manufacturer!

- 17. Stay out of the fire!
- 18. Make sure to use the security system configuration when using.



After-sales service card

Thank you for purchasing our products. Please keep the after-sales service card properly for your due rights and interests. If you have any quality problems, please contact the dealer.

Customer Name	Customer phone	
Product Name	Product Model Number	
Purchase Date		
Customer Address		

Attention

• Normal users shall enjoy one year's free maintenance service for circuit board components and one year's free maintenance service for the whole machine from the date of purchase. The plastic shell of the product is not covered by the warranty;

· Other consumable parts are not covered by warranty;

 \cdot Please show the after-sale service card and purchase voucher or invoice before maintenance.

Scope of Warranty

· Damage caused by careless or wrong use and human activities;

- · Lost or damaged after-sales service card;
- · Damage caused by natural disasters or other force majeure.

Thank you for using our products. We are committed to providing consumers with better quality products, more considerate service and more favorable prices. We has more products for you to choose!

Zhejiang Yongkang Peidi Industry and Trade Co. LTD Address: No. 100, Jiuding Road, Changcheng Industrial Zone, Yongkang Fax :0579-87515820



GARANTİ ŞARTLARI

- Garanti süresi, malın teslim tarihinden ilibaren başlar ve iki yıldır.
 Malın bütün parçaları dahil olmak üzere tamamı firmamızın garantisi kapsamındadır.
 Malın garanti süresi çerrinde arzalarıması durumunda, tamirde geçen süre garanti süresine eklenir. Malin tamir süresi en fazla 20 iş günüdür. Bu süre, mala ilişkin arizanın servis istasyonuna, servis istasyonunun olmaması durumunda, malın satıcısı, bayi, acentası, temsilciliği, ithalatçısı veya imalatçısından birisine bildirim tarihinde başlar. Sanayi malının arızasının 10 iş günü içerisinde giderilmemesi halinde, imalatçı veya ithalatçı; malın tamiri tamamlanıncaya
- kadar, benzer özelliklere sahip başka bir sanayi malını tüketicinin kullanımına tahsis etmek zorundadır. 4. Malın garanti süresi içerisinde, gerek malzeme gerek işçilik, gerekse montaj hatalarından dolayı arızalanması halinde in generation of the second s Second seco

durumlarında; tüketici malın bedel iadesini, ayıp oranında bedel indirimini veya imkan varsa malın ayııpsız misli ile değiştirilmesini satıcıdan talep edebilir. Satucı, tüketicinin talebini reddedmez.

latey bebulin. Satud, iuketicilini resusini ecucerinezz. Bu talebin yering eptirilmemesi durumunda satud, üretici ve ithalatçı müteselsilen sorumludur. Malın ayıpsız misli ile değiştirilmesinin satud için orantısız gölçtikleri beraberinde getirceçdinde malınde tüketici, sözleşmeden dönme veya ayıp oranında bedeleten indirim haktarından birini kullanabilir. Orantısızlığın tayınınde malın ayıpsız değeri, ayıbın önemi ve diğer

veya aylı braını ba beceberi nicimin takanındarı bunn kuşlardanı. Dramszügin tayınınde manan aybaz degen, aybun birenin ve üger seçimlik hakara basvurmanın lüketici açısından sorun teşial edip etmeyeceği gibi hususlar diktate alınır. Tüketlicinin sözleşmeden dönme veya ayıp orarında bedelden indirim hakkını seçtiği durumlarda, satıcı, malın bedelinin tümünü veya bedelden yapılan indirim tutarın dehni tükelciye iade etmek zorundardır.

Tüketlicinin malın ayıpsız misli ile değiştirilmesi hakkını seçmesi durumunda satıcı, üretlici veya ithlatçının, malın ayıpsız misli ile değiştirilmesi talebinin kendilerine bildirilmesinden itbaren azami otuz iş günü içerisinde, bu talebi yerine getirmesi zorunludur. Birinci firknaını (c) bendinde belirtilen raporun, arızanın bildirim tarhinden itbaren o mala ilişkin azami tami süresi gersinde düzenlenmesi zorunludur

5. Malin kullanma kılavuzunda yer alan hususlara aykırı kullanılmasından kaynaklanan arızalar ve kullanım hatasından kaynaklanan arızalar

Maint kulanna kiivutzinda yer alan nususiara aykin kulanimasindan kaynakianan anzaar ve kulanim matasindan kaynakianan anz garanti kapami dişindadir.
 Garanti süresi içerisinde, servis istasyonları tarafından yapılmasının zorunlu olduğu, imalatçı veya ithalatçı tarafından şart koşulan periyodik bakımanda; verinen hizmet karşılığında tüketiciden işçilik ücreti veya benzeri bir ücret talep edilemez.
 Fabrikasyon hatalarından doğan anzaların tamirinde garanti kapsamının geçerli olabilmesi için, ürünün satıcı mağaza tarafından kaşelenmiş orjinal fatura ve garanti kartı ile servise getirilmesi veya gönderilmesi şartır.
 Tüketiciler şikayet ve itirazları konusunda Tüketici Mahkemelerine ve Tüketici Hakem Heyetlerine başvurabilirler.

 Malin ayin jolduğunun anlaşılması durumunda tüketici;
 Ayin ayin bere ayın bere ayın bere ayın bildürerek sözleşmeden dönme, b) Satılanı alıkoyup ayıp oranında satış bedelinden indirim isteme, c) Aşırı bir masraf gerektirmedigi takdirde, bütün masrafarı satıcıya ail olmak üzere satılarını ücretsiz onarılması isteme, ç) İlmkân varsa, satıların ayıpsız bir misli ile değiştirilmesini isteme, seçimlik haklarından birini kullanabilir.

Kurt Grup Dış Tic. Ltd. Şti 1. OSB 2. Kısım 6. Cadde No:1 Merkez / SİVAS Tel. : 0346 221 46 60 Whatapp: 0506 480 10 19 www.kurtgrupltd.com



Kurt Grup Dış Tic. Ltd. Şti 1. OSB 2. Kısım 6. Cadde No:1 Merkez / SİVAS Tel. : 0346 221 46 60 Whatapp: 0506 480 10 19 www.kurtgrupltd.com