 


# huggy

*“ Care for future “*

# rockie

**Huggy Rockie Otomatik Sallanabilir  
Kumandalı Müzikli Elektrikli Anakucağı**

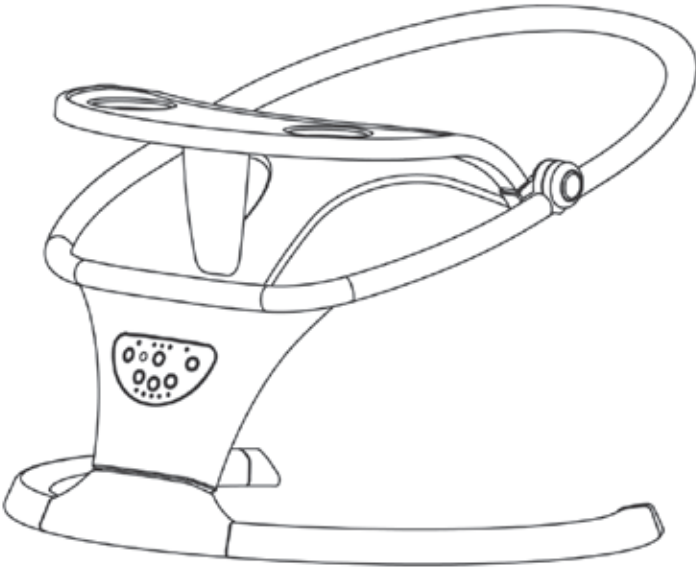

**PREMIUM QUALITY**

DESIGN BY GERMANY

## **ВНИМАНИЕ! ПРЕДУПРЕЖДЕНИЯ!**

- ❖ **WARNING!** NEVER LEAVE THE CHILD UNATTENDED!
- ❖ **WARNING!** STOP USING THE PRODUCT WHEN THE CHILD STARTS TO STAND UP OR WEIGHT MORE THAN 9 KG!
- ❖ **WARNING!** NEVER USE THIS PRODUCT ON AN ELEVATED SURFACE (e.g. a table)!
- ❖ **WARNING!** ALWAYS USE THE RESTRAINT SYSTEM!
- ❖ **WARNING!** DO NOT MOVE OR LIFT THIS PRODUCT WITH THE BABY INSIDE IT!
- ❖ **WARNING!** DO NOT LET CHILDREN PLAY WITH THIS PRODUCT!
- ❖ **WARNING!** SET THE SOUND VOLUME TO THE LOW WHEN USING THE MUSICAL FUNCTINS OF THE CRADLE IN ORDER TO PROTECT BABY'S HEARING!
- ❖ **WARNING!** KEEP AWAY FROM FIRE!
- ❖ **WARNING!** THIS PRODUCT CONTAINS A COIN BATTERY. A COIN BATTERY CAN CAUSE SERIOUS INTERNAL CHEMICAL BURNS IF SWALLOWED!
- ❖ **WARNING!** DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN. IF YOU THINK BATTERIES MAY HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.
- ❖ Never let the child sleep in this product. This product does not replace a cot or a crib. Should the child fall asleep, then it should be placed in a suitable cot or crib.
- ❖ Adult assembly is required!
- ❖ To be used for babies up to 6 months of age.
- ❖ All power related actions – plugging, unplugging, replacement or charging of batteries, to be performed by adults only.
- ❖ To be used for one child at a time!
- ❖ The safety belts should not be twisted, worn out or damaged.
- ❖ Do not use the product if any components are broken or missing!
- ❖ Use only the AC/DC adapter, supplied by the manufacturer.
- ❖ Regularly check if the AC/DC adapter is in working order. If you find any damage, stop using the adapter.
- ❖ Do not use spare parts or other components, which are not supplied by the producer!
- ❖ The producer revokes all responsibility in case you have used spare parts different from the approved type or from the recommended by the producer.
- ❖ Do not make changes or modifications to the structure or electric part! If necessary, contact the retailer or and authorized service for advice and repair.
- ❖ Use the product only for its purpose!
- ❖ Do not load any objects on top of the product to avoid damaging its construction or fabric seat.
- ❖ Do not tie strings or cords to the product to avoid risk of suffocation!
- ❖ Do not allow presence of children under 3 years before assembly is complete to avoid their access to small or disassembled parts!
- ❖ Keep the nylon package away from children to avoid risk of suffocation!



## IMPORTANT! WARNINGS AND GUIDELINES FOR USE OF BATTERIES

- ❖ Always secure the battery compartment cover after having inserted the batteries.
- ❖ Do not let children have access to the batteries or play with them!
- ❖ Insert batteries only of the designated type and voltage.
- ❖ Do not use batteries of different types.
- ❖ Do not mix used and new batteries.
- ❖ Follow the designated polarity in the battery compartment.
- ❖ Remove the damaged or worn out batteries.
- ❖ Remove the batteries when you are not using the product.
- ❖ Do not charge non-rechargeable batteries.
- ❖ Do not throw the batteries in open fire. Do not desintegrate the batteries.

 
**WARNING!** Waste from exhausted or unusable batteries must be disposed of separately. Do not dispose of the batteries with your household waste. Throw out the batteries at the designated places.



## PRODUCT FEATURES

- ❖ The cradle is suitable until the child starts to stand up.
- ❖ Use the swing for babies and very young children aged 0 to about 6 months who cannot sit independently, weighing no more than 9 kg.
- ❖ Safety harness;
- ❖ Adjusting the backrest in 3 positions;
- ❖ FUNCTIONS:
  - Cradle function with 5 speeds
  - Timer: 8 minutes, 15 minutes, 30 minutes
- ❖ Melodies;
- ❖ Power supply: with adapter AC: 100-240V ~ 50/60Hz и DC: 5-6 V  $\equiv$  1.0A;
- ❖ Power supply with batteries: 4 pcs.type AA/1,5V (LR6); not included=
- ❖ Remote control battery: 1 pc, type CR2025. Not included.

## MAIN PARTS

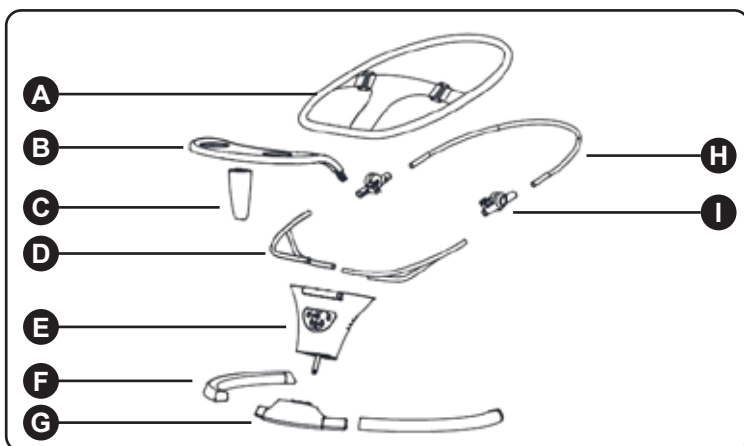

A – Fabric seat - 1 pc.

B – Tray - 1 pc

C – T bar - 1 pc.

D – Lower tube seat frame - 2 pcs, set

E – Control and music box - 1 pc.

F – Base arm - 2 pcs.

G – Base - 1 pc.

H – Upper tube of seat frame - 1 pc.

I – Connecting folding elements - 1 pc

## ASSEMBLY INSTRUCTIONS

**IMPORTANT!** FOLLOW THOROUGHLY THE INSTRUCTIONS FOR USE AND ASSEMBLY STEPS GIVEN IN THE FIGURES IN THIS MANUAL.

**WARNING!** CHECK IF THE FIXING IS SECURE AFTER EACH ASSEMBLY STEP!

**WARNING!** WHEN ONE ASSEMBLY STEP IS FINISHED IT IS USUALLY SUPPORTED BY A CLICK SOUND!

**WARNING!** MAKE SURE ALL PINS SHOW THROUGH THE RESPECTIVE OPENINGS.

**Necessary tools:** screwdriver

The assembly steps are numbered from 1 to 6. Use their descriptions below along with the illustration with the same number.

### 1 – INSTALLING THE BASE ARMS

Insert the left and right arms (F) to the base (G) so that the screw holes match. Fix with one screw on both sides as shown in the figure.

**Note:** Screws must be tightened on down side of the control panel.

### 2 – INSTALLING THE CONTROL AND MUSIC BOX

Insert the axle of the control and music box (E) in the opening of the base and press, until you hear a click sound and they got fixed.

### 3 – INSTALLING THE LOWER TUBES OF THE FRAME

Fit the frame lower tubes (D) to the control box (E) and push until you hear a “click” sound and the lower tube pins show through the corresponding holes. Fit the connectors (I) to the frame lower tubes (D) and press until you hear a “click” sound and the tube pins show through the corresponding holes in the connectors.

### 4 – INSTALLING THE UPPER TUBE OF THE FRAME AND PLACING THE FABRIC SEAT AND HEAD PILLOW

Fit the upper tube (H) to the connectors (I) and push until you hear a “click” sound and the pins on both sides of the upper tube show through the corresponding holes in the connectors.

Place the fabric on the upper tube tube, then on the lower tubes. Fasten with the strips to the back of the fabric (A).

Place the headrest to the top of the fabric seat and secure with the strap.

### 5 – INSTALLING THE TRAY AND T-BAR

Press-fit the T-bar (C) to the bottom of the tray (B) until it clicks into place.

Fit the tray (B) to the corresponding holes in the seat. Press on both sides until you hear a “click” sound and they lock.

To remove the tray, press the button (1) on the inside of the tray and pull it out.

**6 – ADJUSTING THE BACKREST**

Backrest of the seat may recline in 3 positions.  
Press simultaneously both buttons (2) and move the backrest up or down. When the position is fixed you will hear a „click“.



**WARNING!** DO NOT CHANGE THE RECLINE WHILE THERE IS A CHILD IN THE CRADLE!

 
 
 
 
**7 – SAFETY HARNESS (CHILD RESTRAINT)**

 
 
 
 
Place the child in the product and fasten the belt in the buckle. When it is fixed you will hear a „click“ sound.  
To unfasten the safety belt press the buckle with two fingers and disconnect the belts.  
Belts should not be twisted. Adjust the belts length, so they are snug well to child’s body.

**IMPORTANT!** Regularly check if belts are not worn out or damaged and the plastic buckles are in good order.



**8 – CRADLE FUNCTION**

Move the slider down to release the base from the seat and engage the cradle function  .  
Move the slider up to fix the cradle in still position  .

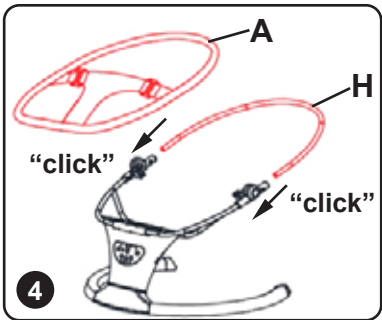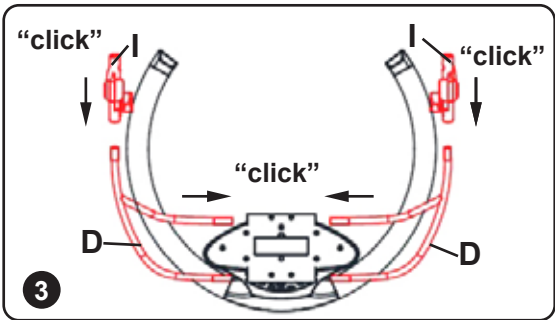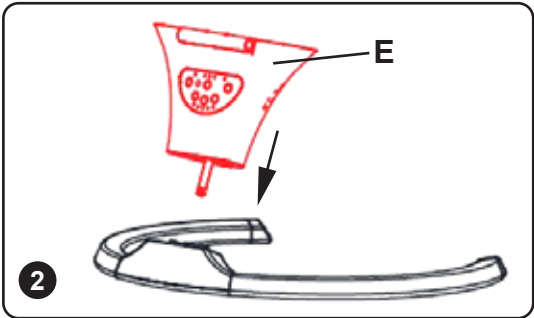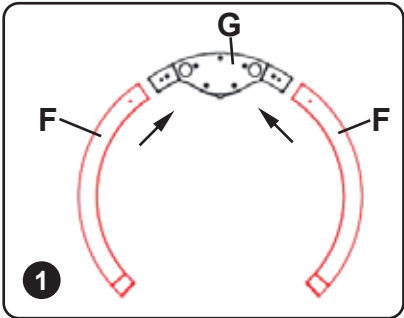

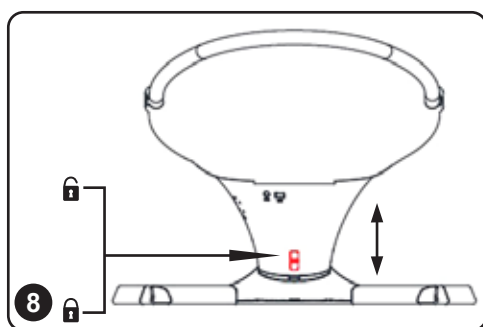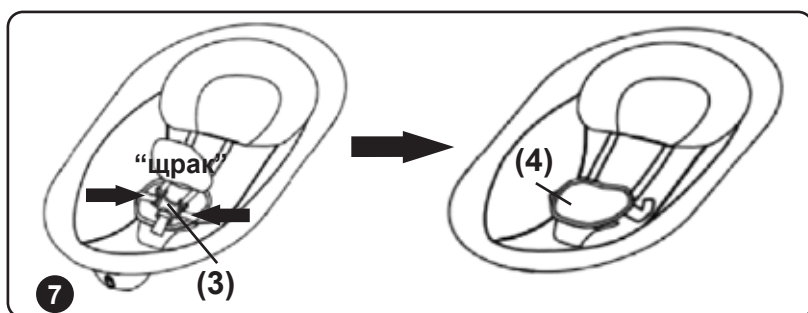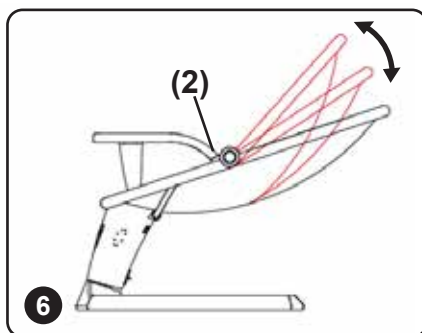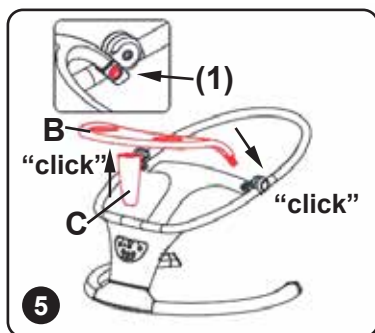

## POWER SUPPLY

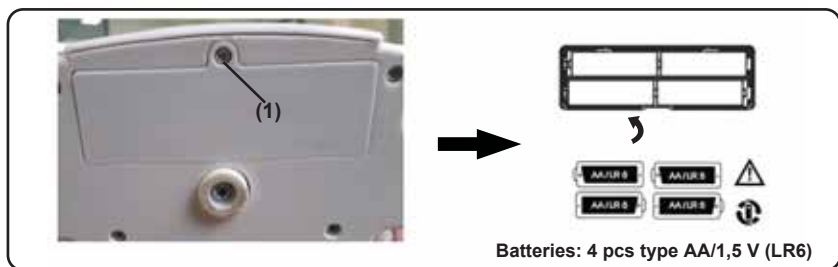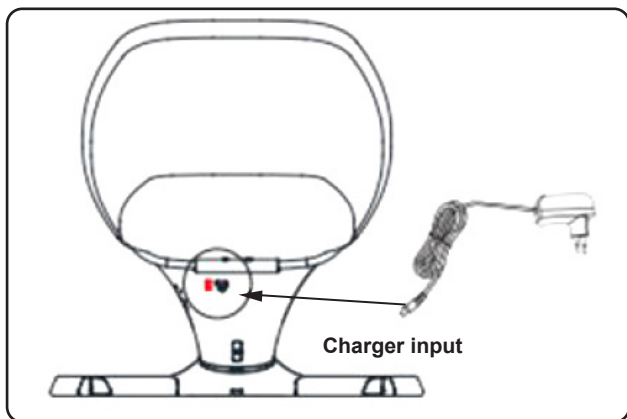  


**Power supply with adapter (Adapter input)** - Input AC 100-240V - 50/60Hz and output DC 5-6V/1A.  
Connect the charger tip to the charger input and the plug to the mains socket.

### **Power supply with batteries. Inserting the batteries**

 Unscrew with screwdriver (1) and remove the battery compartment cover. Insert 4 pcs. batteries type AA/1,5V (LR6), keeping the designated polarity.

Secure the battery compartment with the cover and tighten the screw.

## CONTROL AND MUSIC BOX

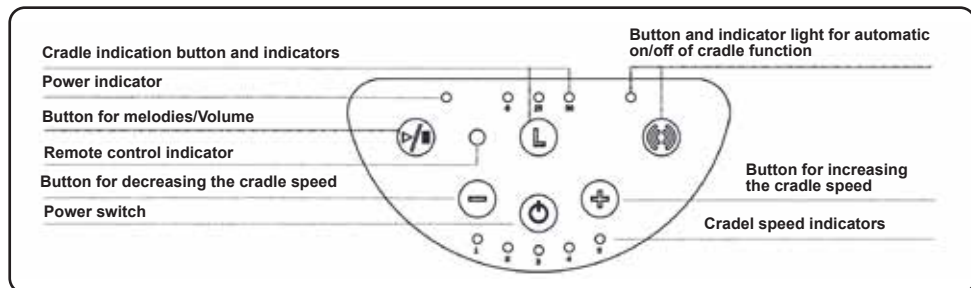

### Power switch

Press the power switch and the power indicator will start to flash, indicating that the power is on. Press the switch again to turn off the power. The power indicator will stop flashing.

### Button for increasing and decreasing the cradle speed

Pushing the button, you can choose from 5 cradle speeds - from stop to a gradual increase in speed (from 1 to 5). The current speed corresponds to what is written on the indicator light on the display.

**Note:** When the cradle is in neutral position and there is no set time for cradle function, the cradle speed indicator will be on and the time indicator will start flashing.

### Timer button (cradle duration selection - 8, 15 and 30 minutes)

At the first press, one indicator lights up, which corresponds to cradle duration of 8 min.

On the second press, two indicators light up, which corresponds to duration of 15 min.

On the third press, three indicators light up, which corresponds to duration of 30 min.

After the selected time has passed, all functions of the cradle will be deactivated and it will remain in standby mode.

If no cradle time is selected, all enabled functions will run indefinitely.

**Note:** When the product is in neutral position and no cradle time has been set, the cradle speed indicator will be on and the time indicator will start flashing.

### Button for melodies /Volume

Press once to play a melody. Press again to stop the melody. At next press will play next melody.

Press the button continuously, to change the volume of the sound.

Release the button to keep the selected volume.

### Button for automatic turn on/off the cradle function

Press the button to turn on the function „automatic turn on/off of cradle function“.

The indicator light will start flashing. After the child falls asleep, the cradle will remain at rest (cradle function turns off) and will enter recognition mode.

When the child wakes up, the cradle function switches on automatically at cradle speed 03.

### Remote control indicator

 
The indicator lights up when the product is controlled by the remote control.



## REMOTE CONTROL

**CAUTION!** TO BE USED ONLY BY ADULT!

**CAUTION!** REMOTE CONTROL IS NOT A TOY!

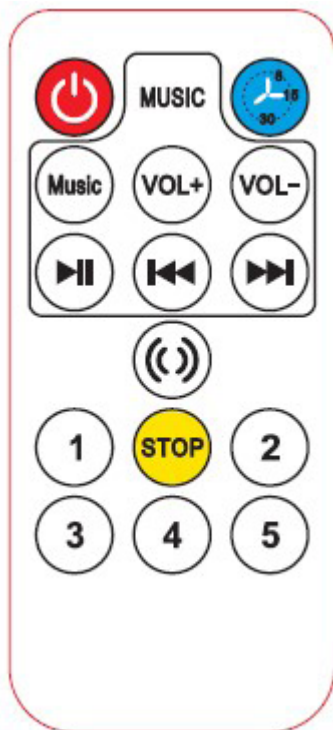

ON/OFF button



Timer for cradle люлеене  
- 8/15/30 min



Cradle melodies



Volume up



Volume down



Melodies play/Pause



Previous melody



Next melody



Buttons for 5 cradle speeds



Button for automatic turn on/off  
the cradle function



Stop the cradle function.  
Press any button to activate  
the cradle again.



## CARE AND MAINTENANCE

- ❖ Clean the plastic and metal parts with damp soft cotton cloth and mild soap.
- ❖ Upholstery and head pillow may be hand washed up to 30°C with mild detergent.
- ❖ Do not tumble dry or use drying machine!
- ❖ Do not pour water on the adapter or control panel! Before cleaning, turn off the power and unplug the adapter.
- ❖ Do not use aggressive detergents containing abrasive particles, ammonia, bleach or spirits.
- ❖ Do not place other objects on top of the rocker as this may damage its structure or upholstery.
- ❖ Store the product in a clean and dry place. Do not expose the bouncer to direct sun light, rain, moisture or sudden temperature changes!



# GARANTİ BELGESİ

Seri: 4A

## MALIN

Cinsi : ANAKUCAĞI  
Markası : HUGGY  
Modeli : ROCKIE

## SATICI FİRMANIN

Ünvanı:

Adresi :

## ALICININ

Adı Soyadı : \_\_\_\_\_

Adresi : \_\_\_\_\_

\_\_\_\_\_

Tel : \_\_\_\_\_

## Fatura No

Kaşe ve İmza

## Malın Tüketicie

Teslim Tarihi : \_\_\_\_\_

Teslim Yeri : \_\_\_\_\_

Azami Tamir Süresi : 20 İş Günü  
Garanti Süresi : 2 Yıl

Üretici / İthalatçı Firma:

Ünvanı

Merkez Adres

Telefon

Faks

: Kurt Grup Dış Ticaret A.Ş.  
: 1.ÇSB 6.Cadde No:1 – SİVAS  
: 0346 218 14 13  
: 0212 810 46 44

## ÖNEMLİ NOTLAR:

Lütfen ürünü kullanmadan önce kullanım kılavuzunu dikkatli okuyunuz.

Garanti belgesi, sadece üründeki fabrikasyon üretim hatalarını kapsamaktadır.

Karalanmış, hasar görmüş yada üzerindeki bilgiler kapatılmış şekilde etiket yapılmış garanti kartları geçersizdir.

**irhuggy**  
"Care For Future"

## GARANTİ ŞARTLARI

- Garanti süresi, malın teslim tarihinden itibaren başlar ve iki yıldır.
- Malın bütün parçaları dahil olmak üzere tamamı firmamızın garantisine kapsamlıdır.
- Malın garanti süresi içerisinde arızalanması durumunda, tamirde geçen süre garanti süresine eklenir.  
Malın tamir süresi en fazla 20 iş günüdür. Bu süre, mala ilişkin arızanın servis istasyonuna, servis istasyonunun olmaması durumunda, malın satıcısı, bayi, acentası, temsilciliği, ithalatçısı veya imalatçısından birisine bildirim tarihinde başlar.  
Sanayi malının arızasının 10 iş günü içerisinde giderilmemesi halinde, imalatçı veya ithalatçı; malın tamiri tamamlanıncaya kadar, benzer özelliklere sahip başka bir sanayi malını tüketicinin kullanımına tahsis etmek zorundadır.
- Malın garanti süresi içerisinde, gerek malzeme gerek işçilik, gerekse montaj hatalarından dolayı arızalanması halinde, işçilik masrafı, değiştirilen parça bedeli yada başka herhangi bir ad altında hiçbir ücret talep etmeksizin tamiri yapılacaktır.
- Tüketicinin, ücretsiz onarım hakkını kullanması halinde malın; a) Garanti süresi içinde tekrar arızalanması, b) Tamir için gereken azami sürenin aşılması, c) Tamirini mümkün olmadığı için, yetkili servis istasyonu, satıcı, üretici veya ithalatçı tarafından bir raporla belirlenmesi durumlarında; tüketici malın bedel iadesini, ayıp oranında bedel indirimini veya imkan varsa malın ayıpsız misli ile değiştirilmesini satıcıdan talep edebilir. Satıcı, tüketicinin talebini reddedemez.  
Bu talebin yerine getirilmemesi durumunda satıcı, üretici ve ithalatçı müteselsilen sorumludur.
- Malın ayıpsız misli ile değiştirilmesini satıcı için oranlısız güçlükleri beraberinde getirecek olması halinde tüketici, sözleşmeden dönme veya ayıp oranında bedelden indirim haklarından birini kullanabilir. Oranlısızlığın tayininde malın ayıpsız değeri, ayıbın önemi ve diğer seçitlik haklara basvurmanın tüketici açısından sorun teşkil edip etmeyeceği gibi hususlar dikkate alınır.
- Tüketicinin sözleşmeden dönme veya ayıp oranında bedelden indirim hakkını seçtiği durumlarda, satıcı, malın bedelinin tümünü veya bedelden yapılan indirim tutarını derhal tüketiciye iade etmek zorundadır.
- Tüketicinin malın ayıpsız misli ile değiştirilmesi hakkını seçmesi durumunda satıcı, üretici veya ithalatçının, malın ayıpsız misli ile değiştirilmesini talebinin kendilerine bildirilmesinden itibaren azami otuz iş günü içerisinde, bu talebi yerine getirmesi zorunludur.
- Birinci fıkranın (c) bendinde belirtilen raporun, arızanın bildirim tarihinden itibaren o mala ilişkin azami tamir süresi içerisinde düzenlenmesi zorunludur.
- Malın kullanma kılavuzunda yer alan hususlara aykırı kullanımlarından kaynaklanan arızalar ve kullanım hatasından kaynaklanan arızalar garanti kapsamı dışındadır.
- Garanti süresi içerisinde, servis istasyonları tarafından yapılmasının zorunlu olduğu, imalatçı veya ithalatçı tarafından şart koşulan periyodik bakımlarda; verilen hizmet karşılığında tüketiciden işçilik ücreti veya benzeri bir ücret talep edilemez.
- Fabrikasyon hatalarından doğan arızaların tamirinde garanti kapsamının geçerli olabilmesi için, ürünün satıcı mağaza tarafından kaselemiş orijinal fatura ve garanti kartı ile servise getirilmesi veya gönderilmesi şarttır.
- Tüketiciler şikayet ve itirazları konusunda Tüketici Mahkemelerine ve Tüketici Hakem Heyetlerine başvurabilirler.
- Malın ayıpsız olduğunun anlaşılması durumunda tüketici;  
a) Satılmanı geri vermeye hazır olduğunu bildirerek sözleşmeden dönme, b) Satılmanı alıkoymuş ayıp oranında satış bedelinden indirim isteme, c) Aşırı bir masraf gerektirmedik takdirde, bütün masrafları satıcıya ait olmak üzere satılmanı ücretsiz onarılması isteme, ç) İmkân varsa, satılmanı ayıpsız bir misli ile değiştirilmesini isteme, seçitlik haklarından birini kullanabilir.

**irhuggy**  
"Care For Future"

Kurt Grup Dış Tic. Ltd. Sti 1. OSB 2. Kısım 6. Cadde No:1  
Merkez / Sivas Whatapp: 0506 480 10 19  
www.kurtgrupltd.com



*“ Care For future “*

**Kurt Grup Dış Tic. Ltd. Sti 1. OSB 2. Kısım 6. Cadde No:1  
Merkez / Sivas Whatapp: 0506 480 10 19  
[www.kurtgrupltd.com](http://www.kurtgrupltd.com)**