


huggy

“ Care for future ”

wave


Huggy Wave Ana Kucağı

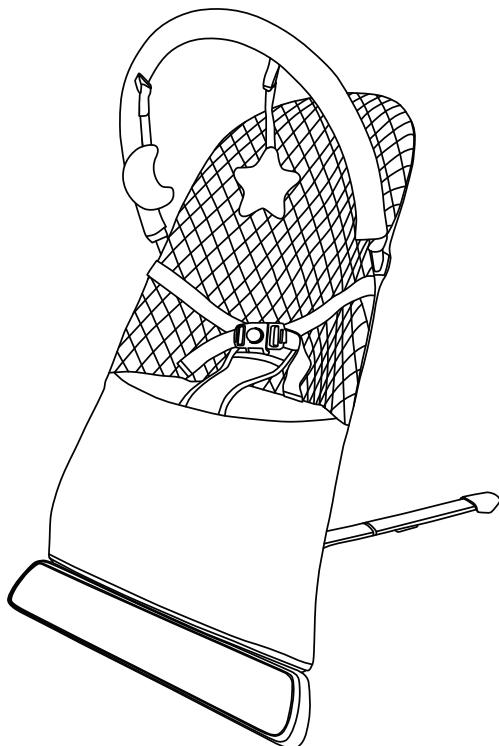


Catalog

- *Product list
- *Assemble description
- *Using manual
- * Attention
- *Cleaning and maintenance
- *Toy bar


I. Part list

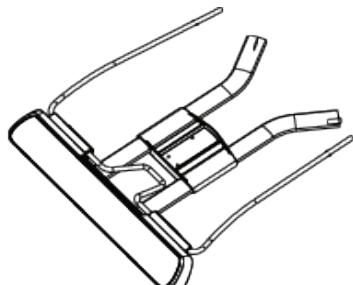

backrest tube*1

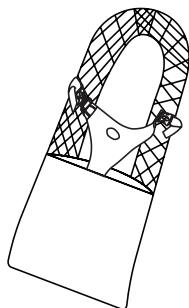

Music box*1

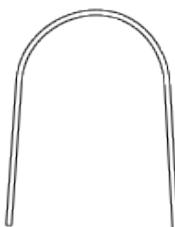

seat fabric*1




Rear tube*2



recline


mechanism* 1

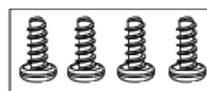

screw*4



Manual*1

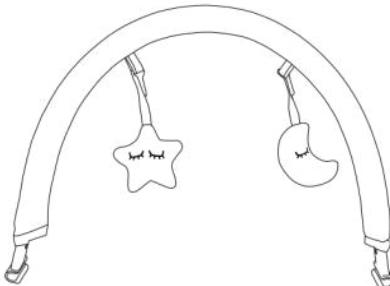

Toy bar *1

II. HOW TO ASSEMBLE

1.Put recline mechanism in place (as shown in Fig. 1) and turn it over (as shown in Fig. 2) which is retained by 4 screws.

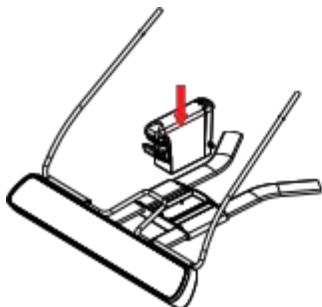


Fig. 1

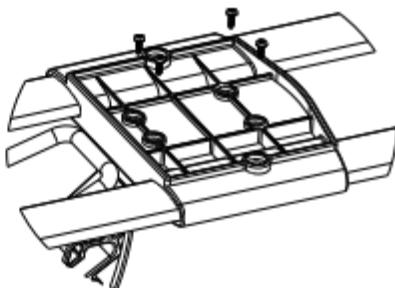


Fig.2

2.Inert rear tube into the frame one by one, make sure they are locked by clips and in place (see Fig.3)

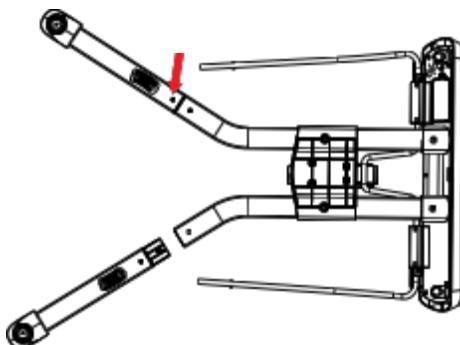


Fig.3

3.The well assembled frame as below(Fig.4),press down the second lock plastic(Fig. 5 ①)by one hand to release the recline mechanism, hold up the seat iron bar by the other hand(Fig.5②) to open the frame.

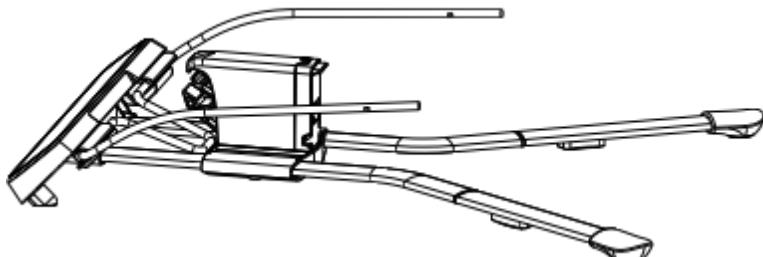


Fig.4

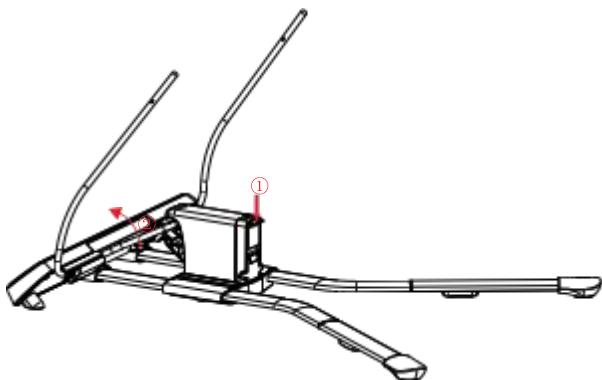


Fig.5

4. How to assemble backrest: Align the backrest tube with the seat iron bar and insert it (Fig.6) .

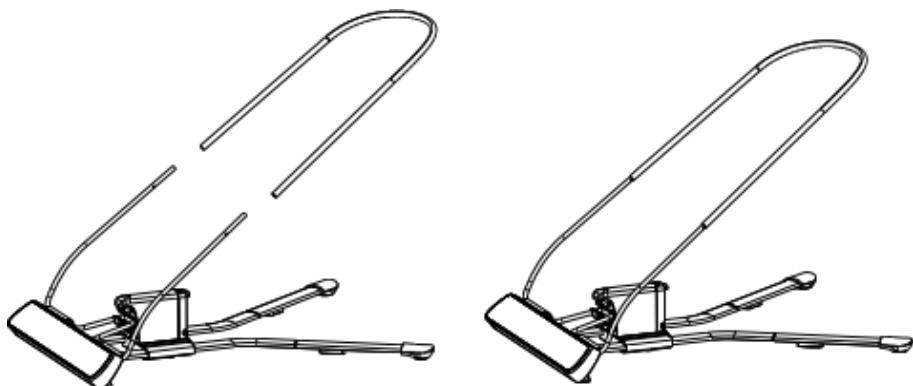


Fig.6

5. How to install the seat fabric cover: Insert the seat fabric cover from the head of the backrest tube against the seat iron bar (as shown in Fig. 7) and pull it to the bottom of the seat frame (note: must flatten the seat fabric cover to pull it to the bottom) then fasten the elastic band at the bottom of the seat cloth to the buckle of the music box(Fig.8)

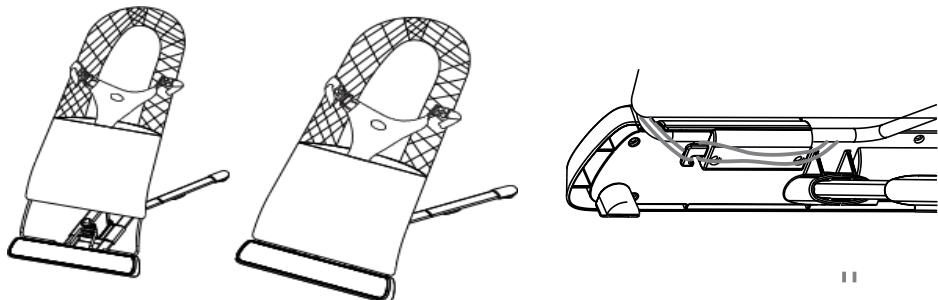


Fig.7

Fig.8

6 . Open the battery cover(Fig.9), Install two AA batteries according to the corresponding positive and negative terminals in the battery box , Fasten the screws and the battery is installed(Fig. 10)

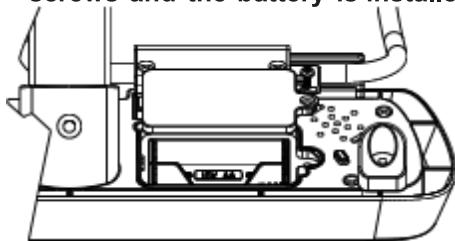


Fig.9

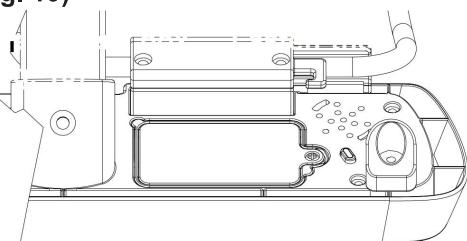


Fig.10

III.HOW TO USE

1 . Backrest adjustment. There are two recline positions and storage position

Lower the seat: Pull out the handle(As Fig. 11) by one hand and lift up lightly and then push down to lower the seat position.

Lift up: Hold the seat and lift up directly from the lowest to the highest position(Fig. 12)

Warning:DO NOT ADJUST SEAT POSITION WITH BABY IN THE SEAT.

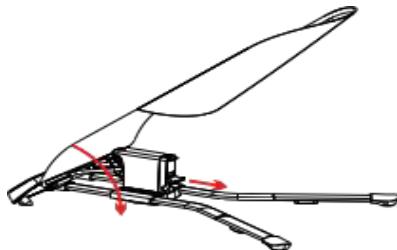


Fig.11

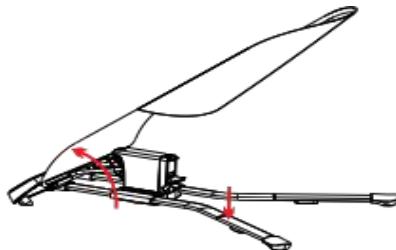


Fig.12

2 . How to Open the seat:

Press down the second lock plastic(Fig. 13 ①)by one hand to release the recline mechanism, hold up the seat iron bar by the other hand(Fig.5②) to open the frame.


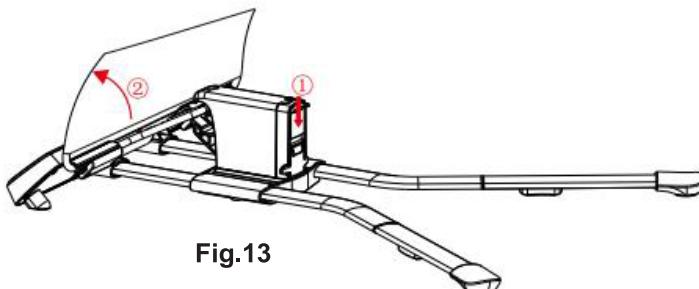


Fig.13

3.How to fold: Press down the second lock plastic① by one finger and pull out the locking puller ② by other fingers, press down the seat (see③), release the locking puller and then the bouncer fold

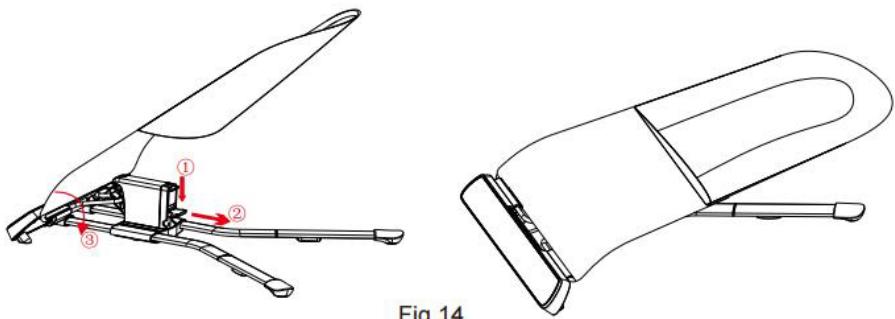

4.Instruction of control panel(Fig.15)

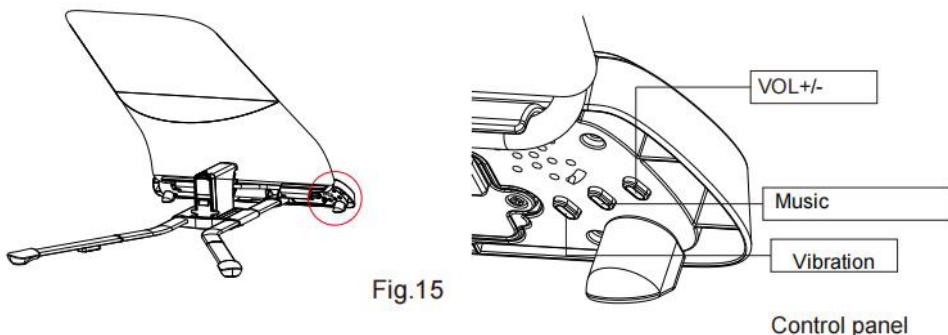


Fig. 15

Control panel

Volume+ / - Long press to adjust the volume to achieve maximum to minimum cycle adjustment

Music Press this button to start playing music, and then press again to switch to next song, and the track list will cycle; Long press this button to stop playing music

Vibration one touch this button to turn on the vibration function, long press to turn off the vibration function

5. How to use safety belt(See Fig.16) Release buckles firstly before put baby on it and lock buckles finally

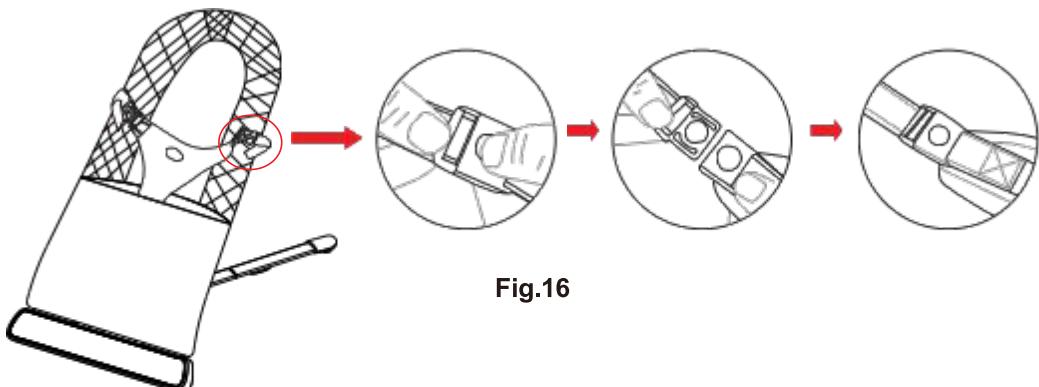


Fig.16

6. How to adjust safety belt's length See Fig.17

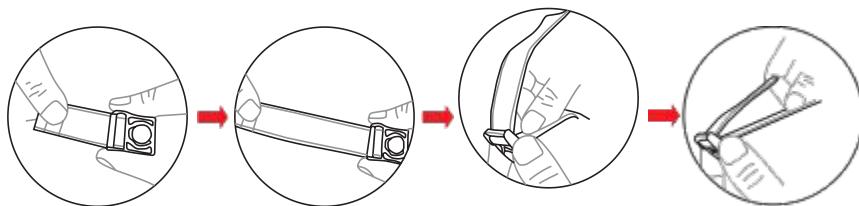


Fig.17

7. Remove seat fabric cover:

Release elastic tapes on the backside of the seat bottom(Fig18),pull out fabric cover directly

(Fig.19)

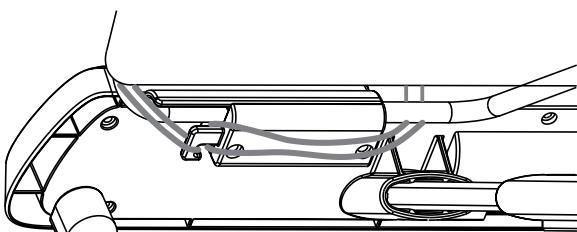


Fig.18

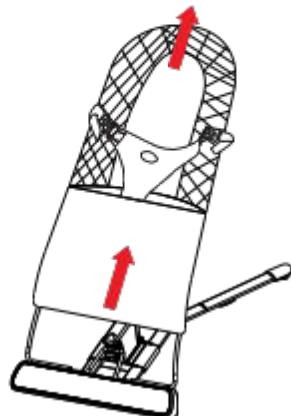


Fig.19

8. How to fit the toy bar

Attach the toy bar plastic on both side of the upper backrest tube directly and fix it.

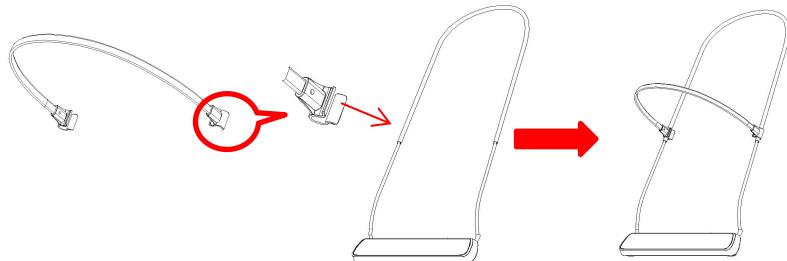


Fig.20

CAUTION! THE TOY BAR MUST BE WELL FIXED AT BOTH ENDS WHILE THE CHILD IS IN THE BOUNCER. DO NOT LIFT THE BOUNCER BY THE TOYBAR IN ORDER TO AVOID SERIOUS INJURIES.

9. Power supply

As shown in Figure 21. Prepare a Cross Screwdriver, open the battery cover on the back of the music box as indicated by the red arrow load the 2 "AA" battery according to the battery symbol on the bottom of the battery box, and then lock the battery cover.

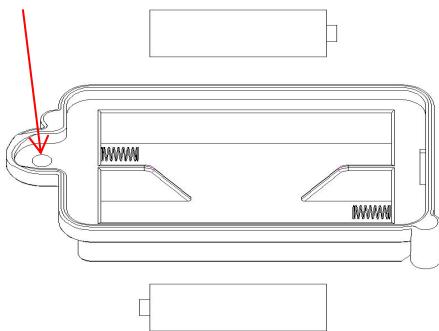


Fig.21

CAUTION

To prevent battery leaks, which can burn skin and eyes:

- Always replace the entire set of batteries at one time.
- Never mix old and new batteries of different brands or types
- Remove batteries when storing product for a long time.
- Dispose of used batteries immediately

IV. WARNING

WARNINGS

- FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.
- PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFETY OF YOUR CHILD.
- TO SECURE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS FROM THE INSTRUCTION MANUAL. THIS PRODUCT SHOULD BE FULLY ASSEMBLED PRIOR TO USE.
- ADULT ASSEMBLY REQUIRED.
- NEVER LEAVE THE CHILD UNATTENDED IN THE PRODUCT.
- STOP USING THE PRODUCT ONCE YOUR CHILD IS ABLE TO SIT UNAIDED OR WEIGHS MORE THAN 9 KG.
- THIS PRODUCT IS NOT INTENDED FOR LONG PERIODS OF USE AND SLEEP.
- NEVER LEAVE THIS PRODUCT ON ELEVATED, SLOPED OR SOFT SURFACES.
- ALWAYS USE THE SAFETY HARNESS.
- TO AVOID INJURY, MAKE SURE THAT THE CHILD IS AT SAFE DISTANCE WHILE MAKING ADJUSTMENTS, UNFOLDING, FOLDING AND STORING THE PRODUCT.
- DO NOT MOVE THE PRODUCT OR LIFT THE PRODUCT WHILE THERE IS A CHILD IN IT.
- DO NOT ALLOW CHILDREN TO PLAY WITH THIS PRODUCT.
- SET THE SOUND VOLUME LOW TO AVOID DAMAGE TO THE CHILD'S HEARING.
- KEEP THE PRODUCT AWAY FROM FIRE.
- USE FOR BABIES AGED AROUND UP TO 9 MONTHS WITH MAXIMUM WEIGHT 9 KG.
- DO NOT USE THE PRODUCT FOR MORE THAN ONE CHILD.
- THE PRODUCT IS NOT A SUBSTITUTE FOR A COT OR BED. IF THE CHILD NEEDS SLEEP, YOU MUST PUT THE CHILD IN A SUITABLE BED OR COT.
- DO NOT USE THE PRODUCT IF THERE ARE MISSING OR DAMAGED PARTS.
- DO NOT USE SPARE PARTS OR OTHER COMPONENTS, WHICH ARE NOT SUPPLIED BY THE COMPANY. CONTACT NUBY FOR REPLACEMENT PARTS AND INSTRUCTIONS.
- DO NOT MAKE CHANGES OR MODIFICATIONS TO THE STRUCTURE. IF NECESSARY, CONTACT NUBY OR AN AUTHORIZED SERVICE FOR ADVICE AND REPAIR.
- DO NOT TIE STRINGS OR CORDS TO THE PRODUCT TO AVOID RISK OF SUCCOATION/ STRANGULATION.
- USE THE PRODUCT ONLY FOR ITS PURPOSE.

- ALL SETTINGS REGARDING THE POWER SUPPLY: TURNING ON/OFF, REPLACING OR CHARGING OF BATTERIES IS TO BE DONE ONLY BY ADULTS.
- REGULARLY CHECK THE GOOD WORKING ORDER OF THE BATTERY. DISCONTINUE USAGE IN CASE OF DAMAGE.
- DO NOT ALLOW THE PRESENCE OF CHILDREN UNDER 3 YEARS BEFORE ASSEMBLY IS COMPLETE TO AVOID THEIR ACCESS TO SMALL OR DISASSEMBLED PARTS.
- KEEP THE NYLON PACKAGING AWAY FROM CHILDREN TO AVOID RISK OF SUFFOCATION.

FALL and STRABGULATION HAZARDS:

Infant have suffered head injuries falling from swings and have strangled in straps.

ALWAYS use restraints. Adjust to fit snugly.

STOP using product when infant attempts to climb out (approximately 9 months)

Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If a baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

ALWAYS place bouncer on floor. Never use on any elevated surface.

SUFFOCATION HAZARD: Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway.

Always keep bouncer seat fully reclined until infant is at least 4 months old AND can hold up head without help.

WARNINGS AND GUIDELINES FOR USE OF BATTERIES:

- **ONLY USE 2 PIECES OF "AA" BATTERIES.**
- **ALWAYS SECURE THE BATTERY COMPARTMENT COVER AFTER HAVING INSERTED THE BATTERIES.**
- **DO NOT LET CHILDREN HAVE ACCESS TO THE BATTERIES OR PLAY WITH THEM.**
- **INSERT BATTERIES ONLY OF THE DESIGNATED TYPE AND VOLTAGE.**

- DO NOT USE BATTERIES OF DIFFERENT TYPES.
- DO NOT MIX USED AND NEW BATTERIES.
- FOLLOW THE DESIGNATED POLARITY IN THE BATTERYCOMPARTMENT.
- REMOVE THE DAMAGED OR WORN OUT BATTERIES.
- REMOVE THE BATTERIES WHEN YOU ARE NOT USING THE PRODUCT.
- DO NOT THROW THE BATTERIES IN AN OPEN FIRE. DO NOT BREAK THE BATTERIES APART.

CAUTION:

- WASTE FROM EXHAUSTED OR UNUSABLE BATTERIES MUST BE DISPOSED OF SEPARATELY.
- BATTERIES SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE.
- BATTERIES SHOULD BE DISPOSED OF AT THE DESIGNATED LOCATIONS.

CARE AND MAINTENANCE

- CLEAN THE PLASTIC AND METAL PARTS WITH SLIGHTLY DAMP SOFT CLOTH WITH MILD SOAP.
- CLEAN THE SWING CANOPY AND TOYS WITH A DAMP TOWEL. FOLLOW THE GUIDELINES FROM THE LABEL OF EACH TOY.
- THE UPHOLSTERY MAY BE HAND WASHED.
- DO NOT TUMBLE OR MACHINE DRY.
- DO NOT WET THE ADAPTER, CONTROL BOX OR REMOTE CONTROL WITH WATER OR OTHER LIQUIDS.
- BEFORE CLEANING, REMOVE THE PLUG OF THE ADAPTOR FROM THE SOCKET AND TURN OFF THE POWER SUPPLY.
- DO NOT CLEAN WITH ABRASIVE DETERGENTS THAT CONTAIN AMMONIA, BLEACH OR SPIRIT.
- WHEN YOU STORE OR TRANSPORT THE PRODUCT, DO NOT PLACE ITEMS OR OBJECTS IN OR ON IT BECAUSE YOU MAY DAMAGE THE STRUCTURE, FABRIC COVER OR CONTROL BOX.
- STORE THE PRODUCT IN A CLEAN AND DRY PLACE.
- DO NOT SUBJECT THE PRODUCT TO DIRECT ENVIRONMENTAL SUN, RAIN, MOISTURE OR HARSH TEMPERATURE CHANGES.

LIMITED WARRANTY:

- We warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect.
- This warranty covers 1 year from the date of original purchase.
- This warranty is valid only upon presentation of proof of purchase.
- This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included.
- This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way.

This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

GARANTİ BELGESİ

Seri: 4A

MALIN
Cinsi : ANA KUCAĞI
Markası : HUGGY
Modeli : WAVE

SATICI FİRMANIN
Ünvanı:
Adresi :

ALICİNİN
Adı Soyadı : _____
Adresi : _____

Tel : _____

Fatura No
Kaşe ve İmza

Malin Tüketicisiye
Teslim Tarihi : _____
Teslim Yeri : _____

Azami Tamir Süresi : 20 İş Günü
Garanti Süresi : 2 Yıl

Üretici / İthalatçı Firma:
Ünvanı : Kurt Grup Dış Ticaret A.S.
Merkez Adres : 1. OSB 6.Cadde No:1 - Sivas
Telefon : 0346 218 14 13
Faks : 0212 810 46 44

ÖNEMLİ NOTLAR:

Lütfen ürünü kullanmadan önce kullanım kılavuzunu dikkatli okuyunuz.
Garanti belgesi, sadece üründeki fabrikasyon üretim hatalarını kapsamaktadır.
Karalannmış, hasar görmüş yada üzerindeki bâgilere kapatalacak şekilde etiket yapıştırılmış garanti kartları geçersizdir.



GARANTİ ŞARTLARI

- Garanti süresi, malin teslim tarihinden itibaren başlar ve iki yıldır.
- Malin bütün parçaları dahil olmak üzere tamamı firmamızın garantisini kapsamıştır.
- Malin garanti süresi içerisinde arızalanmasından durumunda, tamirde geçen süre garanti süresine eklenir.
Malin tamir süresi en fazla 20 iş günüdür. Bu süre, malın ilişkin arızanın servis istasyonuna, servis istasyonunun olmaması durumunda, malin satıcısı, bayi, acentası, temsilciliği, ithalatçısı veya imalatçısından birisine bildirim tarihinde başlar. Sanayi malının azasının 10 iş günü içerisinde tesisatçıyı veya ithalatçı, malin tamiri tamamlanıncaya kadar, benzer özelliklere sahip başka bir sanayi malin tüketicisinin kullanımına tâhsis etmek zorundadır.
- Malin garanti süresi içerisinde, gerek malzeme gerek işçilik, gerekse montaj hatalarından dolayı arızalanması halinde, işçilik masrafı, değişimlerin parça bedeli yada başka herhangi bir ad altında hiçbir ücret talep etmekzsin tamiri yapılacaktır.
- Tüketicinin, ücretcisiz onarm hakkını kullanmasına halinde malin; a) Garanti süresi içinde tekrar arızalanması, b) Tamir için gereken azami sürenin aşılması, c) Tamirin mümkün olmadığınn, yetkili servis istasyonu, satıcı, üretici veya ithalatçı tarafından bir raporla belirlenmesi durumlarında, tüketici malin bedeladesini, ayip oranında bedel indirmeni veya imkan varsa malin ayıpsız misli ile değiştirilmesini saticidan talep edebilir. Satıcı, tüketicinin talebinde reddedmez.
- Bu talebin yerine getirilmesinden durumunda satıcı, üretici ve ithalatçı mitesesinden sorumludur.
- Malin ayıpsız misli ile değiştirilmesini satıcı içün orantısız güçlükler beraberinde getirecek olmasi halinde tüketici, sözleşmeden dönme veya ayip oranında bedelen indirim haklarından birini kullanılır. Orantısızlığı tâyininde malin ayıpsız değeri, ayıbın öncemi ve diğer seçimlik haklara basvurmanın tüketici açısından sorum teskil edip etmeyeceği gibi hususlar dikkate alınır.
- Tüketicinin sözleşmeden dönme veya ayip oranında bedelen indirim hakkinda sevgili tüketici, tüketici bedelinin tümünü veya bedelen yapılan indirim tutarını derhal tüketiciye iade etmek zorundadır.
- Tüketicinin malin ayıpsız misli ile değiştirilmesini hakını seçmesi durumunda satıcı, üretici veya ithalatçı, malin ayıpsız misli ile değiştirilmesi tüketicinin kendilerine bildirilmesinden itibaren azami otuz iş günü içerisinde, bu talebi yerine getirmesi zorunludur.
- Birinci fikrann (c) bendinde belirtilen raporun, arızanın bildirim tarihinden itibaren o mala ilişkin azami tamir süresi içerisinde düzenlenmesi zorunludur.
- Malin kullanma kılavuzunda yer alan hususlara aykırı kullanılmamasından kaynaklanan anızlar ve kullanım hatalasından kaynaklanan anızalar garanti kapsamı dışındadır.
- Garanti süresi içerisinde, servis istasyonuna tarafından yapılmamasının sorunu olduğu, imalatçı veya ithalatçı tarafından şart koşulan periyodik bakımlarda; verilen hizmet karşılığında tüketiciden işçilik ücreti veya benzeri bir ücret talep edilemez.
- Fabrikasyon hatalarından doğan arızaların tamirinde garanti kapsamının geçerli olabilmesi için, ürünün satıcı mağaza tarafından kaselenmiş orijinal fatura ve garanti kartı ile servise getirilmesi şarttır.
- Tüketiciler şikayet ve ifrâzları konusunda Tüketicî Mahkemelerine ve Tüketicî Hâkim Heytelerine başvurabilirler.
- Malin ayıpli olduğunu anlaşılması durumunda tüketici;
- a) Satılan geri vermeye hazır olduğunu bildirerek sözleşmeden dönme, b) Satılan alikoypay ayip oranında satış bedelen indirim isteme, c) Asırı bir masraf gerektirmediği takdirde, bütün masrafları satıcıya ait olmak üzere satılanın ücretsiz onarılması isteme, ç) İmkân varsa, satılanın ayıpsız bir misli ile değiştirilmesini isteme, seçimlik haklarından birini kullanabilir.

Kurt Grup Dış Tic. Ltd. Sti 1. OSB 2. Kısım 6. Cadde No:1
Merkez / Sivas Tel. : 0346 221 46 60 Whatapp: 0506 480 10 19
www.kurtgrupltd.com



“ Care for Future “

Kurt Grup Dış Tic. Ltd. Sti 1. OSB 2. Kısım 6. Cadde No:1
Merkez / Sivas Tel. : 0346 221 46 60 Whatapp: 0506 480 10 19
www.kurtgrupltd.com