

luxeva

Instruction Manual **GB**

Safety Instructions	3
Safe distances: high temperature, fire protection, wall mounting (* option)	7
Technical Features	8
Using your heater	10
Remote Control, Without remote control	12
Maintenance and Cleaning	13
Troubleshooting	14



Dear Customer,

Thank you for the confidence you placed in Luxeva products. Our goal is to ensure that you use this product, which has been manufactured in our modern facilities in precise working conditions, conforming to total quality idea and without harming nature.

We recommend that you read and carefully store the User Manual before you use your heater, so that it can preserve its features for a long time and serve you most efficiently.

NOTE:

This User Manual is prepared for more than one model. Some of the features stated in the manual may not be found in your device. These features are denoted with *

Our products are for domestical use, not for commercial use.



"READ THE INSTRUCTIONS BEFORE DEPLOYING OR USING THIS DEVICE."



This product is manufactured in
environment-friendly modern facilities
without harming the nature

"It complies with EEE Regulation."

Safety Instructions



 
This device is manufactured in compliance with safety regulations. Usage against the rules causes harm to person and device.



Please read the User Manual carefully before operating the device. You will find important informations inside the User Manual regarding mounting, safety, usage and maintenance. Thus you will both protect yourself and prevent the device from coming to harm.



If the power cord is damaged, it must be replaced by the manufacturer or its service agency or a personel qualified in the same degree to prevent a dangerous situation. It must be checked whether there are breaks or deformations on the heating element present on the device. If glass panels are damaged, the heater must not be used. Authorized service must be called.



It must be ensured that the main power is 220-240V AC, 50-60 Hz and the power line is connected to the fuse. Mains safety must be checked. Fuse must be 16 Amperes. Your device must be used with grounded socket and grounded socket must be outside the heater area and the hot surface. Also, it must be checked whether the socket is loose or damaged. Because loose sockets damage the device and the power main.



Your device must not be used connected to the same power cable or fuse with another device.



Power cord must not be left on the hot body of the device or near it.



If your device will not be used for a long period of time, if cleaning or maintenance will be conducted, the device must be unplugged. It must be ensured that the device has cooled down.



The device is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Safety Instructions



Definitely do not let your device come into contact with water.

 


The electrical connection of the device must be separated from the mains during mounting and maintenance or repair works. Device must be unplugged to be separated from the mains.



Do not touch the metal terminals immediately after unplugging the appliance.

Ensure that the feed cable and the plug is clean and dust-free prior to use.

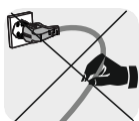

Never unplug the feed cable from the plug by tugging on the cable. Ensure that you hold the plug correctly as you plug it into or take it out of the socket. Do not touch the feed cable with wet hands.



Do not make a joint to the feed cable. Otherwise, malfunction, electric shock or fire may occur.



 
Do not pass the feed cable under heavy objects. Otherwise, electric shock or fire risk may occur.



Do not turn off your heater only by unplugging it or shutting down the fuse, always turn off by using the heater tube function button.



Fire risk exists if the heater is covered by or positioned close to curtains or other combustible materials.



The flame protector of this heater is for preventing direct access to heater elements and must be in place while the heater is in use.



 
Do not use your device outside its intended purpose. (Do not use it for drying clothes or keeping animals or plants warm.)




Never try to clean the device with solvents or flammable liquids. (It may cause electric shock or fire)

- Do not cover the dust protection cover while the device is operating or hot.
- Children of less than 3 age should be kept away unless continuously supervised.
- Do not use this heater in the vicinity of the bath, shower or swimming pool.
- The heater must not be used if the glass heating elements are damaged.
- **CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- For the safety of children under 8 years of age, the appliance must be operated out of reach, following the specified safety instructions and checking all connections. When out of use, place the heater in a safe place and keep the electrical connection cables (plugs) away from the sockets.
- The expected life of this product is ten years.
- **WARNING:** This heater is not equipped with a device to control the room temperature. The heater must be used by an experienced person in the presence of children, physical disabilities persons, persons with insufficient experience and inadequate knowledge. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Safety Instructions



 
Do not operate the device while sleeping or while away from where the device is located.




Refrain from using extending cord, it might cause fire due to overheating. If you have to use an extending cord, the cable cross section must be at least 2 mm² (14AWG).



 The device must be on a level and smooth surface during use. Do not operate your device on unstable or unsafe surfaces.

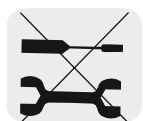

 Do not try to disassemble or repair the heater. Never shake the heater.



A faint smoke and smell might form during the first use of your device. This is normal. Do not touch the device while running or right after operation.



Device must be unplugged before cleaning. Do not clean your device with vapor cleaners.



Children should be supervised to ensure that they do not play with the appliance.. Flame protector does not provide a full protection for small children and handicapped people.



Store your device in dry and enclosed locations.



Do not cover your heater in order to prevent excessive heating. Do not close the ventilation ducts and the wire part.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved

Children shall not play with the appliance

Cleaning and user maintenance shall not be made by children without supervision

Safe distances: high temperature, fire protection, wall mounting (* option)




Minimum 0,75 meter distance must be present between the device and the ceiling.



Min. 1.8 meter distance must be between the device and the floor for wall mounting.



 Min. 1,5 meter distance must be between the device and curtains, wood, cardboard fabric etc. Materials, living things and other devices.



Fingers or other object must not be protruded into the protective cage wire.



The heater must not be located in front of a socket-outlet.



 
Do not move the device while running. Always shut off the device before touching and wait for it to cool down. This heater should not be equipped with a device for controlling the room temperature. Unless constant control is ensured, do not use this heater in small rooms used by people who cannot leave their rooms.



Do not operate within 7 meters 60 centimeters distance of flammable materials (gas, alcohol etc.) or do not place near motor devices that are not expected to run. Heater place solvent, thinner and similar flammable materials on or near the working surfaces of the heating devices or do not place near electrical house appliances.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1,5m from the air outlet.

Device Hardware (Portable Type)

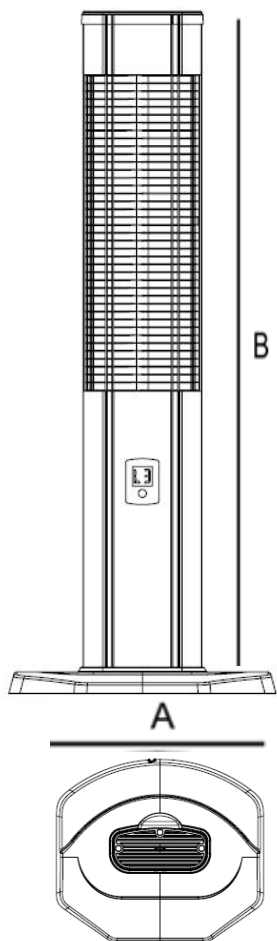

Model	Height (B)	Width (A)	Depth (C)	Total Power (W)	Feed (V/Hz)	Drawing Current (A)	Protection Degree	Device class
LXV2000-TS LXV2000-VR LXV1800 LXV2000	960 mm	405 mm	357 mm	2000 W	220-240V~ 50/60 Hz	8.1 A	IP20 (OPT. IP44)	I
LXV2500-VR LXV2200	960 mm	405 mm	357 mm	2500 W	220-240V~ 50/60 Hz	11.3 A	IP20 (OPT. IP44)	I
LXV 1500-VR LXV 1500-TS 120	960 mm	405 mm	357 mm	1500 W	120V~ 60 Hz	13.6 A	IP20 (OPT. IP44)	I
LXV 1200-TS LXV 1200	650 mm	405 mm	357 mm	1200 W	220-240V~ 50/60 Hz	5.5 A	IP20 (OPT. IP44)	I
LXV1500-TS MD LXV1500-VR MD	650 mm	405 mm	357 mm	1500 W	220-240V~ 50/60 Hz	6.8 A	IP20 (OPT. IP44)	I

Model	1. Level	2. Level	3. Level	Thermostat	Remote Control	Control Panel
LXV2000-TS	1000 W	2000 W				MECHANICAL
LXV2000-VR	650 W	1300 W	2000 W	✓	✓	ELECTRONICS
LXV2500-TS	1250 W	2500 W				MECHANICAL
LXV2500-VR	850 W	1700 W	2500 W	✓	✓	ELECTRONICS
LXV 1800 LXV 2000	2000 W			✓		MECHANICAL
LXV 2200	2500 W			✓		MECHANICAL
LXV 1200	1200 W			✓		MECHANICAL
LXV 1200-TS	600 W	1200 W				MECHANICAL
LXV 1500-VR LXV 1500-VR MD	500 W	1000 W	1500 W	✓	✓	ELECTRONICS
LXV 1500-TS 120 LXV 1500-TS MD	750 W	1500 W				MECHANICAL

1- APPLIANCE BODY

2-ENERGY CABLE

3-FIXED REAR LEG

4. FIXED FRONT LEG

5-ENERGY CABLE FIXING PLASTIC

 
6-ENERGY CABLE FIXING PLASTIC
FITTING SCREW

7-BASE FITTING SCREW


8-CONTROL PROBE

9-CR-NI WIRE GRATE

10- CARBON FILAMENT

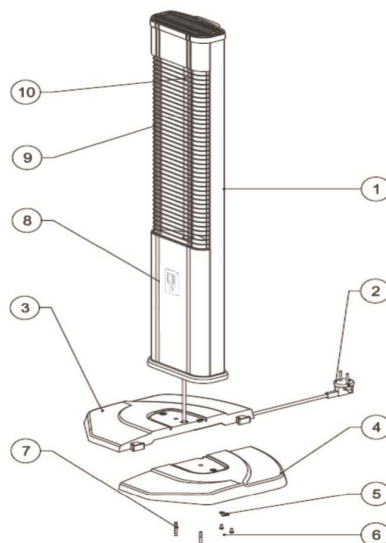

Device Hardware (Wall Type)

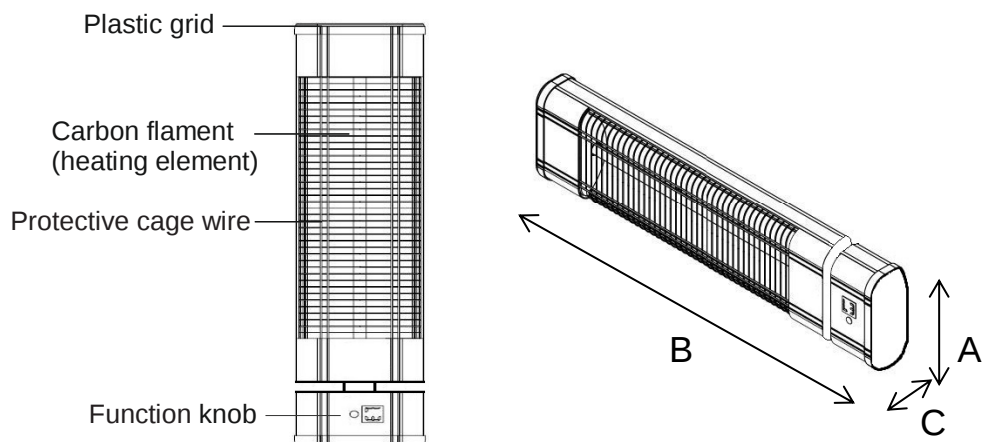 

Model	Height (A)	Width (B)	Depth (C)	Total Power (W)	Feed (V/Hz)	Drawing Current (A)	Protection Degree	Device class
LXV 2000-HR LXV 2000-HRS LXV 2000-BC LXV 2000-TS	185 mm	810 mm	110 mm	2000 W	220-240V ~, 50/60 Hz	8.1 A	IP55	I
LXV 2500-HR LXV 2500-HRS LXV 2500-BC	185 mm	810 mm	110 mm	2500 W	220-240V ~, 50/60 Hz	11.3 A	IP55	I
LXV 1500-HR LXV 1500-HRS	185 mm	810 mm	110 mm	1500 W	120V ~ 60 Hz	13.6 A	IP55	I
LXV 1500-BC LXV 1500-HRS MD	185 mm	570 mm	110 mm	1500 W	220-240V ~, 50/60 Hz	6.8 A	IP55	I
LXV 1200-BC LXV 1200-HRS	185 mm	570 mm	110 mm	1200 W	220-240V ~, 50/60 Hz	6.8 A	IP55	I

Model	1. Level	2. Level	3. Level	Thermostat	Remote Control	Control Panel
LXV 2000-HR LXV 2000-HRS	650 W	1300 W	2000 W	✓	✓	ELECTRONICS
LXV 2500-HR LXV 2500-HRS	850 W	1700 W	2500 W	✓	✓	ELECTRONICS
LXV 1500-HRS LXV 1500-HRS MD	500 W	1000 W	1500 W	✓	✓	ELECTRONICS
LXV 1500-BC MINI	1500 W					MECHANICAL
LXV 1200-HRS	400 W	800 W	1200 W			ELECTRONICS
LXV 1200-BC	1200 W					MECHANICAL

Using Of Your Heater

Plug the device in an appropriate grounding receptacle.


Bring the on/off switch in working position.

Attention ! Do not touch the metal terminals on the plug immediately after unplugging it.

Attention: The device has a safety system. In case of overturning, the safety system will engage and cut off the power.

Control Panel




A	LCD display
B	on/ off function button

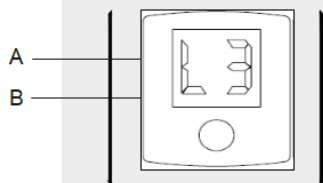 

0	Off
1	On
MAX	Maximum Level



0	Off
1	1.Level
2	2.Level

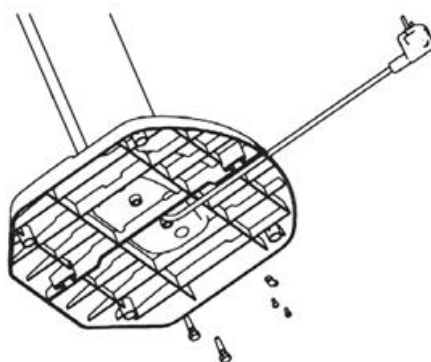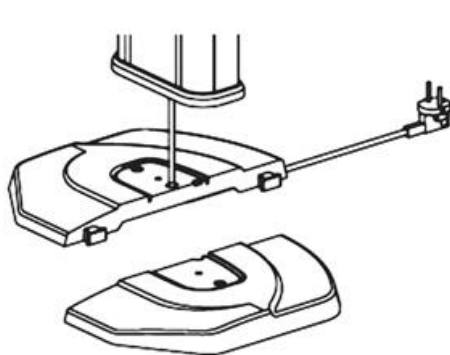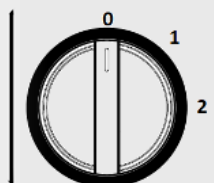   

Using Of Your Heater


Plug the device in an appropriate grounding receptacle.

Bring the on/off switch in working position.



Attention ! Do not touch the metal terminals on the plug immediately after unplugging it.

Control Panel

A	LCD display
B	on / off function button

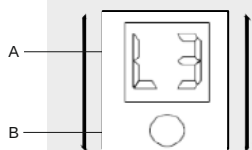 


0	Off
1	On
MAX	Maximum Level

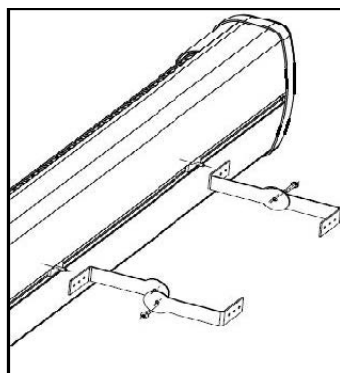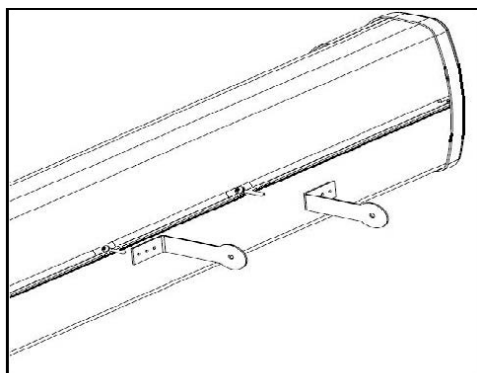  

Wall type products can be used in horizontal and vertical positions by loosening the pivot screw as well. The pivot screw must be tightened again after the desired working position is set.

 WARNING: If the heater is used vertically, the digital display should remain on the bottom.

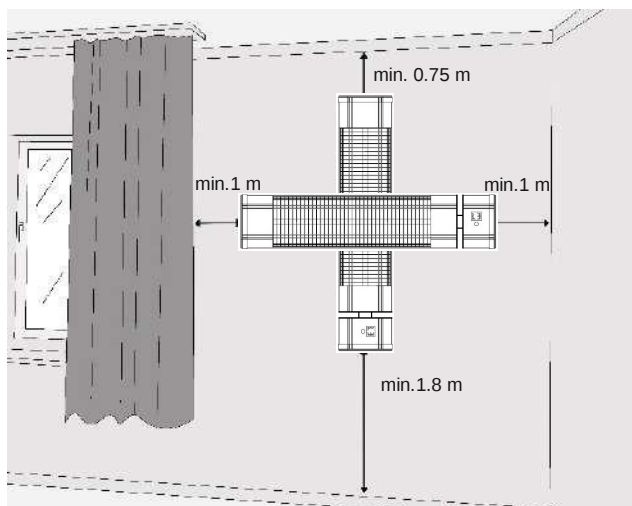

Remote Control (* Option)

Installing and Replacing Remote Control Batteries

As it can be seen in Figure 1 below, the tabs are pushed in the direction shown by the arrow, it is simultaneously pulled in the direction shown by the arrow in the second figure and the battery is replaced. A new battery is installed using the same method. Only Cr2025 batteries must be used. **NOTE:** Remove the gelatin from the battery compartment before using the remote for the first time. If the gelatin is not removed, the remote control will not operate .



Standby: Indicates that the product is ready for operation.



The button used for turning on and off the product.



Used to decrease the thermostat and timer values.



Used to increase the thermostat and timer values.



Heating level adjustment: shifts to power control mode. This button is used to make level adjustment between levels 0 and 3. In each step, L1, L2, L3 are appear respectively. After selecting the desired stage, the product runs in the selected stage.



Thermostat button: shifts to heat adjustment mode. + and - buttons are used to make heat adjustment between 20 and 40 degrees. Press the thermostat button or wait 5 seconds to save the set temperature. The point on the middle of the screen flashes when the thermostat of the product is active. To cancel the thermostat, simply press the Level key.



Timer button: It shifts to the timing mode and "0H" appears on the screen. Timing up to 9hours is carried out with + and - buttons ("0H,1H,...9H" appears on the screen). After the timer is set, wait 5 seconds or press the timer button to save the timer. To switch off the schedule, enter the program again and select (0H).

Note: The point on the right of the screen flashes when the timer of the product is ready. When the time expires, the device switches off and rings an alarm for 1 second.

1L, 2L, 3L : Show the power level of the heater.

1H, 2H, 3H,...9H : Heater timer indicator (programming up to 9 hours is possible)

E1: Overheating: If the device overheats in conditions other than the standard operating conditions, it rings an alarm for 10 sec as a warning and stops the heating function.

 
E2: After 12 hours of operation, The alarm sounds for 10 seconds and device turns off.

E3: Error indicator; it indicates that the device is not balanced.

Without Remote Control

Function Button:  It controls the heat level adjustment and timer adjustment of the heater.

The heat level is increased one level with each pressing. After (L3), it switches to standby mode by pressing the function key again. This button is pressed for 3 sec to perform timer adjustment. The desired time zone in the timer menu is selected by incrementing the 1 step each time the function key is pressed(0H...9H). After waiting 5 sec, the set time zone is active and the light flashes in the lower right corner of the display. To cancel the timer, set the (0H) option from the schedule program, wait 5s. Then timer turns off.

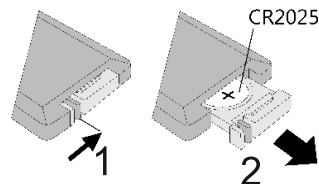

Maintenance

It is very important to perform careful and regular maintenance of the device in accordance with the recommendations made in this manual so that it can run efficiently for a long time.

1. The cleanliness of the reflector (reflecting mirror) and tubes must be checked at least once a month by the user. The cleaning and maintenance instruction must be applied if dirty.
2. According to the amount of dust in the place of use, the said checks should be performed more often.
3. Power cable and plug must be checked while cleaning the device. If there is a deformation in the power cord or the plug, it must be taken to the authorized service.
4. Reflector, wire and body deformation must be visually inspected while cleaning the device. If there is a deformation, authorized service must be called for things to do.
5. It is recommended that the reflector is changed every two years for the device to run more efficiently. Reflector must be changed by the authorized service.
A clean reflector ensures the maximum level of heating efficiency.

Cleaning

Attention! Regular and careful cleaning performed by the user will ensure that your device will run more efficiently and prolong its life.

1. Your device must be turned off before starting to clean, its power cord must be unplugged from the socket for safety and you must wait until it cools down.
2. If the reflector (reflecting mirror) and carbon filament tube is dirty, it must be cleaned from the outside with dry air without opening the protective cage wire of the device, if possible.
3. The outer surface of the device must be cleaned with a soft cotton cloth or a soft brush.
4. Never use corrosive or melting liquids to clean the heater. These materials may damage the plastic parts.
5. Do not clean your device using vapor cleaners.

Troubleshooting

Please check the points below before calling the technical service about the problems you might encounter with your device.

Problems	Solutions
Device does not run.	■ Check whether the plug is plugged into the socket correctly. ■ Ensure the device is in balanced position. (Your device has balance safety.) ■ Ensure that the running switch and the thermostat of the device are in correct, open position. ■ Check whether there is a problem in the house's electrical installation. ■ Ensure you follow the using instructions. ■ If the problem persists, contact the nearest Luxeva authorized service.



According to the European waste regulation 2012/19 / EU, this symbol on the product or its packaging indicates that this product should not be treated as household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could arise from inappropriate waste handling of the product. For more detailed information about recycling of this product, please contact your local city office or your household waste disposal service.

Your product contains batteries covered by the European Directive. 2006/66 / EC cannot be disposed of with normal household waste. Please check the local rules on the separate collection of batteries. The correct disposal of batteries helps prevent potential negative consequences for the environment and human health.

luxeva

CE

www.luxeva.com.tr