



Wiegand Destekli QR + EM Kart Okuyucu (515R40)

Özellikler:

- 1.DC 12V 1000MA
- 2.Seçim için EM kartı veya Mifare Kartı
- 3.Kağıt veya ekran QR Kodunu tanımlayın
- 4.Üçüncü taraf Erişim Kontrol sistemine 26/34 tartım çıkışı destekler
5. RS232, RS485, USB sanal klavye, USB sanal seri port, HTTP çıkışı, MQTT çıkışı isteğe bağlı

Özellikler	Açıklam
Boyut (U x G x Y)	86 x 86 x 42 mm
Malzeme	Kasa: PC / Tanımlama Paneli: Temperli Cam
Arayüzü	Wiegand 26/34, RS485, RS232, USB, TCP/IP (isteğe bağlı)
Kod Çözme Desteği	QR kodu, 1D barkod
Voltaj	4-15V (geniş voltaj girişi)
Akım	800 mA
Okuma Açısı	Kamera merkezli, 45° eğimli
Okuma Hızı	< 200 ms
Okuma Aralığı (QR/Barkod)	0-20 cm
Okuma Özellikleri	Otomatik indüksiyon, bip sesi ipucu
Işık Kaynağı	Dahili LED, vurgulama önleyici girişim
Kod Çözme Modu	Görüntü kod çözme
Çalışma Ortamı	Sıcaklık: -20~70°C / Nem: %10~%90
Desteklenen Sistemi	Windows (XP, 7, 8, 10), Linux
Gösterge	Kırmızı: Çalışıyor / Yeşil: Geribildirim / Açık Yeşil: İnternet
Işıkları Okuma	3-6 cm
Desteklenen Kart Aralık(Kart)	EM veya Mifare kartı
Fabrika Ayarlarına Dönme	Cihazın arkasındaki REST deliğine keskin bir nesne sokun ve bırakın; QR okuyucu

QR Code Reader Technical Parameter

VoltageSupport: DC 5V-16V

Current: ≤0.75W

Decoding support: QR code, one dimensional code

Reading range: ID 1-10CM, IC 1-5CM

Reading card type: EM-ID, M1, 15693, 125KHZ \

ISO1443A \ ISO1443B \ ISO15693

Application environment: -10°C-60°C

Humidity: 10%-90%

Interface: Wiegand 26,34, RS485, RS232, USB

7pin Wire connection

Red: VCC +12V

Black: GND

Green: DO

White: D1

Blue: (26/34)

Yellow: TX/4R-

Gray: RX/4R+



8pin Wire connection

Red: VCC +12V

Black: GND

Green: DO


White: D1

Blue: LED/BEEP

Yellow: (26/34)

Black: None

Yellow: None.

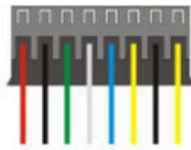

Terminal wiring

VCC: DC12V

GND: GND

DO: DATAO

D1: DATAI

LED: LED indicate

BEEP: Sound

TX/R+ RS232+/RS485+

RX/R- RS232-/RS485-

SPK, SPK+ not defined

RJ45 connect to network, PC software setting reader parameter; apply to HTTP mode
micro-USB: For USB virtual keyboard and USB virtual serial port mode communication.



VCC GND DO D1 LED BEEP TX/R+ RX/R- SPK- SPK+

Do not connect the power to the SPK+ and SPK- ports.

Wiegand output, Default QR code output is decimal number.

Restore Factory Settings: Use sharp objects insert into REST hole of QR code reader backside, release till the QR code reader automatically restart.