



PicoSource® PG900 Series

Pulse Generators

User's Guide



Contents

1 Introduction	1
1 Overview	1
2 Minimum PC requirements	2
3 Safety information	2
1 Symbols	3
2 Maximum input/output ranges	4
3 Grounding	4
4 External connections	5
5 Environment	6
6 Care of the product	6
4 Software licence conditions	7
5 Trademarks	8
6 Warranty	8
2 Product information	9
1 What do I get?	9
2 Connections	10
3 How to use your pulse generator	12
1 Connection diagrams	12
1 TDR applications	13
2 TDT applications	14
3 TDT and crosstalk	15
2 Free-running operation for SRD integrated pulse outputs	16
3 Free-running operation for TD outputs	18
4 External trigger operation	19
5 Single trigger operation	20
4 PicoSource PG900 software	21
1 Display area	22
1 Intensified Zone	23
2 Positive and negative pulse outputs	24
3 Tunnel diode pulse head outputs	26
4 Tunnel diode pulse head controls	28
5 Mode	29
6 Timing	30
7 External trigger	32
8 Trigger output	35
9 Display scaling	36
1 Vertical Scale	36
2 Horizontal Scale	38
10 Undo/Redo	40
11 Main Menu	40

5 Theory of operation	41
1 PicoSource PG900 block diagram	41
2 Hardware components for PicoSource PG900 models	42
6 Specifications and characteristics	43
1 PG900 family specifications	43
2 Integrated step recovery diode outputs	44
3 Drive output with tunnel diode pulse heads	45
4 Timing	46
5 External trigger input	47
6 Trigger output	48
7 General	49
7 Declaration of Conformity	50
Index	51

1 Introduction

1.1 Overview

The PicoSource PG900 Series instruments are PC-based fast-edge pulse generators that are fully compatible with USB 2.0 and 3.0 PCs.

The pulse generators are available in three differential output models and offer extensive control over pulse parameters including amplitude, period, width and deskew between output channels.

- PicoSource PG911:
A two-channel pulse generator based on Step-Recovery Diode (SRD) technology. It produces two pulses with opposite polarity, up to 6 V amplitude with 60 ps rise time.
- PicoSource PG912:
A two-channel pulse generator based on Tunnel Diode (TD) technology. It is supplied with small remote tunnel diode pulse heads that generate positive and negative 200 mV pulses with 40 ps rise time.
- PicoSource PG914:
A four-channel pulse generator based on both SRD and TD technologies. It can produce two pulses with opposite polarity, up to 6 V amplitude with 60 ps rise time, and two pulses with opposite polarity, 200 mV amplitude and 40 ps rise time from remote tunnel diode pulse heads.



PicoSource Pulse Generators are capable of producing pulses of either polarity with very fast rise times. The generators will free-run or may be triggered from an external source, with either positive or negative pulses, at rates of up to 1 MHz. The units are designed to operate into 50 Ω lines.

The PicoSource instruments can be used as:

- general-purpose pulse generators for the testing of semiconductors, components, networks, electro-optical components etc.
- fast rise/fall time step generators which can be used to check the dynamic response of wide-band oscilloscopes and amplifiers
- a stimulus for high-resolution TDR and TDT measurements
- a step source for an ultra-wideband impulse forming network

For basic instructions on installing and using your pulse generator, please refer to [How to use your pulse generator](#) or the Quick Start Guide supplied with your instrument.

Features

- 60 ps rise time at 6 V amplitude (integrated SRD pulse outputs)
- 40 ps rise time at 200 mV amplitude (tunnel diode pulse outputs)
- 1 Hz to 1 MHz repetition rate
- 200 ns to 4 μ s pulse width
- Continuous, external or manual trigger mode
- Differential outputs with deskew
- Low-jitter trigger input and output
- Storage and carry case
- USB 2.0- and 3.0- compatible

1.2 Minimum PC requirements

To ensure that the PicoSource PG900 pulse generator and software operate correctly, you must use a computer with the system requirements and one of the operating systems shown in the table below. The performance of the instrument will be improved with a more powerful PC, and operation will greatly benefit from a multi-core processor.

Processor	As required by the operating system
Memory	
Free disk space	Software occupies about 20 MB
Operating system	Microsoft Windows XP (SP3), Windows Vista, Windows 7, 8, 8.1 (not Windows RT) and 10. 32-bit or 64-bit version.
Ports	USB 2.0 (also compatible with USB 3.0)

1.3 Safety information

To prevent possible electrical shock, fire, personal injury, or damage to the product, carefully read this safety information before attempting to install or use the product. In addition, follow all generally accepted safety practices and procedures for working with and around electricity.

The product has been designed and tested in accordance with the European standard publication EN 61010-1:2010, and left the factory in a safe condition.









The following safety descriptions are found throughout this guide:

A **WARNING** identifies conditions or practices that could result in injury or death.

A **CAUTION** identifies conditions or practices that could result in damage to the product or equipment to which it is connected.

1.3.1 Symbols

These safety and electrical symbols may appear on the product or in this guide.

Symbol	Description
	Direct current
	Alternating current
	Earth (ground) terminal This terminal can be used to make a measurement ground connection. It is not a safety or protective earth.
	Chassis terminal
	Possibility of electric shock
	Caution Appearance on the product indicates a need to read these safety instructions.
	Static awareness. Static discharge can damage parts.
	Do not dispose of this product as unsorted municipal waste.

**WARNING**

To prevent injury or death use the product only as instructed and use only accessories supplied or recommended. Protection provided by the product may be impaired if used in a manner not specified by the manufacturer.

1.3.2 Maximum input/output ranges

Observe all terminal ratings and warnings marked on the product.

The table below indicates the maximum voltage of the outputs and the overvoltage protection range for the trigger input on each pulse generator. The overvoltage protection ranges are the maximum voltages that can be applied without damaging the instrument.

Connection port	Maximum voltage (output or input)	Overvoltage protection
Integrated pulse outputs	± 8 V unterminated	± 10 V Do not connect a source
Drive outputs	± 5 V DC or AC pk	± 5 V DC or AC pk Do not connect a source
Tunnel diode pulse head outputs	250 mV	0 V Do not connect a source
Trigger input	± 2 V DC or AC pk	± 2 V DC or AC pk
Trigger output	+3 V DC or AC pk	+4 V / -2 V DC Do not connect a source



WARNING

To prevent electric shock, do not connect an input voltage to the integrated pulse outputs or the tunnel diode pulse heads.



CAUTION

Exceeding the overvoltage protection range on any connector can cause permanent damage to the instrument and other connected equipment.

CAUTION

To prevent permanent damage, do not apply an input voltage to any of the output channels of the pulse generator.

1.3.3 Grounding



WARNING

The instrument's ground connection through the USB cable is for functional purposes only. The instrument does not have a protective safety ground.

WARNING

To prevent injury or death, never connect the ground of an input or output (chassis) to any electrical power source. To prevent personal injury or death, use a voltmeter to check that there is no significant AC or DC voltage between the pulse generator's ground and the point to which you intend to connect it.



CAUTION

Applying a voltage to the ground input is likely to cause permanent damage to the instrument, the attached computer, and other equipment.

CAUTION

To prevent signal degradation caused by poor grounding, always use the high-quality USB cable supplied with the instrument.

1.3.4 External connections

**WARNING**

To prevent injury or death, only use the adaptor supplied with the product. This is approved for the voltage and plug configuration in your country.

Power supply options and ratings				
PicoSource model	USB connection	Ext DC power supply		
		Voltage	Current	Total power
PG900 Series	USB 2.0. Compatible with USB 3.0.	5 V	1.6 A pk	8 W

**CAUTION**

Take care to avoid mechanical stress or tight bend radii for all connected leads, including all coaxial leads and connectors. Mishandling will cause deformation of sidewalls, and will degrade performance.

1.3.5 Environment

**WARNING**

To prevent injury or death, do not use in wet or damp conditions, or near explosive gas or vapor.

**CAUTION**

To prevent damage, always use and store your pulse generator in appropriate environments.

	Storage	Operating
Temperature	-20 °C to +50 °C	+5 °C to +35 °C (+15 °C to +25 °C or $T_{CAL} \pm 5$ °C for quoted accuracy)
Humidity	Up to 95% RH (non-condensing)	Up to 85% RH at +35 °C (non-condensing)
Altitude	2000 m	
Pollution degree	2	

1.3.6 Care of the product

The product and accessories contain no user-serviceable parts. Repair, servicing and calibration require specialized test equipment and must only be performed by Pico Technology or an approved service provider. There may be a charge for these services unless covered by the Pico two-year warranty.

**WARNING**

To prevent injury or death, do not use the product if it appears to be damaged in any way, and stop use immediately if you are concerned by any abnormal behavior.

**CAUTION**

To prevent damage to the device or connected equipment, do not tamper with or disassemble the instrument, case parts, connectors, or accessories.

When cleaning the product, use a soft cloth and a solution of mild soap or detergent in water, and do not allow liquids to enter the instrument's casing.

1.4 Software licence conditions

The material contained in this release is licensed, not sold. Pico Technology grants a licence to the person who installs this software, subject to the conditions listed below.

Access. The licensee agrees to allow access to this software only to persons who have been informed of these conditions and agree to abide by them.

Usage. The software in this release is for use only with Pico products or with data collected using Pico products.

Copyright. Pico Technology claims the copyright of, and retains the rights to, all material (software, documents etc.) contained in this release. You may copy and distribute the entire release in its original state, but must not copy individual items within the release other than for backup purposes.

Liability. Pico Technology and its agents shall not be liable for any loss, damage or injury, howsoever caused, related to the use of Pico Technology equipment or software, unless excluded by statute.

Fitness for purpose. As no two applications are the same, Pico Technology cannot guarantee that its equipment or software is suitable for a given application. It is your responsibility, therefore, to ensure that the product is suitable for your application.

Mission-critical applications. This software is intended for use on a computer that may be running other software products. For this reason, one of the conditions of the licence is that it excludes use in mission-critical applications, for example life support systems.

Viruses. This software was continuously monitored for viruses during production, but you are responsible for virus-checking the software once it is installed.

Support. If you are dissatisfied with the performance of this software, please contact our technical support staff, who will try to fix the problem within a reasonable time. If you are still dissatisfied, please return the product and software to your supplier within 14 days of purchase for a full refund.

Upgrades. We provide upgrades, free of charge, from our web site at www.picotech.com. We reserve the right to charge for updates or replacements sent out on physical media.

1.5 Trademarks

Windows is a registered trademark or trademark of Microsoft Corporation, registered in the U.S. and other countries.

Pico Technology Limited, PicoScope and **PicoSource** are trademarks of Pico Technology Limited, registered in the United Kingdom and other countries.

PicoScope and **Pico Technology** are registered in the U.S. Patent and Trademark Office.

1.6 Warranty

Pico Technology **warrants** upon delivery, and for a period of 2 years unless otherwise stated from the date of delivery, that the Goods will be free from defects in material and workmanship.

Pico Technology shall not be liable for a breach of the warranty if the defect has been caused by fair wear and tear, willful damage, negligence, abnormal working conditions or failure to follow Pico Technology's spoken or written advice on the storage, installation, commissioning, use or maintenance of the Goods or (if no advice has been given) good trade practice; or if the Customer alters or repairs such Goods without the written consent of Pico Technology.

2 Product information

2.1 What do I get?

PicoSource Pulse Generator kits contain the following items:

- PicoSource PG900 Series Pulse Generator
- PicoSource PG900 software disk
- Quick start guide
- AC adaptor 5 V DC at 2 A, universal input
- USB 2.0 cable, 1.8 m
- SMA/PC3.5/2.92 wrench
- Storage and carry case

Each signal generator is supplied with additional accessories, as shown below.

Accessories	Order number	PicoSource model		
		PG911	PG912	PG914
Positive 9040 40 ps TD pulse head	-		✓	✓
Negative 9041 40 ps TD pulse head	-		✓	✓
12 GHz N(f) to SMA(m) adaptor (2) (fitted to TD pulse heads)	TA172		✓	✓
10 GHz 20 dB SMA(m-f) attenuator (2) (fitted to SRD pulse outputs)	TA173	✓		✓
50 Ω coaxial SMA(m-m) pulse drive cable, 60 cm (2)	-		✓	✓

2.2 Connections

Standard connectors


The PicoSource Pulse Generators have SMA connectors, compatible with both 2.92 mm (K) and PC3.5. The tunnel diode pulse heads have an N connector with a pre-installed N(f) to SMA(m) adaptor.

Connector diagrams




The PicoSource PG911 front panel from left to right:

- Positive integrated pulse output (SRD)
- Negative integrated pulse output (SRD)
- Trigger output. Connect to an external unit. This connector sends a single-ended voltage pulse.
- Trigger input. Connect an external signal for external triggering.

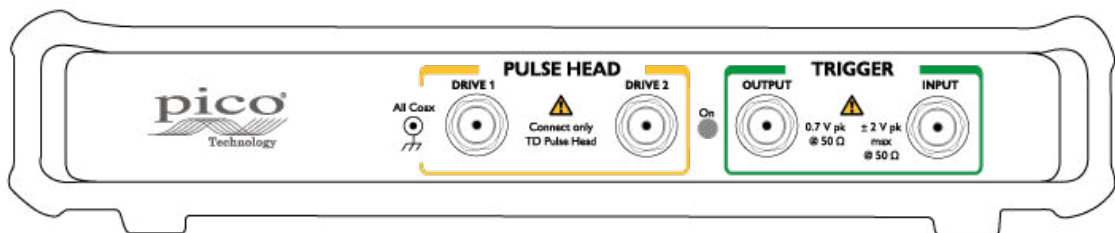


The PicoSource PG912 front panel from left to right:

- Drive 1 output connected to tunnel diode pulse head
- Drive 2 output connected to tunnel diode pulse head
- Trigger output. Connect to an external unit. This connector sends a single-ended voltage pulse.
- Trigger input. Connect an external signal for external triggering.

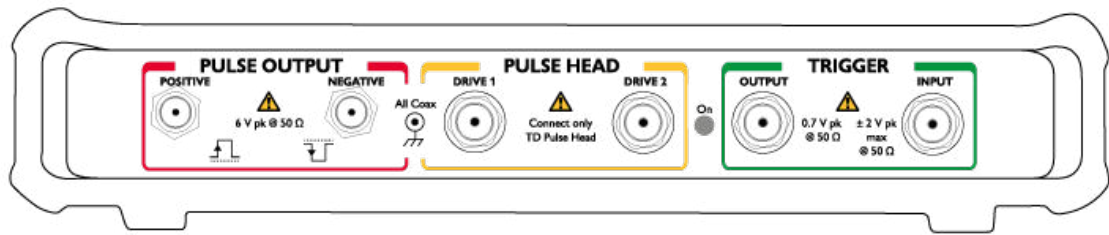

The PicoSource PG914 front panel from left to right:

- Positive integrated pulse output (SRD)
- Negative integrated pulse output (SRD)
- Drive 1 output connected to tunnel diode pulse head
- Drive 2 output connected to tunnel diode pulse head
- Trigger output. Connect to an external unit. This connector sends a single-ended voltage pulse.
- Trigger input. Connect an external signal for external triggering.

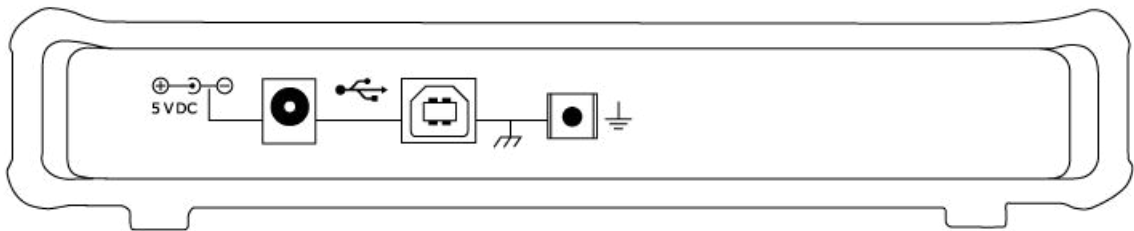

The PicoSource rear panel for all models from left to right:

- DC power input. Always use with the AC adaptor supplied with the unit
- USB 2.0 port. Use a USB cable to connect the pulse generator to your computer.
- Ground (chassis) terminal

3 How to use your pulse generator


3.1 Connection diagrams

To set up your PicoSource pulse generator, follow the instructions below.

1. Install the PicoSource PG900 software using the software disk supplied, or download it from picotech.com/downloads.
2. Plug the AC adaptor into the mains and connect the DC cable to the DC power socket on the rear of your PicoSource pulse generator.
3. **Earth (ground) terminal.** Some laptop power supplies can produce electrical noise which may interfere with your measurements. If this occurs, the earth terminal can be connected to an external ground point (for example, on the system you are testing) to provide a ground reference for the signal generator. This can help to avoid external noise interfering with your signal integrity. Alternatively, you can run the laptop using battery power.
4. Connect your PicoSource pulse generator to the PC or hub using the USB cable supplied.
5. Once you have connected the pulse generator to the PC, run the PicoSource PG900 software.


The following diagrams illustrate advanced setup options using a PicoSource pulse generator, a PicoScope oscilloscope, and the device under test (DUT). In all setups, the pulse generator shown can be substituted by the PicoSource PG914. Signal connections should be made using precision SMA cables unless otherwise specified. Trigger connections can be made using lower grade cables.

Diagram key

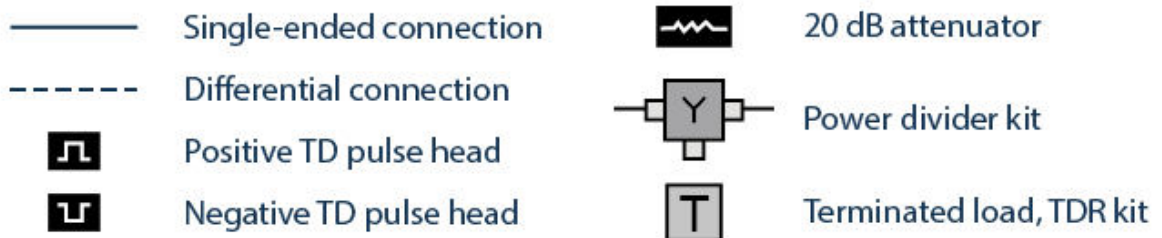


3.1.1 TDR applications

PicoSource PG900 pulse generators can be used to realize time domain reflectometry (TDR) with a PicoScope 9300 Series sampling oscilloscope that does not have that function (PicoScope 9301, 9302, 9321 and 9341).

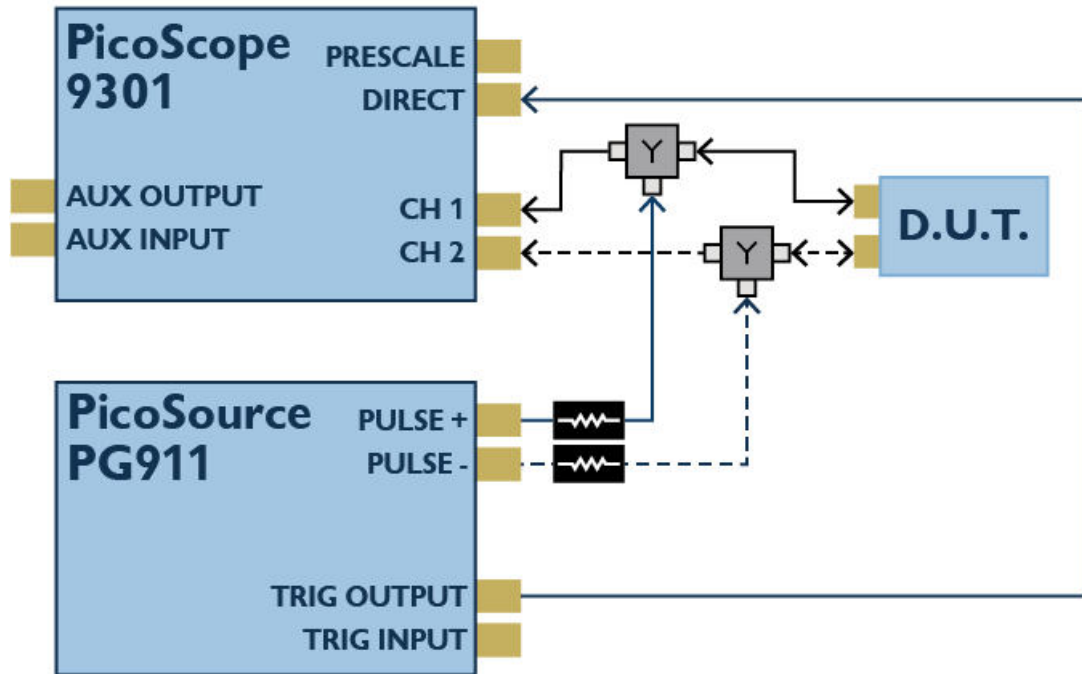

Single-ended and differential connections for TDR testing, using a PicoSource pulse generator with SRD outputs

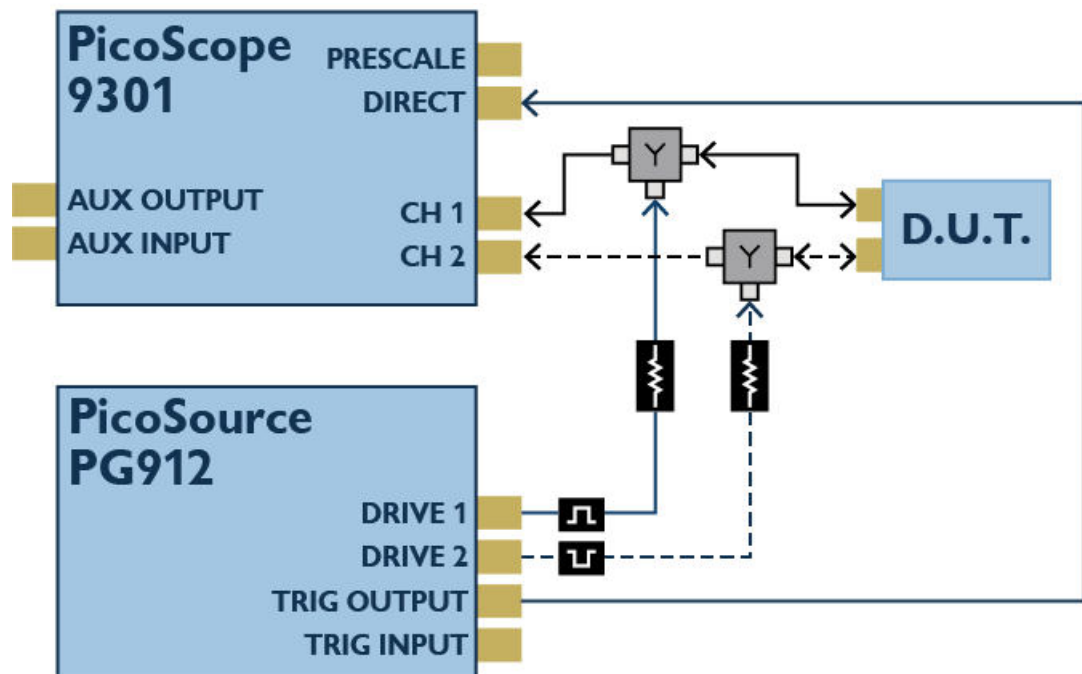


Single-ended and differential connections for TDR testing, using a PicoSource pulse generator with TD pulse head outputs

Connections between the pulse generator and the TD pulse heads (PicoSource PG912 and PG914 models only) should be made using the 60 cm coaxial SMA(m-m) cable supplied.

3.1.2 TDT applications


PicoSource PG900 pulse generators can be used to realize time domain transmission (TDT) with a PicoScope 9300 sampling oscilloscope without that function (PicoScope 9301, 9302, 9321, and 9341). They also offer the versatility of a remotely-placed signal generator for long line or installed system testing when used with any of the PicoScope 9300 models.

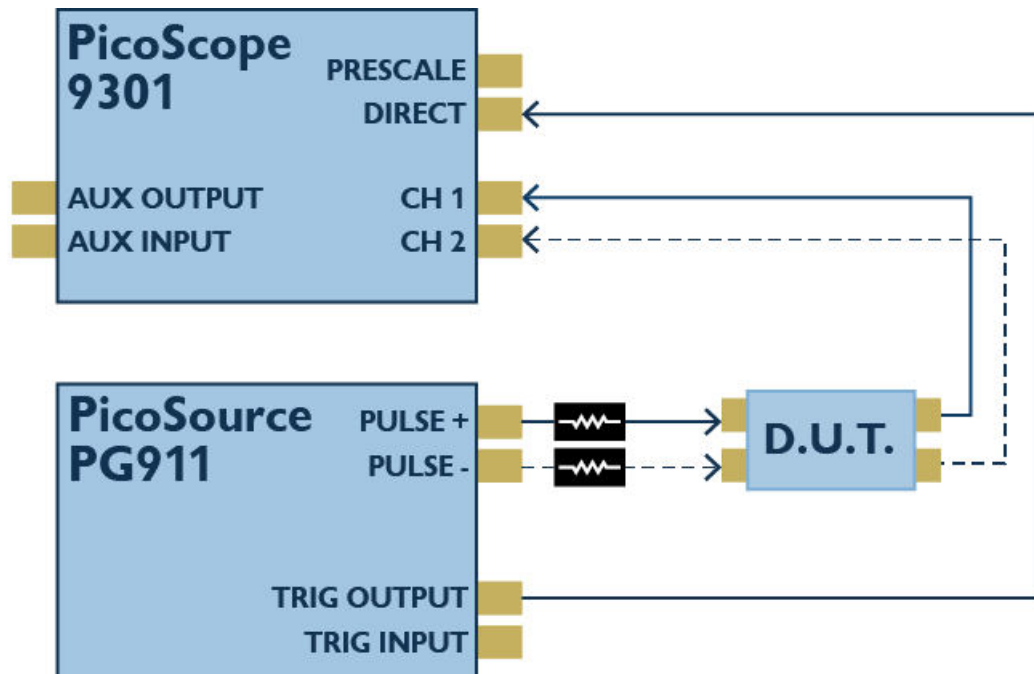

Single-ended and differential connections for TDT testing, using a PicoSource pulse generator with SRD outputs

3.1.3 TDT and crosstalk

PicoSource PG900 pulse generators can be used with a PicoScope 9341 four-channel sampling oscilloscope for simultaneous time domain transmission (TDT) and crosstalk assessment.

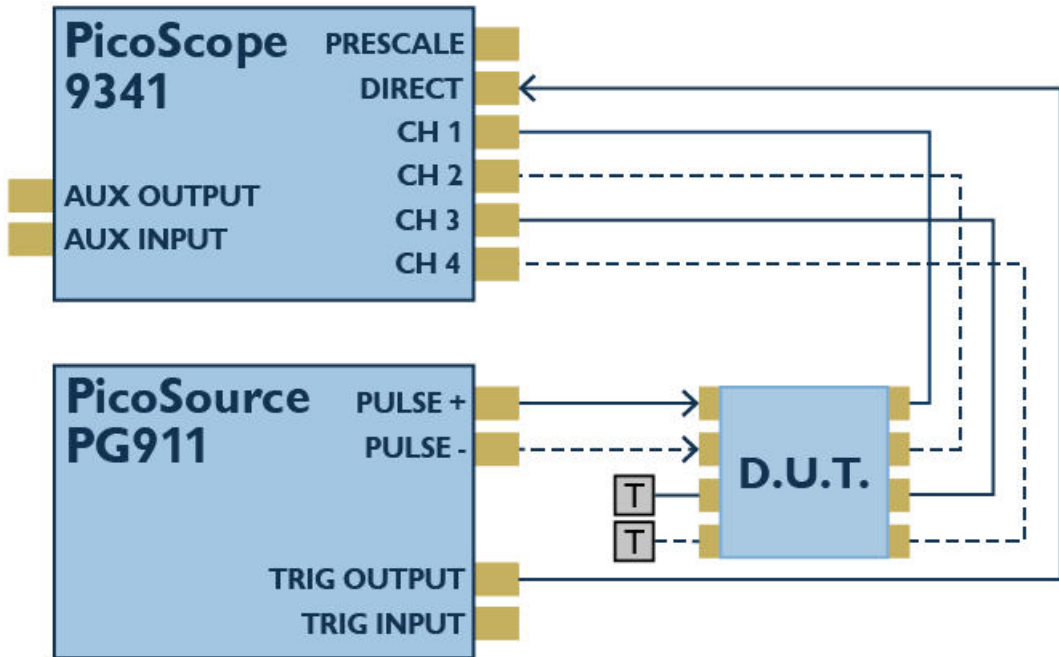

Single-ended and differential connections for simultaneous TDT and crosstalk assessment, using a PicoSource pulse generator with SRD outputs


3.2 Free-running operation for SRD integrated pulse outputs

Integrated pulse outputs based on SRD technology are available with the PicoSource PG911 and PG914 pulse generators. Follow the setup instructions below using the PicoSource PG900 software.


1. To switch on the positive SRD generator, click **Positive Out** in the **Output** menu, and then click **On**.




2. Make sure that **Period Source** is set to **Int Clock**.

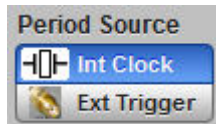


3. Make sure the **Trigger** is set to **Continuous**.

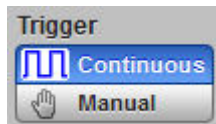


4. Set the **Period** in the **Timing** menu to provide the operation rate. Set the desired period value from 1 μ s to 1 s (1 MHz to 1 Hz).

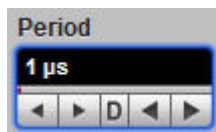


5. Set the **Width** in the **Timing** menu. Set the desired value from 200 ns to 4 s.

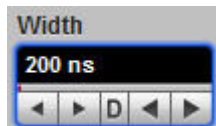


6. Set the desired **Limit** of output amplitude, from 2.5 V to 6 V, to protect the device under test. The change needs to be confirmed whenever the limit is increased.

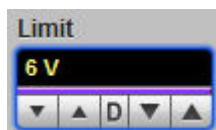

7. Set the desired output **Amplitude** from 2.5 V to 6 V.

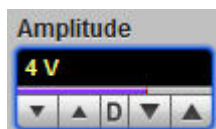


- Under **Pulse Performance**, select **Smooth** or **Fast**. **Smooth** provides 60 ps rise time with smoother transient response. **Fast** provides faster rise time with higher overshoot.

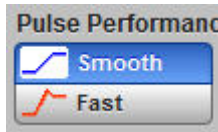

- To switch on the negative SRD generator click **Negative Out** in the **Output** menu, and then click **On**.



- Repeat steps 6 to 8 for the negative output.
- Set the **Deskew**. Set the desired value of delay between outputs within a 2 ns timing range.

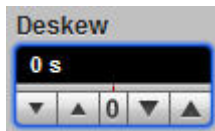

- Under **Pos Out vs. Neg Out**, select **Separate** or **Paired**. With **Separate**, **Limit** and **Amplitude** controls change separately for positive and negative outputs. With **Paired**, both **Limit** and **Amplitude** controls change together for positive and negative outputs.




3.3 Free-running operation for TD outputs

TD outputs are available with the PicoSource PG912 and PG914 pulse generators with connected TD pulse heads (see [Connection Diagrams](#)).


1. To switch on the positive TD generator click **TD Head1 Out** in the **Output** menu, and then click **On**. The generator will automatically identify the polarity of the TD head connected to the **DRIVE 1** output.




2. Make sure that the **Period Source** is set to **Int Clock**.

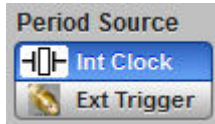

3. Make sure that the **Trigger** is set to **Continuous**.

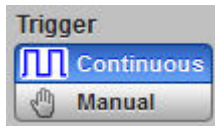


4. Set the **Period** in the **Timing** menu to provide the operation rate. Set the desired period value from 1 μ s to 1 s (1 MHz to 1 Hz).

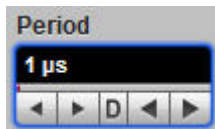


5. Set the **Width** in the **Timing** menu. Set the desired width value from 200 ns to 4 s. If necessary, set the **TD Current** to **Manual**.



6. Use the **Sensitivity** control to optimize the current value through the tunnel diode to get the optimal trigger point.

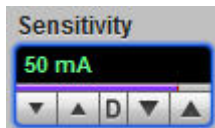


7. To switch on the negative TD generator click **TD Head2 Out** in the **Output** menu, and then click **On**.



8. Repeat step 4 for negative TD output.

9. Under **Deskew**, set the desired delay value which can be set up to 500 ps for each channel.

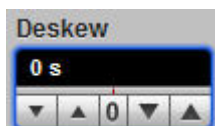



3.4 External trigger operation

To operate the external trigger follow the setup instructions below.


1. For external trigger operation connect external trigger source to the **TRIGGER INPUT** connector.




2. Select the **Ext Trigger** from **Period Source**. The **External Trigger** menu will then open:

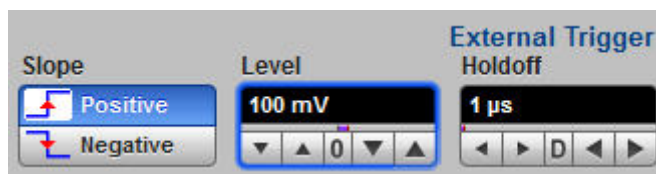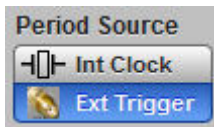


3. Under **Slope**, select **Positive** or **Negative** trigger slope.

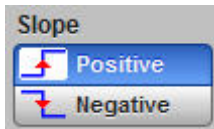

4. Adjust the **Level** control from -1 V to 1 V as necessary for stable operation.

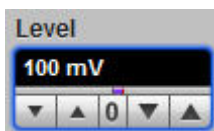

5. Set necessary **Holdoff** control from $1\ \mu\text{s}$ to 1 s . Trigger holdoff helps to stabilize triggering of the generator. When you adjust the **Holdoff** control, the amount of time that the generator waits before re-arming the trigger circuitry also changes. This allows you to provide stable trigger up to 1 GHz .

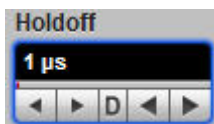


3.5 Single trigger operation


If **Int Clock** is selected under **Period Source**:




1. In the **Trigger** menu, click **Manual**.

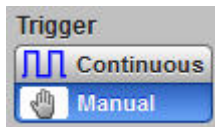

2. Click **Single**. Each click of this button causes a single pulse on each of the pulse generator's active outputs.




If **Ext Trigger** is selected under **Period Source**:

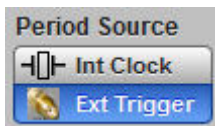


1. Connect an external trigger source to the **TRIGGER INPUT** connector.



2. In the **Trigger** menu, click **Manual**.

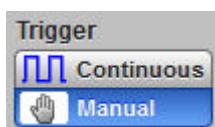


3. Click **Ready**. Now the generator is armed to respond to any defined trigger signal. Each click of this button causes a new arming state of the pulse generator.



4 PicoSource PG900 software

The PicoSource PG900 software interface provides easy access to controls for all of the pulse generator's features and functions.

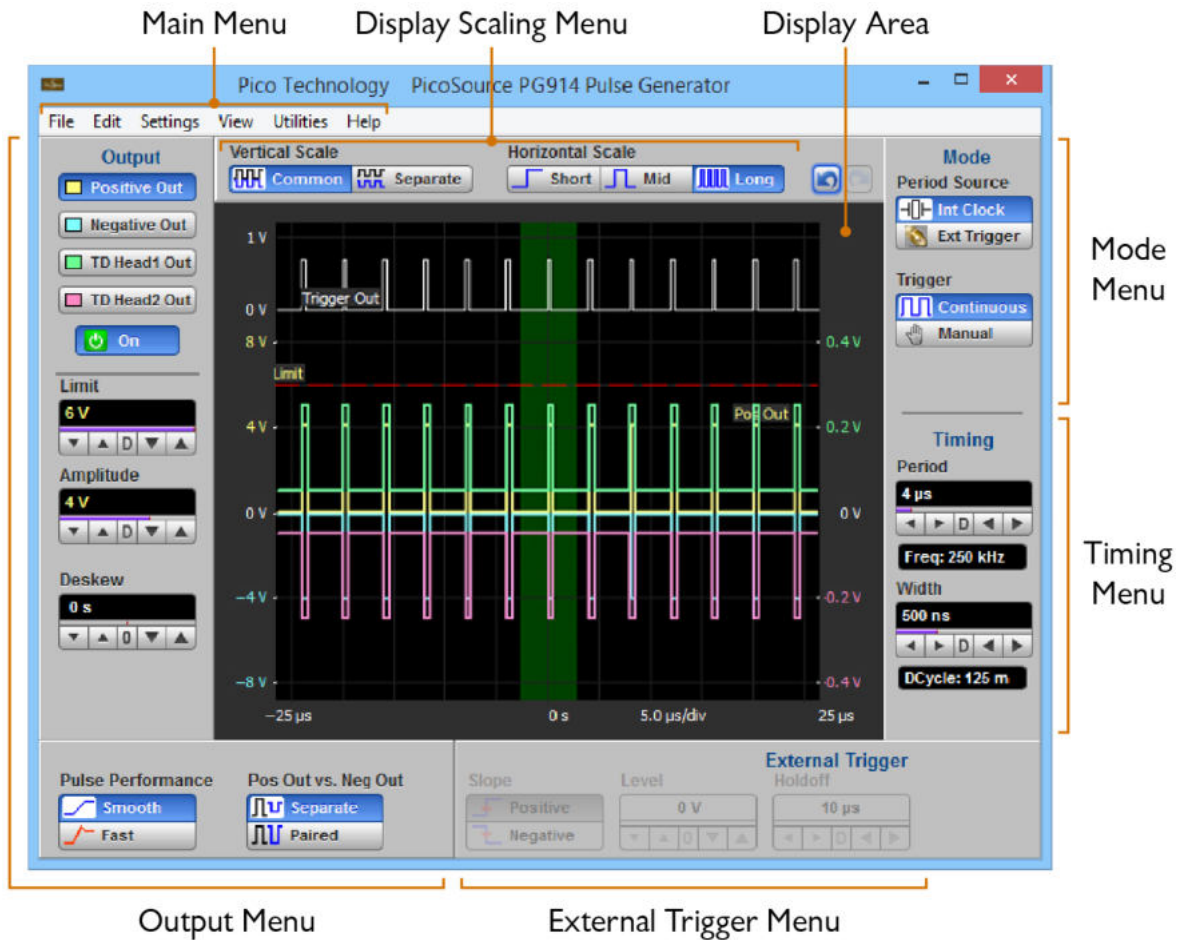


Areas of the software interface

4.1 Display area


The following zones are features of the **Display Area**:

- Trigger Output Waveform
- Positive Output Waveform
- Negative Output Waveform
- TD Head1 Output Waveform
- TD Head2 Output Waveform
- Vertical Scale for Trigger Output
- Vertical Scale for Positive and Negative Outputs
- Vertical Scale for TD Head Outputs
- Horizontal Scale
- Intensified Zone

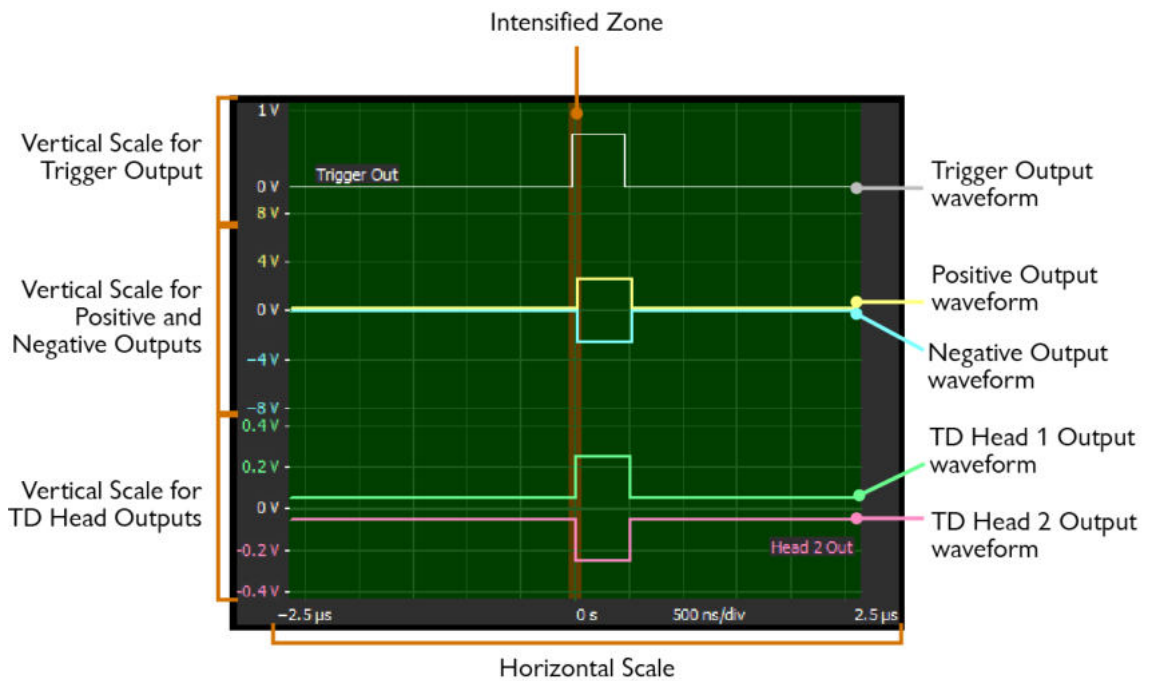

4.1.1 Intensified Zone

The Intensified Zone shows a horizontal section of the display area that can be expanded using the **Horizontal Scale** control (see below).

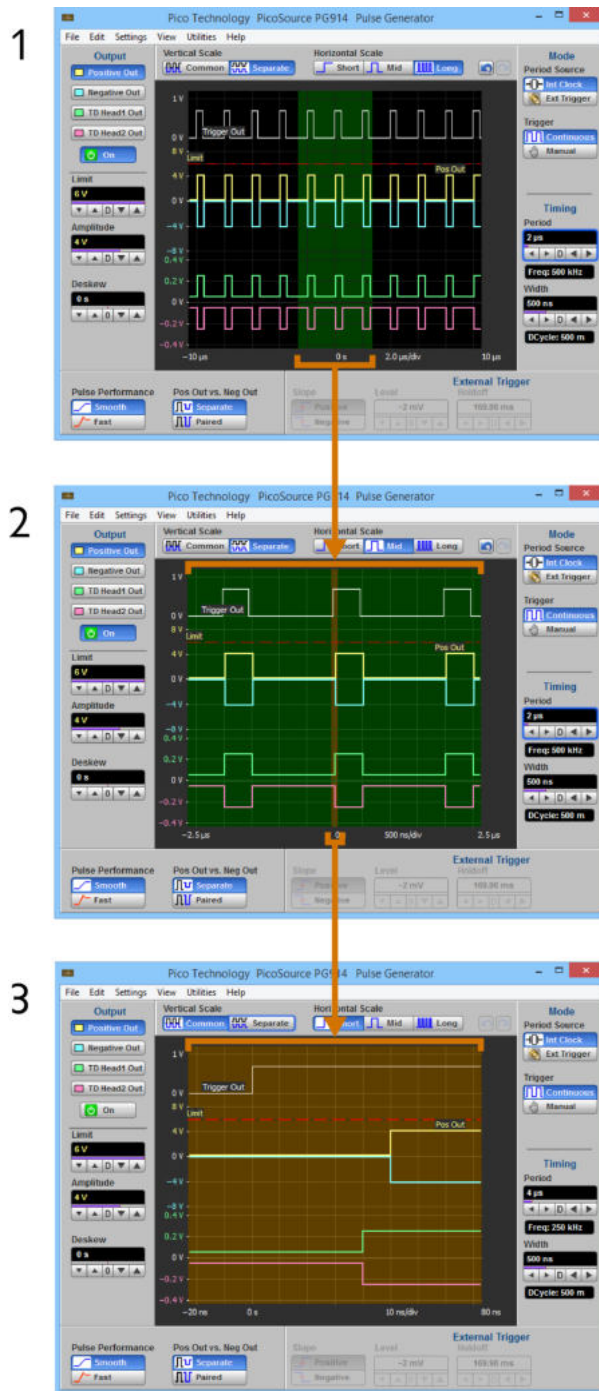


1. All waveforms are shown on a 2 μs/div Long Horizontal Scale. The Intensified zone section has a 5 μs duration.
2. All waveforms are shown on a 50 ns/div Middle Horizontal Scale, expanded from the Long Horizontal Scale. Intensified zone now has a 100 ns duration.
3. All waveforms are shown on a 10 ns/div Short Horizontal Scale (expanded Middle Horizontal Scale).

4.2 Positive and negative pulse outputs


Positive Output and Negative Output




These controls select menus based on SRD technologies for the PicoSource PG911 and PG914. Each menu includes the options outlined below.

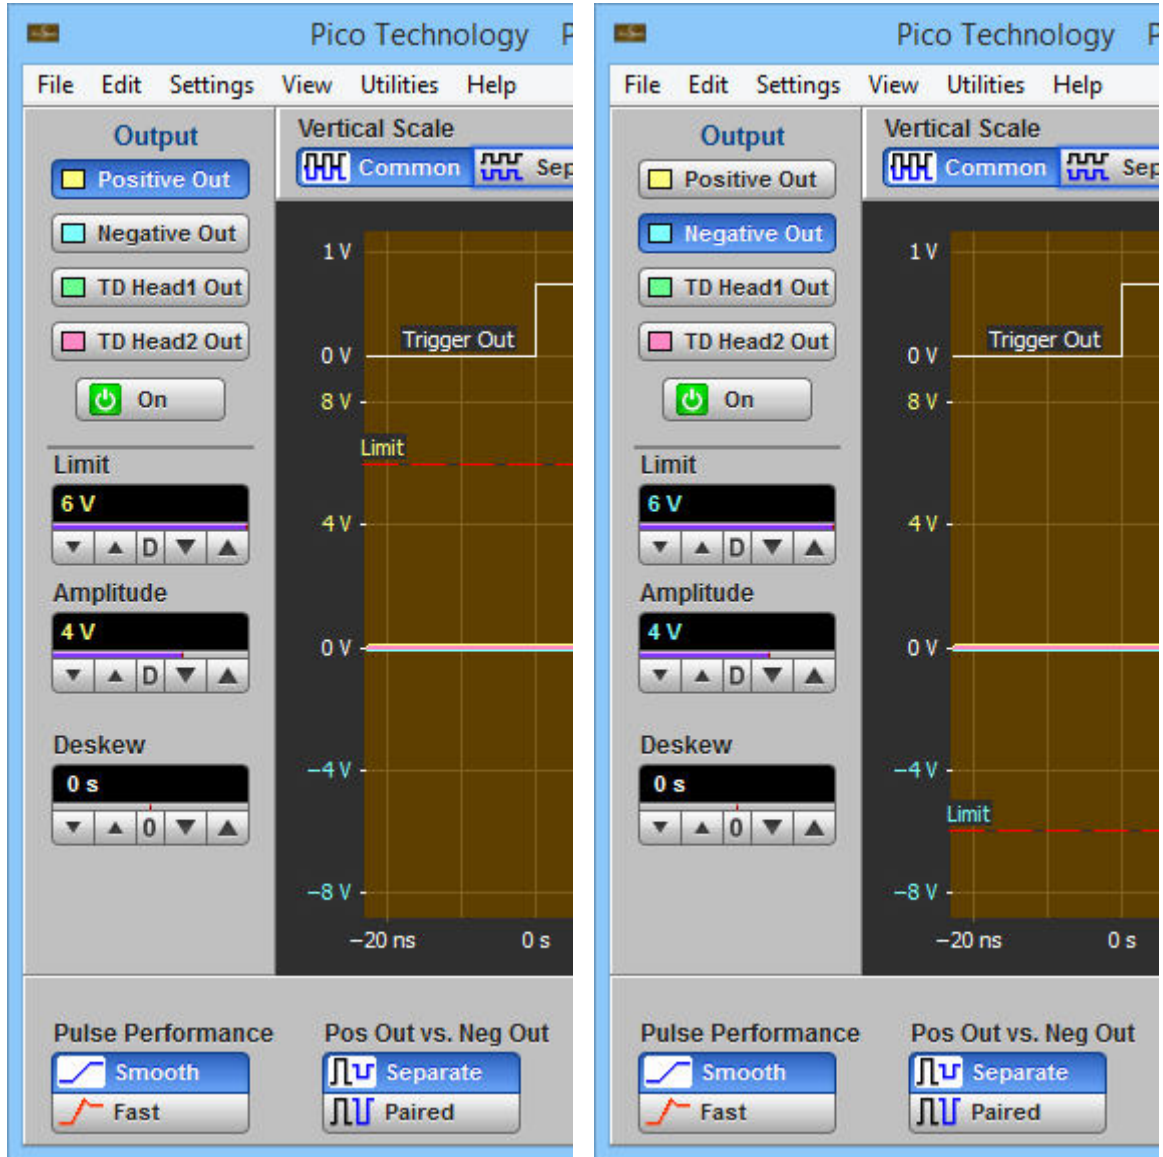

Positive Output (left) and Negative Output (right) menus

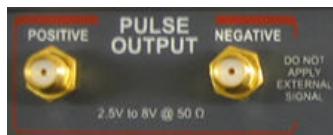


On




Click **On** to turn the selected output on or off.

Amplitude

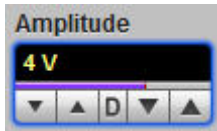


Amplitude is the low-to-high magnitude of the pulse. The **Amplitude** setting can be set from 2.5 V to 6 V, adjustable in 100 mV coarse increments or in 10 mV fine increments. Changing the amplitude will change the high level only. Low level is always set at 0 V. Offset is not affected.

Limit

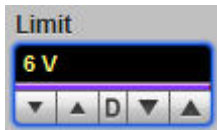


To protect the device under test, amplitude limits can be set for both the **Positive Output** and **Negative Output**. Output amplitude can be limited to a user defined value from 2.5 V to 6 V, Adjustable in 100 mV coarse increments or in 10 mV fine increments.

Deskew

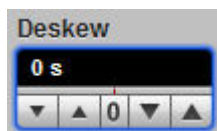

Set the deskew between **Positive Output** and **Negative Output** to compensate for different cable delays. Set the **Deskew** between output in the range of -1.00 ns to 1.00 ns. Adjustable in a 20 ps coarse increment or in 1 ps fine increment.

Pulse Performance

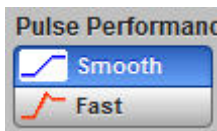

The transition response can be modified by the **Pulse Performance** selector:

- **Fast** - provides faster transient times (55 ps or less) with near 40% overshoot.
- **Smooth** - provides slower transient times (60 ps or less) and smoother edges less than 20%.

Pos Out vs. Neg Out



Positive Output and **Negative Output** operate as entirely separate outputs. Their **Amplitude** and **Limit** variables can be controlled separately.

- **Separate** - **Positive Output** and **Negative Output** operate as entirely separate outputs. Their **Amplitude** and **Limit** variables can be controlled separately.
- **Paired** - **Positive Output** and **Negative Output** operate together. Their **Amplitude** and **Limit** variables are controlled simultaneously.

4.3 Tunnel diode pulse head outputs



TD Head 1 Output (left) and TD 2 Head Output (right) menus

The **TD Head 1 Output** and **TD Head 2 Output** menu control the outputs of two TD heads. These heads may be connected to the **DRIVE 1** or **DRIVE 2** SMA connectors located on the front panel of the PicoSource PG912 and PG914. Each drive output provides the head the necessary TD current and drive signal.


Each drive output senses the polarity of the TD head connected to the drive output. Thereby it is possible to connect as positive or as negative TD head to any **DRIVE** output. The drive output will provide a positive current and positive drive output for the positive TD head, or a negative current and negative drive output for the negative TD head, depending on which is detected. The recognized polarity of the TD head appears in the menu area under **Pos TD Head** or **Neg TD Head**.

Pos TD Head **Neg TD Head**

Pulse generators based on TD technology may include the following configurations:

- Single-channel pulse generator with TD pulse head having any polarity.
- Dual-channel pulse generator with two TD pulse heads having opposite polarity.
- Dual-channel pulse generator with two TD pulse heads having the same polarity. In this case you should request an additional TD head.


On



You can switch on and off any of the **DRIVE Outputs** with connected TD head.




TD Current

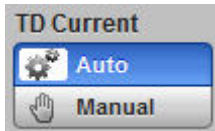

The **TD Current** controls how the instrument defines peak current of TD for selected TD head.


- **Auto** - the instrument defines peak current automatically.
- **Manual** - the instrument controls peak current manually with the **Sensitivity** control. Use this mode for very fine tuning of TD.

Sensitivity

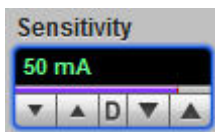

This controls peak current of TD manually when the **Manual** is selected from the **TD Current**.


Deskew

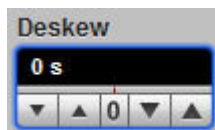

Set the deskew between **TD Head 1 Output** and **TD Head 2 Output** to compensate for different cable delays. Set the **Deskew** between output in the range of 0 ps to 500 ns. Adjustable in a 20 ps coarse increment or in 1 ps fine increment.

4.4 Tunnel diode pulse head controls

TD Current

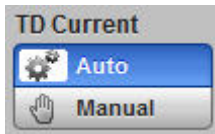

The **TD Current** controls how the instrument defines peak current of TD for selected TD head.


- **Auto** - the instrument defines peak current automatically.
- **Manual** - the instrument controls peak current manually with the **Sensitivity** control. Use this mode for very fine tuning of TD.

Sensitivity



This controls peak current of TD manually when the **Manual** is selected from the **TD Current**.

Deskew

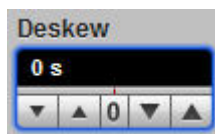

Set the deskew between **TD Head 1 Output** and **TD Head 2 Output** to compensate for different cable delays. Set the **Deskew** between output in the range of 0 ps to 500 ps. Adjustable in 20 ps coarse increments or in 1 ps fine increments.

4.5 Mode


The **Mode** group includes **Period Source** and **Trigger** selections.

Period Source




The **Period Source** defines which source will be used as the period clock. There are two sources, internal or external.

- **Int Clock**

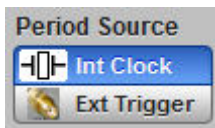


In the **Internal Clock** an internal continuous pulse stream is generated. The period can be set from between 1 μ s to 1 s (a frequency from 1 Hz to 1 MHz).

- **Ext Trigger**

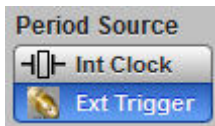

In the **External Trigger** each active input edge on the **TRIGGER INPUT** connector triggers a single or countdown output cycle.


Trigger

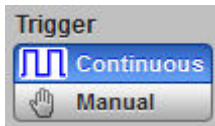

The **Trigger** defines how pulses are generated, continuously or manually.


- **Continuous** pulse periods are generated continuously by using internal or external clock source.
- The **Manual** option can be used to manually run (**Int Clock Period Source**) or arm (**Ext Trigger Period Source**) each pulse period.

Single



Click **Single** to generate one pulse period when the **Int Clock** is selected from the **Period Source**.

Ready



Click **Ready** to arm the instrument to generate one pulse period when the **Ext Trigger** is selected from the **Period Source**.

4.6 Timing

When the **Int Clock** is selected from the **Period Source** menu the **Timing** menu opens.




Timing Menu

Period




The pulse cycle time can be set as a period. The **Frequency** value, as 1/Period, is shown under **Period**. The period value can be set from 1 μs to 1 s, adjustable in 1-2-5-10 coarse increments or 200 ns fine increments.

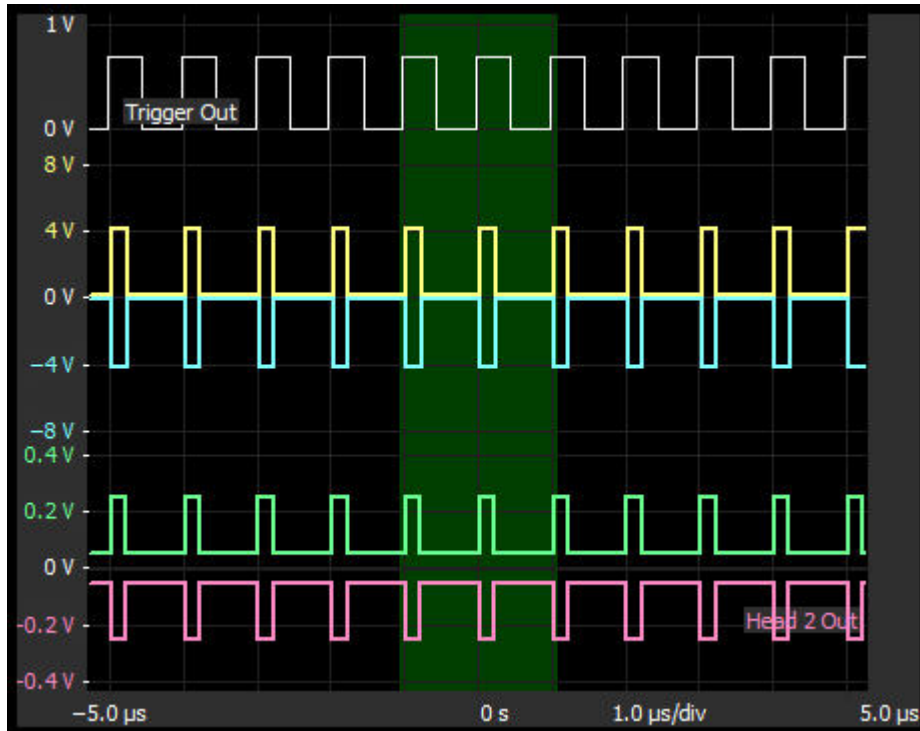

Guide User Interface showing timing relations

Width

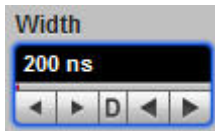

Width sets the absolute pulse width measured from the start of the leading edge to the start of the trailing edge. In this format, the pulse width is independent of changes in pulse period and delay. Pulse width is defined at the 50% amplitude level of the pulse.

The duty cycle is the pulse width measured from the start of the leading edge to the start of the trailing edge expressed as a percentage of the period. **Duty Cycle** value in percents as Width/Period is shown under **Width** control. Width value can be set from 200 ns to 4 μ s, adjustable in 200 ns - 500 ns - 1 μ s - 2 μ s - 4 μ s coarse increments or a 25 ns fine increment.

DCycle: 200 m

The following duty cycle limitations apply to **Positive Output** and **Negative Output** based on SRD technologies:

- From 2.5 V to 4 V amplitude: 50% max.
- From 4.1 V to 6 V amplitude: 20% max.


No duty cycle limitations apply to TD-based outputs.

Delay

The PicoSource pulse generators do not provide variable delay as the absolute delay from the trigger output to the start of the leading edge of the pulse can be ignored. The generators provide deskew between output channels for both SRD and TD technologies.

4.7 External trigger

External Trigger

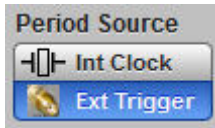

When **Ext Trigger** is selected from the **Period Source** menu, you can use an external trigger signal connected to the **TRIGGER INPUT** as an external trigger source (triggered or countdown).




When the period of the external trigger signal is longer than the selected holdoff time, the PicoSource pulse generator generates all outputs and trigger output as a single pulse on every trigger period (triggered).



Timing diagram for external triggered mode (2 μ s period of external signal)


When the period of the external trigger signal is shorter than the selected holdoff time, the PicoSource pulse generator generates all outputs and trigger output as a single pulse every two or more trigger periods (countdown).

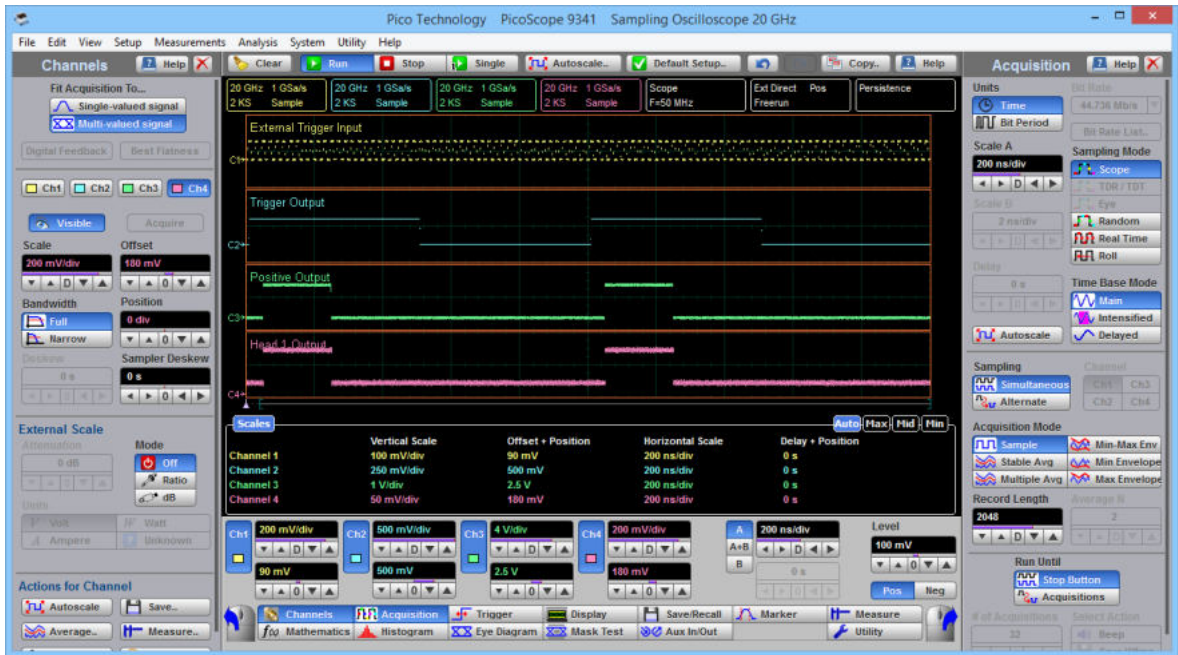

Timing diagram for external countdown mode

The image below shows timing relations between different signals. They are:


- Delay between external trigger input and trigger output: near 4 ns.
- Delay between trigger output and SRD outputs: near 40 ns.
- Delay between trigger output and TD Head output: near 42 ns.

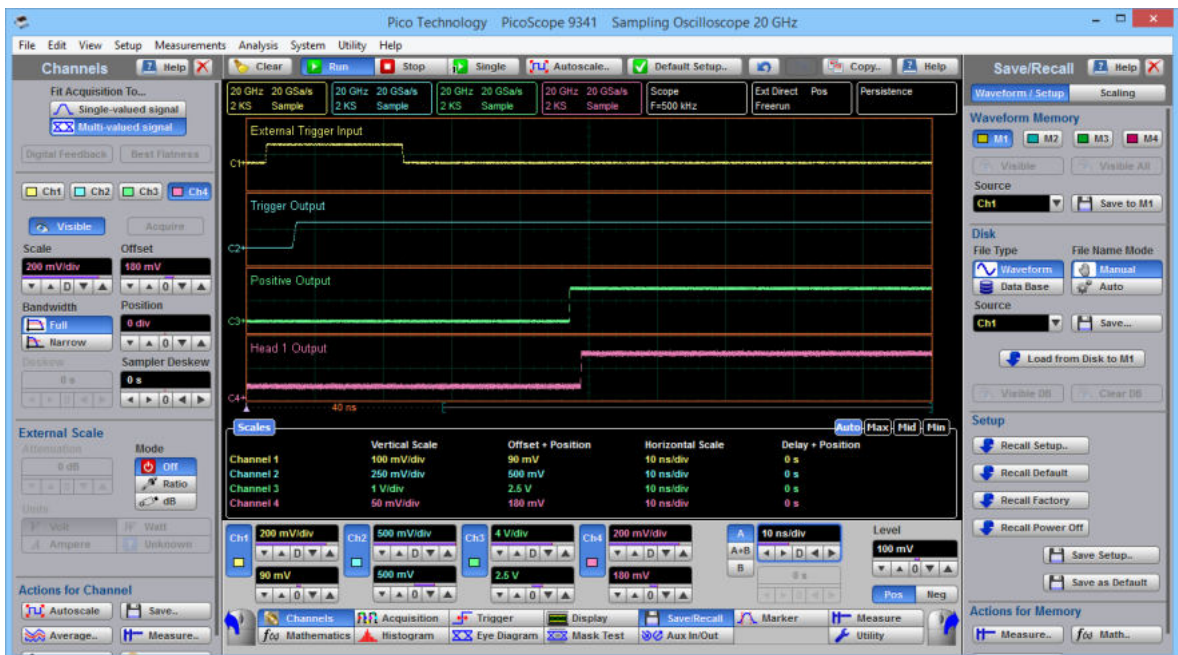

Timing relations between different signals

External Trigger Menu

When **Ext Trigger** is selected from the **Period Source** menu the **External Trigger** menu opens.

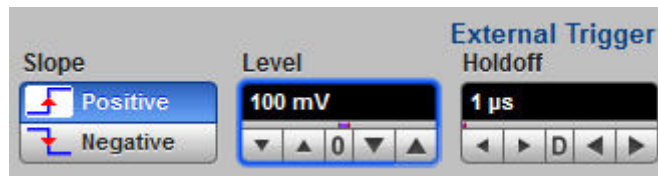


External Trigger Menu

The **External Trigger** menu controls three settings: **Slope**, **Level** and **Holdoff**.


Note: The input impedance on the **TRIGGER INPUT** connector is fixed at 50 Ω .

Slope

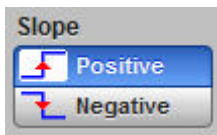


With the **Ext Trigger** period source selected, the positive edge or negative edge of the source will trigger a pulse period.

Level

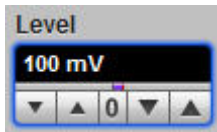

The **Level** sets the trigger level threshold in the range of -1 V to 1 V that will be detected by the pulse generator as a valid trigger input pulse. Adjustable in coarse increments of 10 mV or fine increments of 1 mV.

Holdoff

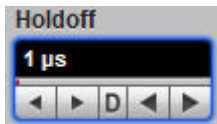

Holdoff is a count of a period of time. With external trigger it disables the trigger circuit after a given period of time, after the last trigger occurred. Use holdoff to obtain a stable trigger for HF repetitive, composite or complex waveforms.

Example 1. External trigger frequency is much higher than generating pulse frequency.

Example 2. If the number or duration of sub-signals is known you can disable them by choosing an appropriate holdoff value.

The **Holdoff** range is from $1 \mu\text{s}$ to 1 s in a 1-2-5-10 sequence. When fine mode is on, you can change holdoff time in increments of up to 200 ns.

4.8 Trigger output




The output trigger signal on the **TRIGGER OUTPUT** connector marks the start of the pulse period. This positive pulse has a fixed amplitude of near 700 mV, a fixed pulse width of near 500 ns, and a rise time of less than 400 ps 10%-90%.

This pulse is delayed by approximately 4 ns from the external trigger input. It also has a lead time of near 40 ns to the SRD outputs, and near 42 ns to the TD Head output.

Use this signal to pretrigger your sampling oscilloscope.

4.9 Display scaling

Display scaling includes two menus: the **Vertical Scale** and the **Horizontal Scale**.



Display scaling menus

4.9.1 Vertical Scale


Vertical Scale




The **Vertical Scale** determines how all of the waveforms (up to four outputs and the trigger output) are displayed vertically by the PicoSource software.




With **Common** selected any displayed output waveforms are superimposed on top of each other, while the trigger output is displayed separately above the scale (as shown below).

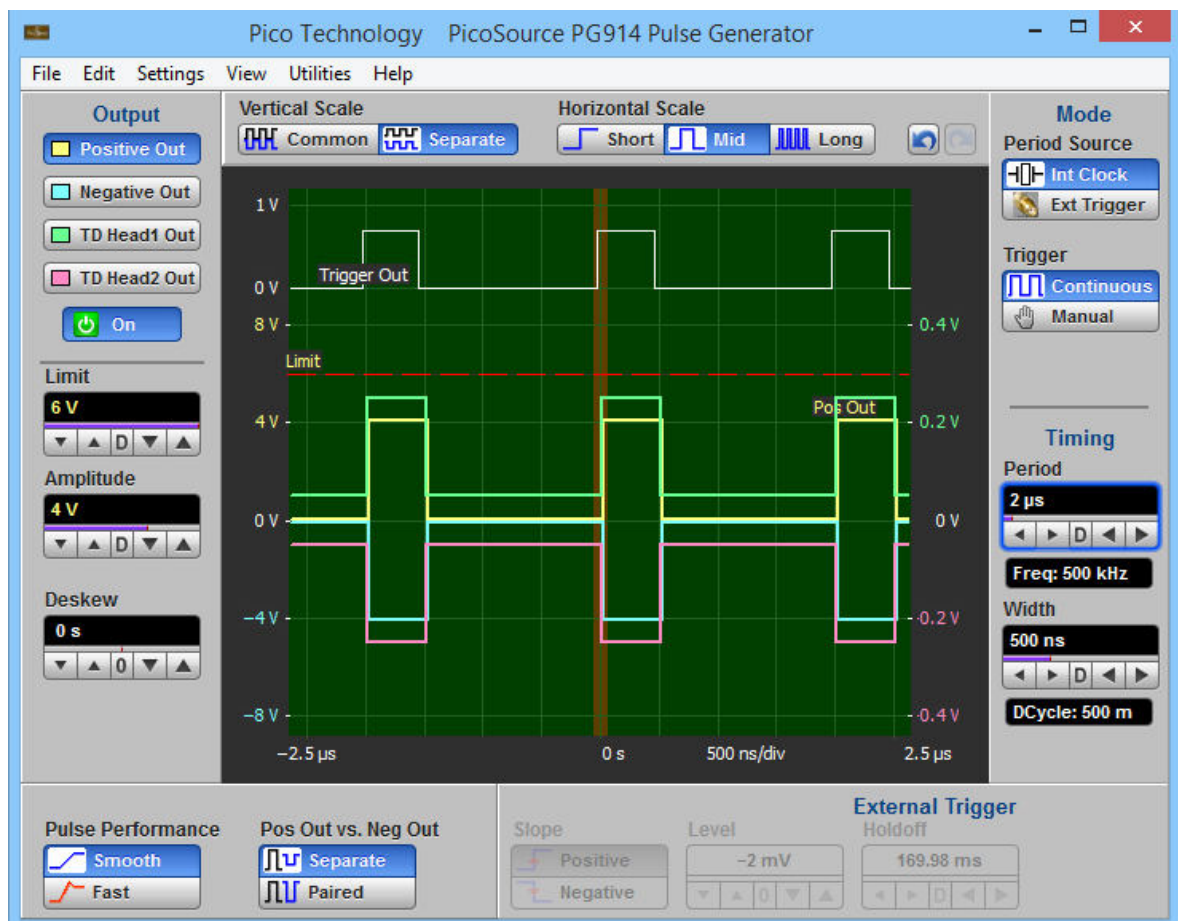

Common Vertical Scale display




With **Separate** selected, the two output waveforms that belong to SRD technology, the two output waveforms that belong to TD technology, and the trigger output are all displayed separately on three vertical scales (as shown below).

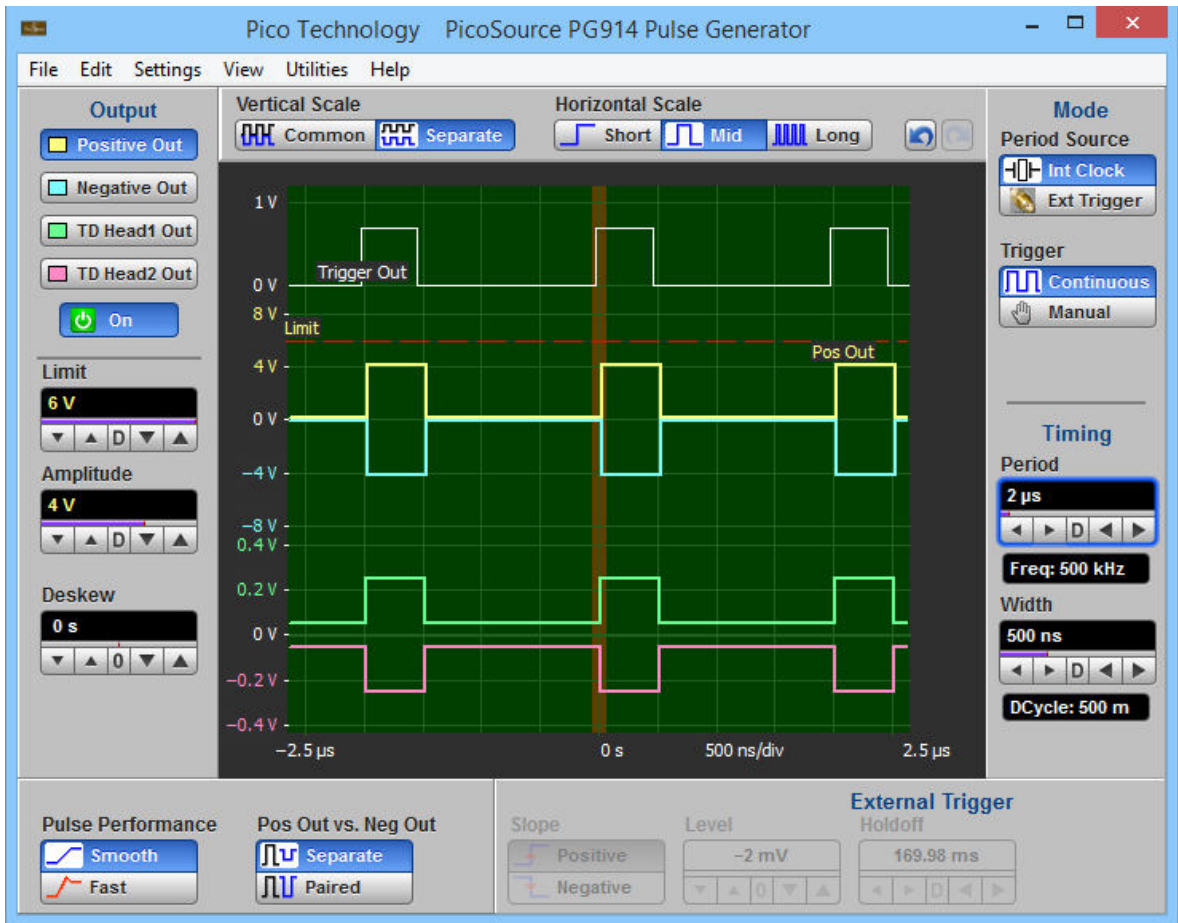


Separate Vertical Scale display

4.9.2 Horizontal Scale


Horizontal Scale



The **Horizontal Scale** menu includes three different options.




With **Short** selected the horizontal scale is optimized to show the timing relationships between pulse edges on all waveforms (as shown below).

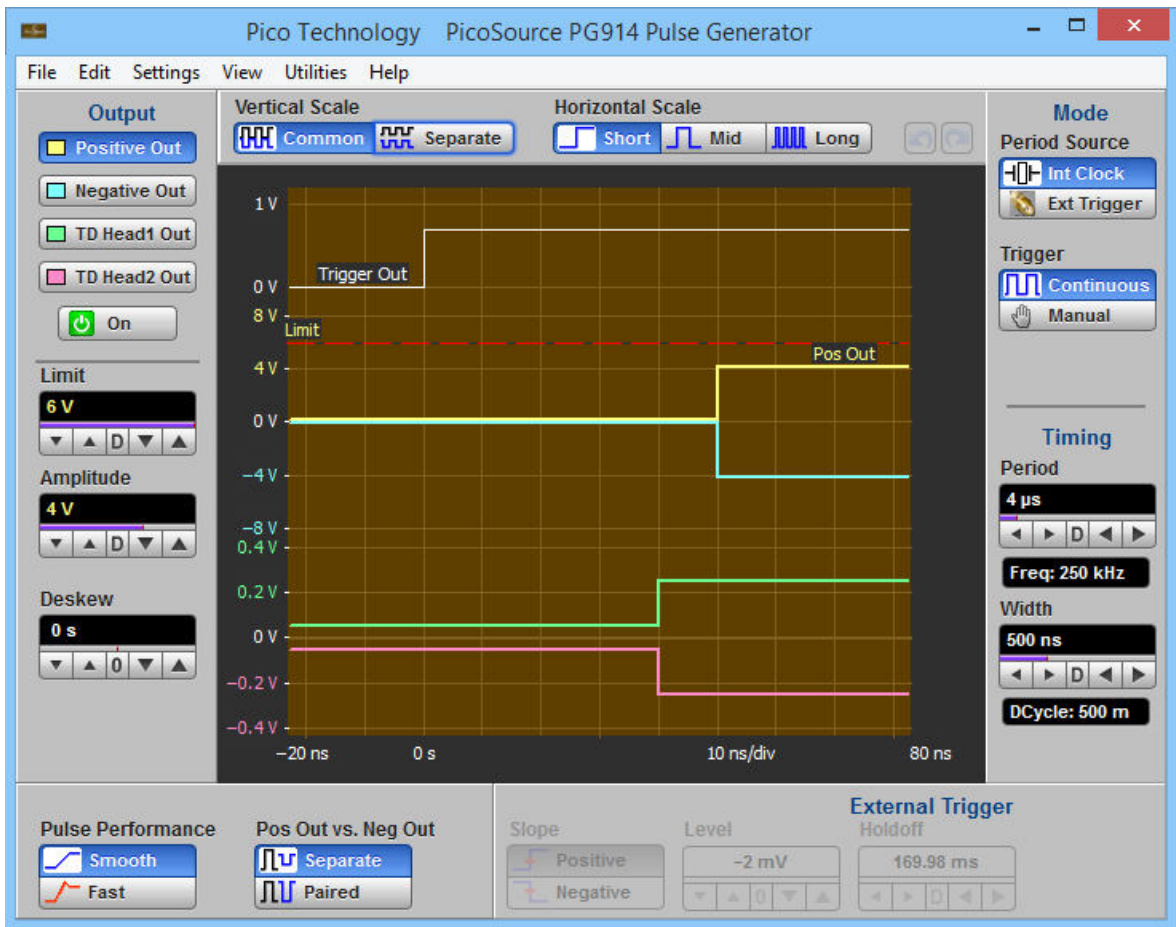

Short Horizontal Scale display




With **Middle** selected the horizontal scale is optimized to show the pulse width of all waveforms (as shown below).

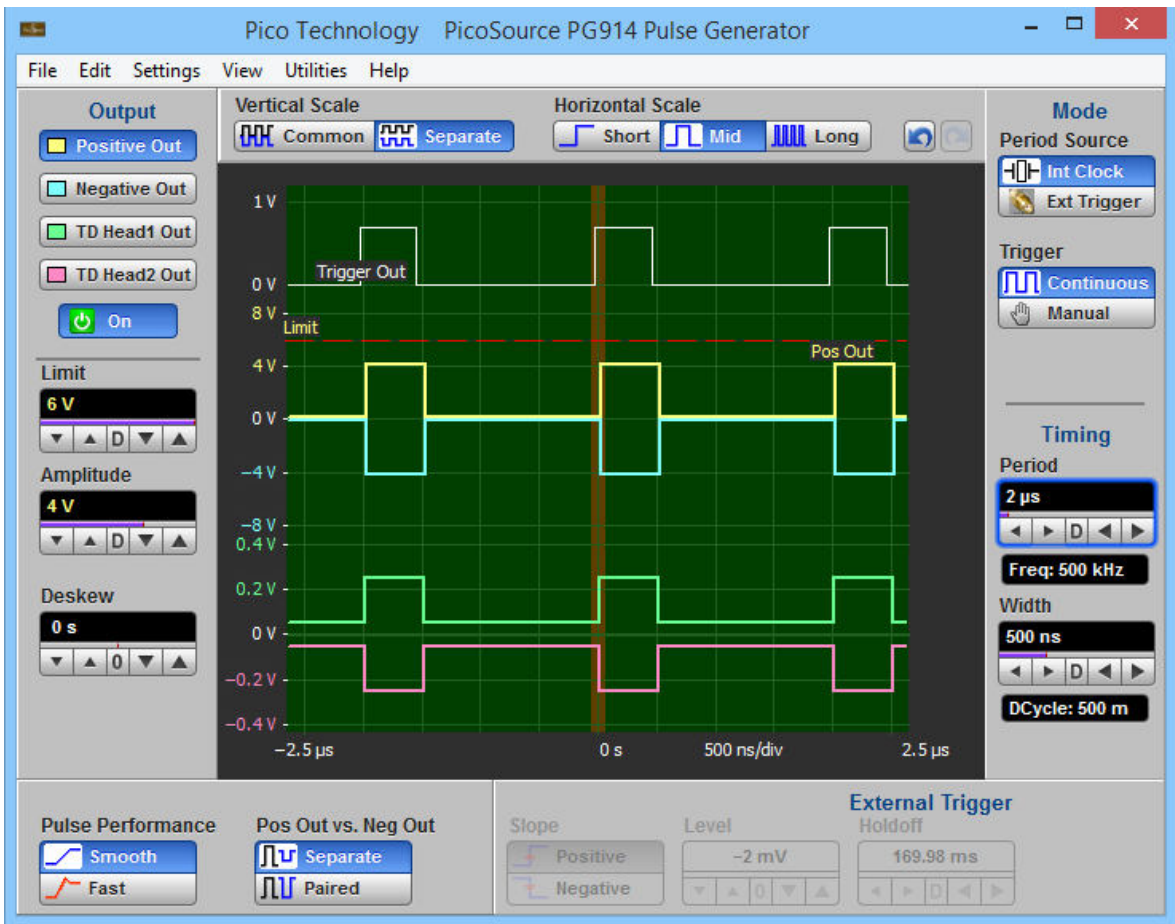

Middle Horizontal Scale display



With **Long** selected the horizontal scale is optimized to show the period of all waveforms (as shown below).

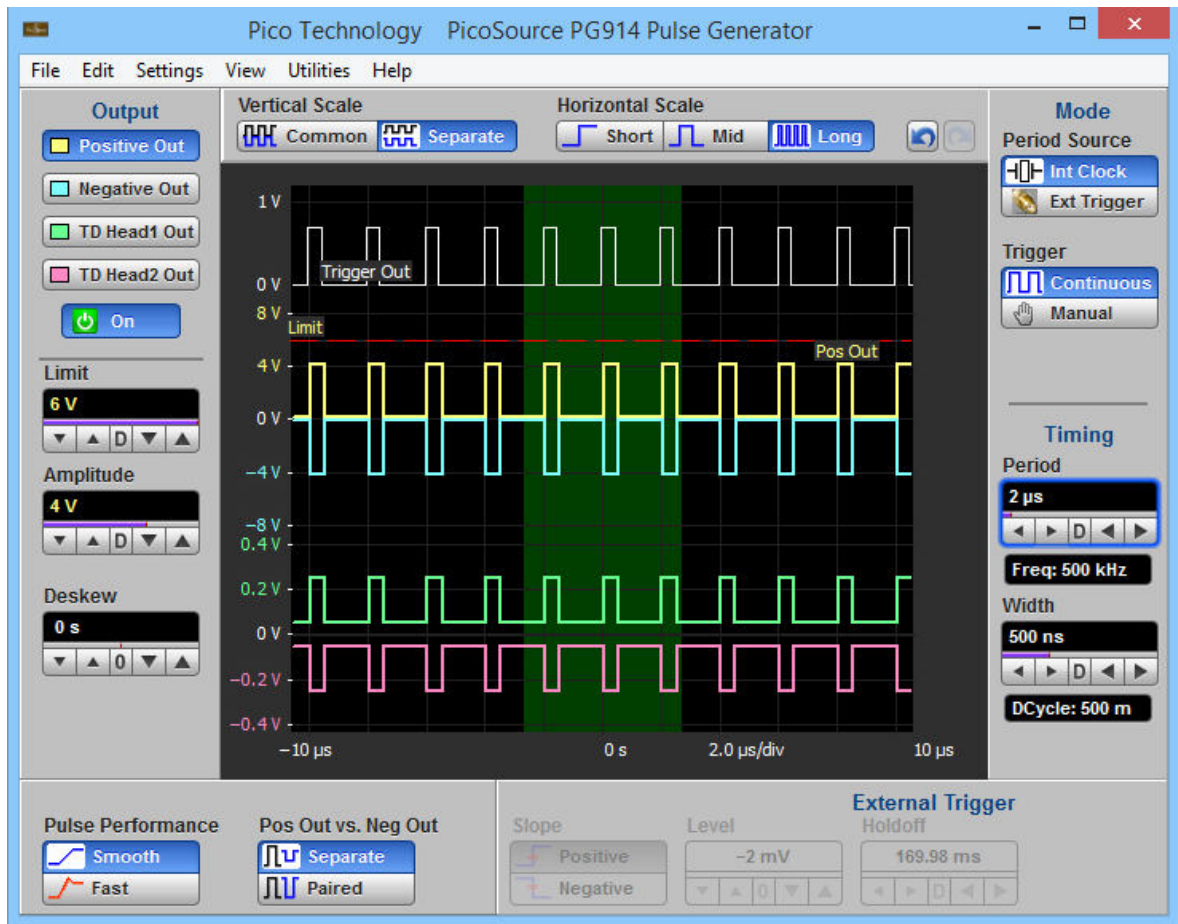

Long Horizontal Scale display

4.10 Undo/Redo

Undo and Redo



Undo


If you have unintentionally selected a control, you can use the **Undo** button to return the instrument to the previous settings. The **Undo** function can be repeated up to 100 times.



Redo

If you later decide you didn't want to undo an action, right-click the button and select **Redo**.


4.11 Main Menu



The **Main Menu** provides access to commands that control all of the instrument features and functions. When you select a feature setup command, the instrument displays the associated menus.

5 Theory of operation

5.1 PicoSource PG900 block diagram

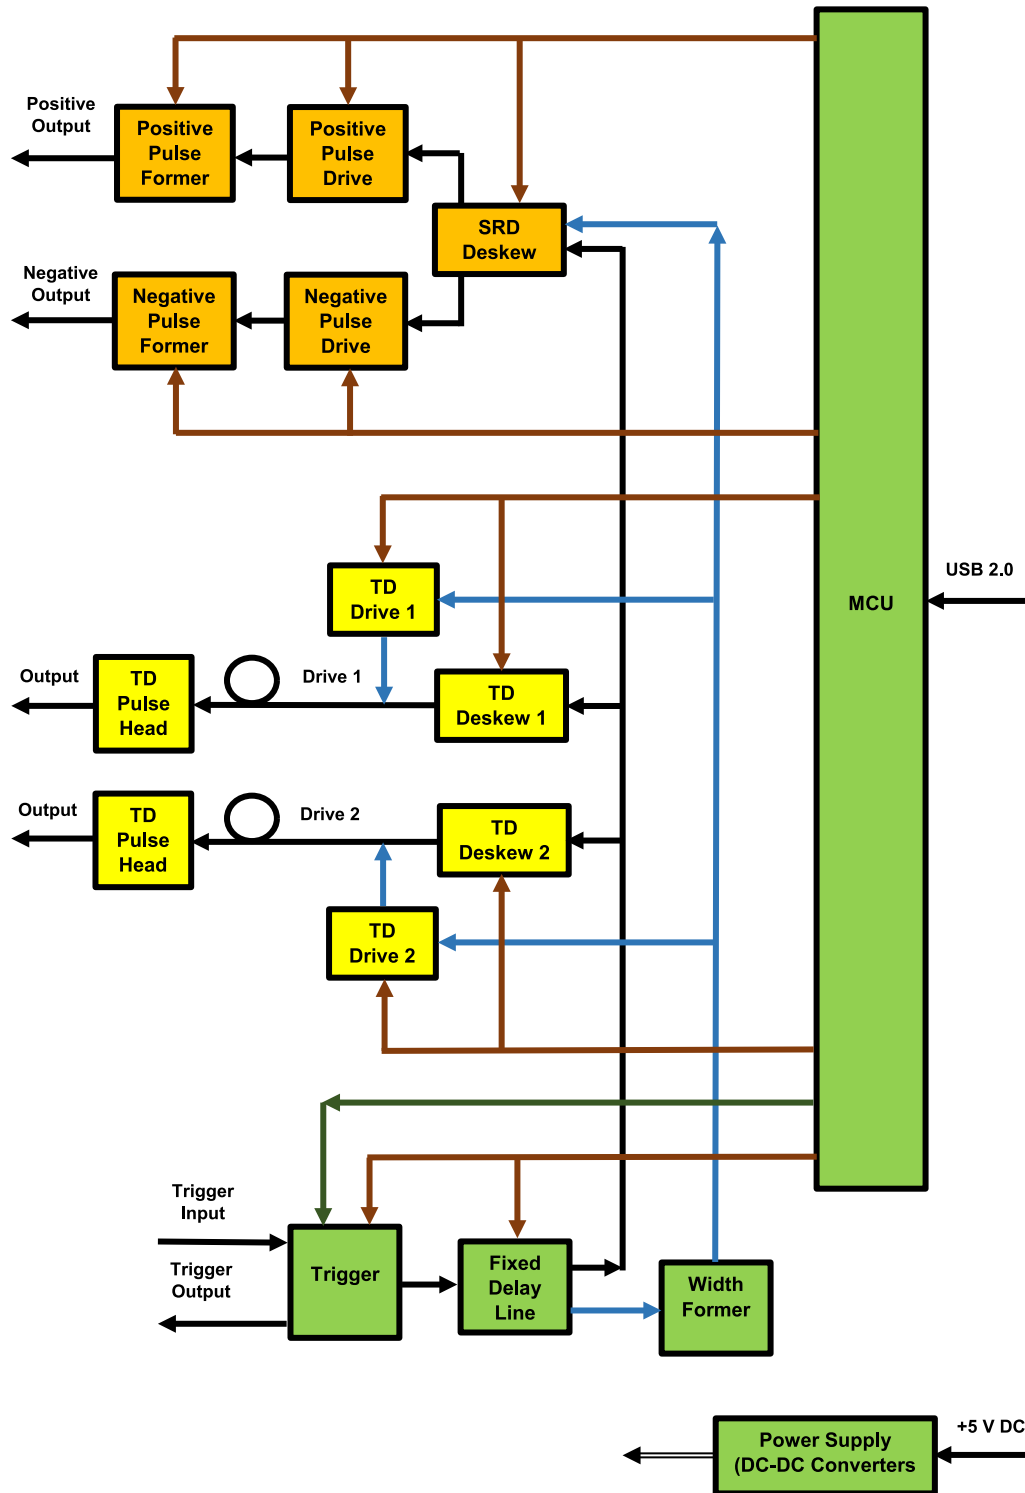

PicoSource PG900 hardware overall block diagram

Green: all models
 Gold: PicoSource PG911 and PG914 only
 Yellow: PicoSource PG912 and PG914 only

5.2 Hardware components for PicoSource PG900 models

ARM microcontroller

The ARM microcontroller controls all hardware components of the PicoSource PG900 generators.

USB transceiver

A standard slave USB controller for communication with PC.

Power supply

The power supply provides necessary stabilized DC power voltages from incoming +5 V DC from the power adaptor.

Trigger

The trigger generator provides internal or external trigger period from 1 μ s to 1 s.

Fixed delay line

Provides lead time between trigger output and any of four main outputs.

Width former

Triggerable one-shot providing pulse width control from 0.2 to 4 μ s.

SRD deskew

Provides 2 ns p-p differential timing deskew between integrated SRD outputs.

Positive pulse drive

Drives positive pulse former of integrated SRD generator. Controls output amplitude.

Negative pulse drive

Drives negative pulse former of integrated SRD generator. Controls output amplitude.

Positive pulse former

Provides positive SRD output with leading edge faster than 60 ps.

Negative pulse former

Provides negative SRD output with leading edge faster than 60 ps.

TD deskew 1

Provides at least 200 ps timing deskew for TD 1 pulse head.

TD deskew 2

Provides at least 200 ps timing deskew for TD 2 pulse head.

TD drive 1

Controls peak current and timing diagram of TD 1.

TD drive 2

Controls peak current and timing diagram of TD 2.

TD pulse heads

Two pulse heads with any selected polarity having leading edge faster than 40 ps.

6 Specifications and characteristics

The distinction between specifications, characteristics, typical performance, and nominal values is as follows.

Specifications describe guaranteed performance over the temperature range +15°C to +25°C (unless otherwise noted). All specifications apply after the instrument's temperature has been stabilized after 1 hour of continuous operation. Unless otherwise noted, corrected limits are given when specifications are achieved using software processing.

Many performance parameters are enhanced through frequent, simple calibrations.

All specifications are subject to change without notice. Specifications are valid after a 1 hour warm-up period, and $\pm 5^\circ\text{C}$ from the firmware calibration temperature.

Characteristics provide useful, but not guaranteed, information about the functions and performance of the instrument.

Typical Performance, where listed, is not guaranteed, but indicates the performance that most units will exhibit.

Nominal Value indicates the expected, but not guaranteed, value of the parameter.

Factory Calibration Cycle. For optimum performance, the instrument should have a complete verification of specifications once every 12 months.

6.1 PG900 family specifications

Specifications	PicoSource PG911	PicoSource PG912	PicoSource PG914
Generation technique	Integrated step recovery diode pulse outputs	Drive outputs with tunnel diode pulse heads	Integrated step recovery diode pulse outputs and drive outputs with tunnel diode pulse heads
Output channels	2 SRD	2 TD	2 SRD + 2 TD
Output waveform	Dual-channel positive and negative pulse generators with controlled amplitude and timing parameters	Dual-channel positive and negative pulse generators with fixed amplitude and controlled timing parameters	Four-channel positive and negative pulse generators with controlled amplitude and timing parameters

6.2 Integrated step recovery diode outputs

Specifications	PicoSource PG911 and PG914
Waveform	Positive-going (fast rise) and negative-going (fast fall) outputs returning to 0 V. Adjustable amplitude and timing parameters. Fast transition on leading edge.
Polarity	Positive and negative
Amplitude	
Range	<i>From 2.5 V to 6 V @ 50 Ω</i>
Resolution	Adjustable in a 100 mV coarse increment, 10 mV fine increment
Accuracy	$\pm 10\%$
Amplitude limit	Output amplitude can be limited to a user defined value from 2.5 V to 6 V to protect the device under test. Adjustable in a 100 mV coarse increment 10 mV fine increment.
Leading edge transition time, 10%–90%	<i>Smooth pulse performance: 60 ps or less.</i>
Overshoot	<i>Positive or negative-going, fast pulse performance: 40% or less.</i>
Pulse aberrations	<i>Positive or negative-going, smooth pulse performance: +20%, -10% or less for the first 2 ns following leading step transition. $\pm 7\%$ or less over the zone 2 ns to 10 ns following leading step transition. $\pm 2\%$ or less over the zone 10 ns to (pulse width-50 ns).</i>
Trailing edge transition time, 10%–90%	8 ns or less
Duty cycle limit	2.5 V to 4 V amplitude: 50% max. 4.01 V to 6 V amplitude: 20% max.
RMS jitter, trigger output-to-output	<i>3 ps typ, 3.5 ps max</i>
Deskew between outputs	
Range	Differential: 2 ns p-p typ
Resolution	Adjustable in a 20 ps coarse increment 1 ps fine increment
Delay, trigger output-to-output	(48 \pm 2) ns, fixed
Output connector	SMA(f)

6.3 Drive output with tunnel diode pulse heads

Specifications	PicoSource PG912 and PG914
Polarity	9040 TD Pulse Head: Positive-going (fast rise) output. 9041 TD Pulse Head: Negative going (fast fall) output. Fast transition on leading edge.
Amplitude	$(200 \pm 50) \text{ mV @ } 50 \Omega, \text{ fixed}$
DC baseline (pedestal)	80 mV or less @ 50 Ω
TD peak current	$(50 \pm 10) \text{ mA}$
Source impedance	$(50 \pm 2) \Omega$
Leading edge transition time, 10%–90%	40 ps or less
Pulse aberrations	$\pm 20\%$ or less for the first 2 ns following leading step transition. $\pm 7\%$ or less over the zone 2 ns to 10 ns following leading step transition. $\pm 3\%$ or less over the zone 10 ns to 15 ns following leading step transition. $\pm 2\%$ or less over the zone 15 ns to (pulse width–50 ns).
Trailing edge transition time, 10%–90%	8 ns or less
RMS jitter, trigger output-to-output	1.5 ps typ, 2 ps max
Deskew between outputs	
Range	Each output: 200 ps min, 300 ps typical
Resolution	Adjustable in a 20 ps coarse increment, 1 ps fine increment
Delay, trigger output-to-output	$(42 \pm 2) \text{ ns, fixed}$
Output connector	N, male. Pulse Heads come standard with one N(f)-SMA(m) adaptor.

6.4 Timing

Specifications	PicoSource PG911, PG912 and PG914		
Trigger source	Internal clock or external trigger		
Trigger mode	Continuous, or manual single-shot event		
Internal clock period			
Range	<i>1 μs to 1 s</i>		
Resolution	200 ns		
Accuracy	$\pm(10 \text{ ns} + 100 \text{ ppm of period})$		
Pulse width			
Range	<i>From 200 ns to 4 μs</i>		
Resolution	25 ns		
Accuracy	$\pm(50 \text{ ns} + 10\% \text{ of pulse width})$		
RMS Jitter	150 ppm of pulse width or less		
Delay, trigger output-to-output			
Tunnel diode outputs	N/A	(42 \pm 2) ns, fixed. With cable included	
Step recovery diode outputs	(48 \pm 2) ns, fixed	N/A	(48 \pm 2) ns, fixed

6.5 External trigger input

Specifications	PicoSource PG911, PG912 and PG914
Bandwidth	DC to 1 GHz
Sensitivity	<i>20 mV p-p DC to 100 MHz. Increasing linearly from 20 mV p-p at 100 MHz to 100 mV p-p at 1 GHz.</i>
Minimum pulse width	500 ps @ 100 mV p-p
RMS trigger jitter, external trigger input - to - trigger output	<i>2.5 ps typ, 3 ps max</i>
Trigger slope	Selectable rising or falling edge
Delay, external trigger input-to-trigger output	(4 ± 1) ns
Trigger level range	-1 V to 1 V
Trigger level resolution	1 mV
Rise time	TBD
Maximum safe trigger input voltage	16 dBm, or ±2 V (DC + AC pk)
Trigger nominal input impedance	(50 ± 0.5) Ω
Trigger coupling	DC-coupled
Trigger input connector	SMA(f)
Trigger holdoff	
Range	1 μs to 1 s
Resolution	200 ns: 1 μs to 1.3 ms, 500 ns: > 1.3 ms to 5 ms, 1 μs: > 5 ms to 10 ms, 2 μs: > 10 ms to 20 ms, 5 μs: > 20 ms to 40 ms, 10 μs: > 40 ms to 85 ms, 20 μs: > 85 ms to 170 ms, 50 μs: > 170 ms to 1 s

6.6 Trigger output

Specifications	PicoSource PG911, PG912 and PG914
Waveform	Fixed amplitude and timing parameters, trigger is leading edge
Polarity	Positive
Amplitude	<i>700 mV or more fixed @ 50 Ω</i>
DC baseline	± 100 mV or less
Pulse width	(500 ± 100) ns @ 50 Ω
Transition time	
10%–90%	<i>400 ps or less @ 50 Ω</i>
20%–80%	<i>300 ps or less @ 50 Ω</i>
Connector	SMA(f)

6.7 General

Specifications	PicoSource PG911, PG912 and PG914
Operating system	Microsoft Windows® XP (SP2), Windows Vista, Windows 7, Windows 8. (Not Windows RT). 32-bit and 64-bit versions.
Setup	The instrument can store and recall complete setups
File extension	Setup files: .set
Save/recall setups	The instrument can store complete setups in the memory and then recall them
Power requirements	
Power supply voltage	+5 V \pm 5%. Universal plug top AC to DC adaptor included
Power consumption	1.6 A, 8 W max
PC connection	USB 2.0 (FS). (USB 1.1 and USB 3.0 compatible.) 1.8 m USB 2.0 lead included
Physical characteristics	
Dimensions	Instrument: Width: 190 mm. Height: 40 mm. Depth: 180 mm TD Pulse Heads: Width: 80 mm. Height: 28 mm. Depth: 25 mm.
Net Weight	Instrument: 560 g max. TD Pulse Heads: 125 g. max
Environmental conditions	
Operating temperature range	Operating: +5 °C to +35 °C
Storage temperature range	-20 °C to +50 °C
Temperature range for stated specifications	+15 °C to +25 °C or T_{CAL} (temperature of calibration) \pm 5 °C
Operating humidity range	Up to 85 % relative humidity (non-condensing) at +35°C
Storage humidity range	Up to 95 % relative humidity (non-condensing)

7 Declaration of Conformity



Pico Technology
 James House, Marlborough Road.
 Colmworth Business Park.
 Eaton Socon, St Neots, Cambridgeshire.
 PE19 8YP United Kingdom.
 Tel: +44 1480 396395. Fax: +44 1480 396296

EC Declaration of Conformity

Pico Technology declares that the following products comply with the requirements of the specified Directives and Standards as listed below. Technical documentation required to demonstrate compliance to the standards is available for inspection by the relevant enforcement authorities. Products carry the CE mark.

Products covered by this declaration:

PicoSource PG911 Differential Fast Edge USB Pulse Generator
PicoSource PG912 Differential Fast Edge USB Pulse Generator
PicoSource PG914 Differential Fast Edge USB Pulse Generator

EU Directives covered by this declaration:

2004/108/EC - Electromagnetic Compatibility Directive.
 2006/95/EC - Low Voltage Directive.
 2012/19/EU - Waste Electrical and Electronic Equipment
 2011/65/EC - Restriction of the use of certain Hazardous Substances Directive.

The basis on which conformity is being declared:

EN61010-1:2010	Safety requirements for electrical equipment for measurement, control and laboratory use, general equipment requirements.
EN61010-2-030:2010	Particular requirements for testing and measuring circuits.
EN61326-1:2013	Electrical equipment for measurement, control and laboratory use - EMC requirements. Group 1, Class A equipment. (emissions section only)
EN61326-1:2013	Electrical equipment for measurement, control and laboratory use - EMC requirements. Basic Environment. (immunity section only)
EN61326-2-1:2013	Part 2-1: Test configurations, operational conditions and performance criteria for sensitive test and measurement equipment for unprotected applications.
CFR 47:2009	Code of Federal Regulations FCC: part 15 Subpart B – Frequency devices – unintentional Radiators. Radiated emissions standard. Class A emissions.

Analysis performed and recorded by Pico Technology Ltd. or its sub-contractors of the materials used in the manufacture of the above products.

Alan Tong
 Managing Director

Signed

Date

2/2/2016

Pico Technology Limited is an internationally registered trade mark
 Registered in England and Wales No. 2626181

Index

A

- Accessories 9
- Altitude 6

C

- Calibration 6
- Characteristics 43
- Connectors 10
- Crosstalk connections 15

D

- Disk space 2
- Display 22

E

- Environment 6
- External trigger input 19, 32

F

- Features 1
- Free-running operation 16, 18

G

- Grounding 4

H

- Horizontal scaling 38
- Humidity 6

I

- Intensified zone 23

K

- Kit contents 9

L

- License conditions 7

M

- Main menu 40
- Memory 2

- Microsoft Windows 2
- Models 1

O

- Operating system 2

P

- PC requirements 2
- PicoSource PG900 software 21
- Pollution degree 6
- Power connection 5
- Processor 2

R

- Ranges, maximum 4
- Repair 6

S

- Safety
 - introduction 2
 - symbols 3
- Scaling 36
- Servicing 6
- Setting up 12
- Single trigger 20
- Specifications 43

T

- TDR connections 13
- TDT connections 14
- Temperature 6
- Timing controls 30
- Trademarks 8
- Trigger output 35
- Tunnel diode pulse heads 28

U

- Undo/Redo 40
- USB connection 5

V

- Vertical scaling 36

W

- Warranty 8

United Kingdom headquarters

Pico Technology
James House
Colmworth Business Park
St. Neots
Cambridgeshire
PE19 8YP
United Kingdom

Tel: +44 (0) 1480 396 395
Fax: +44 (0) 1480 396 296

sales@picotech.com
support@picotech.com

www.picotech.com

United States headquarters

Pico Technology
320 N Glenwood Blvd
Tyler
Texas 75702
United States

Tel: +1 800 591 2796
Fax: +1 620 272 0981